




Separator Manual
High Speed Separator

MOPX 310TGT-24

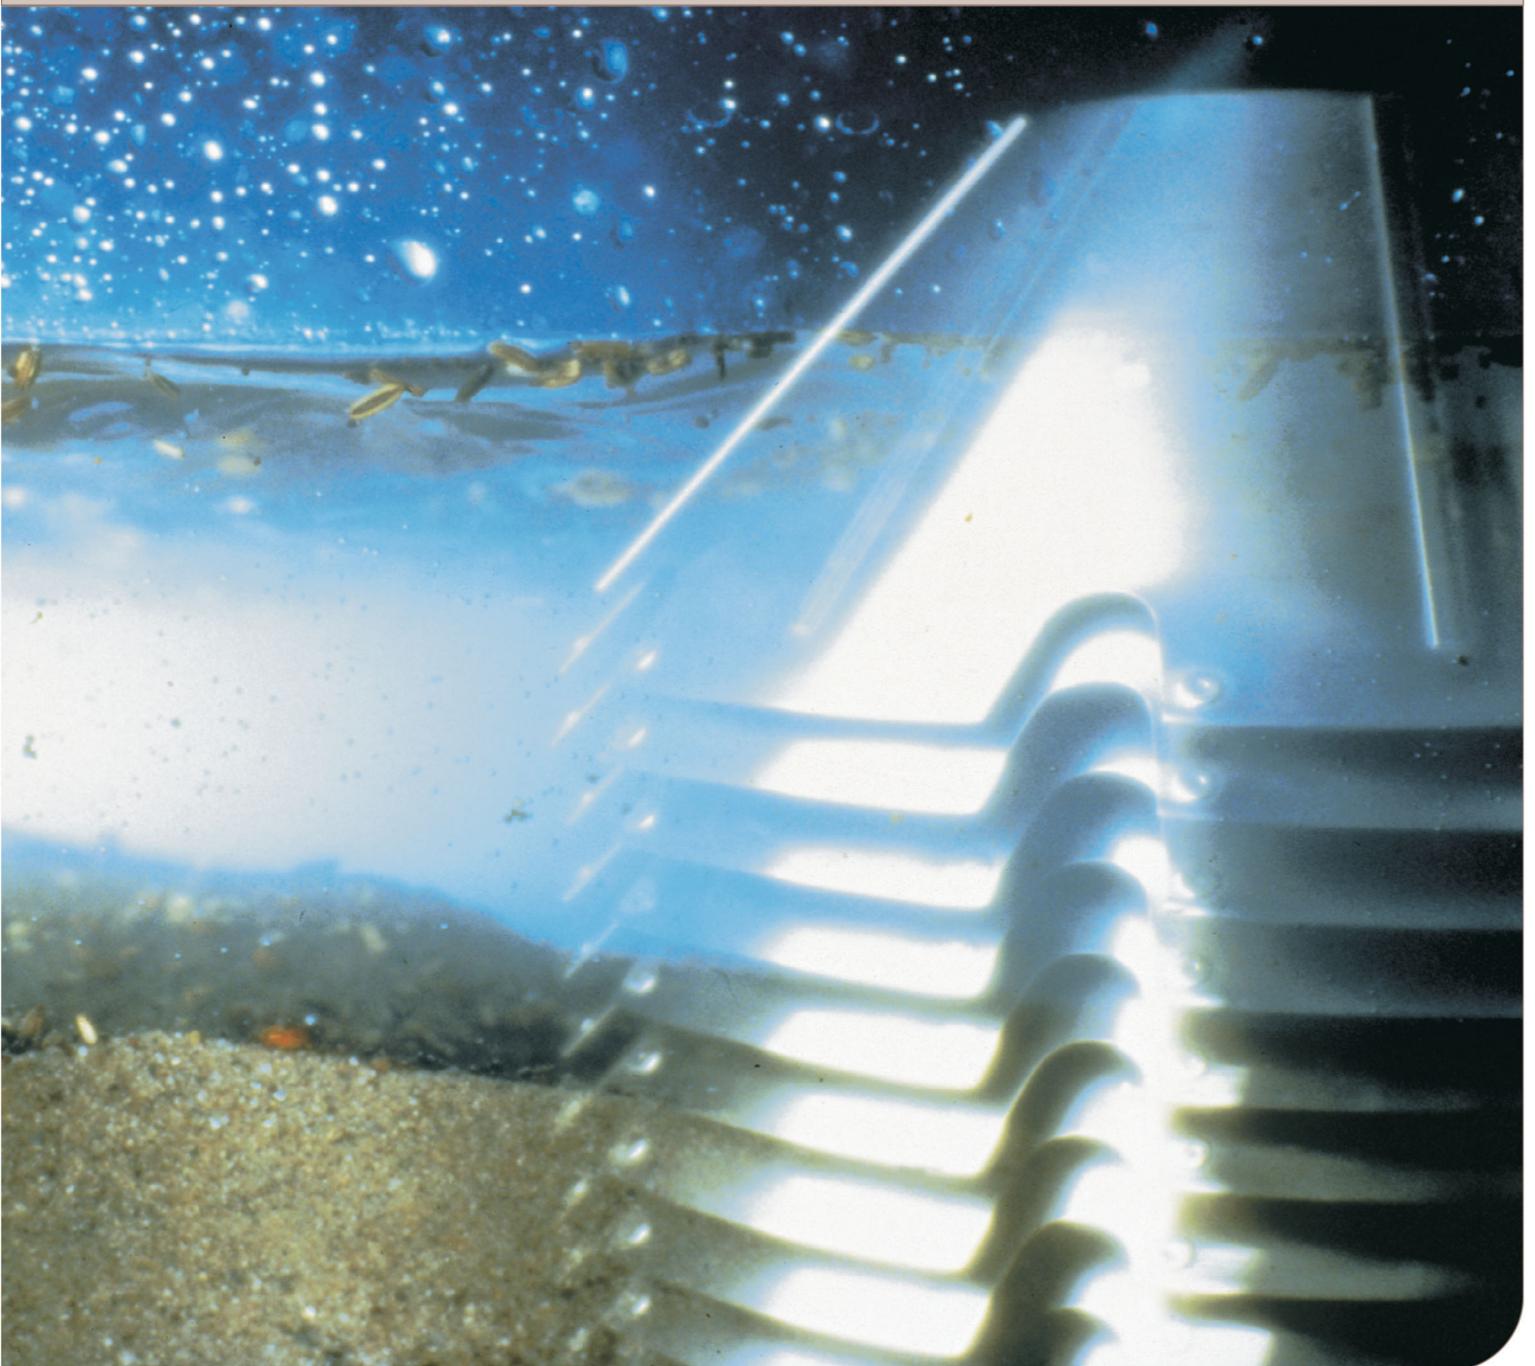

Published By:

Alfa Laval Tumba AB
SE-147 80 Tumba, Sweden

Telephone: +46 8 530 650 00

Telefax: +46 8 530 310 40

© Alfa Laval Tumba AB 11 January 2010

Original instructions

This publication or any part there of may not be reproduced or transmitted by any process or means without prior written permission of Alfa Laval Tumba AB.

Contents

1	Read this first	7
2	Safety Instructions	9
	2.1 Warning signs in text	14
	2.2 Environmental issues	15
	2.3 Requirements of personnel	16
3	Separator Basics	17
	3.1 Basic principles of separation	18
	3.2 Design and function	20
	3.3 Separating function	27
	3.4 Definitions	33
4	Operating Instructions	35
	4.1 Operating routine	36
5	Service Instructions	45
	5.1 Periodic maintenance	47
	5.2 Maintenance Logs	51
	5.3 Check points at Intermediate Service (IS)	58
	5.4 Check points at Major Service (MS)	76
	5.5 Lifting instructions	92
	5.6 Cleaning	93
	5.7 When changing oil	97
	5.8 Vibration	101
	5.9 Common maintenance directions	103
6	Dismantling/Assembly	107
	6.1 Introduction	108
	6.2 Inlet/outlet, frame hood (IS)	110
	6.3 Bowl hood and disc stack (IS)	114

6.4	Bowl body and operating mechanism (IS)	127
6.5	Operating water device (IS)	136
6.6	Vertical driving device (MS)	140
6.7	Horizontal driving device (MS)	152
6.8	Feed pump (MS) (option)	166
7	Trouble-tracing	175
7.1	Mechanical functions	176
7.2	Separating functions, purification and clarification	180
7.3	Separating functions, purification only	183
7.4	Separating functions, clarification only	185
7.5	Vibration switch (option)	186
8	Technical Reference	187
8.1	Product description	188
8.2	Technical data	189
8.3	Basic size drawing, without pump	191
8.4	Connection list, without pump	193
8.5	Basic size drawing, with pump	195
8.6	Connection list, with pump	197
8.7	Interface description	199
8.8	Water quality	203
8.9	Lubricants	204
8.10	Other drawings	215
8.11	Storage and installation	223
	Index	233



**Read and understand instruction manuals
and observe the warnings before installation,
operation, service and maintenance.**

**Not following the instructions can result in
serious accidents.**

In order to make the information clear only foreseeable conditions have been considered. No warnings are given, therefore, for situations arising from the unintended usage of the machine and its tools.



1 *Read this first*

This manual is designed for operators and service engineers working with the Alfa Laval separator MOPX 310TGT-24.

For information concerning the function of the separator, see chapter “[3 Separator Basics](#)” on [page 17](#) and chapter “[8 Technical Reference](#)” on [page 187](#).

If the separator has been delivered and installed by Alfa Laval as part of a processing system, this manual is a part of the system documentation. In this case, study carefully all the instructions in the system documentation.

In addition to this Separator Manual a *Spare Parts Catalogue*, SPC is supplied.

This Separator Manual consists of:

Safety Instructions

Pay special attention to the safety instructions for the separator. Not following the safety instructions can cause accidents resulting in damage to equipment and serious injury to personnel.

Separator Basics

Read this chapter if you are not familiar with this type of separator.

Operating Instructions

This chapter contains operating instructions for the separator only.



Separator Manual and Spare Parts Catalogue

S0068011

Service Instructions

This chapter gives instructions for daily checks, cleaning, oil changes, servicing and check points.

Dismantling / Assembly

This chapter contains step-by-step instructions for dismantling and assembly of the separator for service and repair.

Trouble-tracing

Refer to this chapter if the separator functions abnormally.

If the separator has been installed as part of a processing system always refer to the Trouble-tracing part of the system documentation first.

Technical Reference

This chapter contains technical data concerning the separator and drawings.

Index

This chapter contains an alphabetical list of subjects, with page references.

2 Safety Instructions



The centrifuge includes parts that rotate at high speed. This means that:

- Kinetic energy is high
- Great forces are generated
- Stopping time is long



Manufacturing tolerances are extremely fine. Rotating parts are carefully balanced to reduce undesired vibrations that can cause a breakdown. Material properties have been considered carefully during design to withstand stress and fatigue.

The separator is designed and supplied for a specific separation duty (type of liquid, rotational speed, temperature, density etc.) and must not be used for any other purpose.

Incorrect operation and maintenance can result in unbalance due to build-up of sediment, reduction of material strength, etc., that subsequently could lead to serious damage and/or injury.

The following basic safety instructions therefore apply:




- **Use the separator only for the purpose and parameter range specified by Alfa Laval.**
- **Strictly follow the instructions for installation, operation and maintenance.**
- **Ensure that personnel are competent and have sufficient knowledge of maintenance and operation, especially concerning emergency stopping procedures.**
- **Use only Alfa Laval genuine spare parts and the special tools supplied.**





Disintegration hazards

- When power cables are connected, always check direction of motor rotation. If incorrect, vital rotating parts could unscrew.
- If excessive vibration occurs, **stop** separator and **keep bowl filled** with liquid during rundown.
- Use the separator only for the purpose and parameter range specified by Alfa Laval.
- Check that the gear ratio is correct for power frequency used. If incorrect, subsequent overspeed may result in a serious break down.
- Welding or heating of parts that rotate can seriously affect material strength.
- Wear on the large lock ring thread must not exceed safety limit. ϕ -mark on lock ring must not pass opposite ϕ -mark by more than specified distance.
- Inspect regularly for **corrosion** and **erosion** damage. Inspect frequently if process liquid is corrosive or erosive.

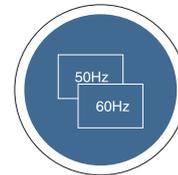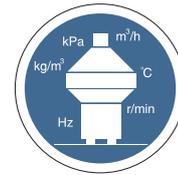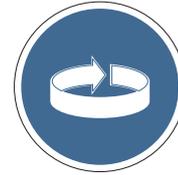

S01512F1

S01512N1

S01512P1

S01512L1

S0151241

S01512G1

S01512H1



Entrapment hazards

- Make sure that rotating parts have come to a **complete standstill** before starting **any** dismantling work.
- To avoid accidental start, switch off and lock power supply before starting **any** dismantling work.

Assemble the machine **completely** before start. **All** covers and guards must be in place.



S0151201

S0151261



Electrical hazard

- Follow local regulations for electrical installation and earthing (grounding).
- To avoid accidental start, switch off and lock power supply before starting **any** dismantling work.



S0151271



Crush hazards

- Use correct lifting tools and follow lifting instructions.

Do **not** work under a hanging load.



S01512M1

S01512Y1



Noise hazards

- Use ear protection in noisy environments.



S0151281



Burn hazards

- Lubrication oil, machine parts and various machine surfaces can be hot and cause burns. Wear protective gloves.



S01512A1



Skin irritation hazards

- When using chemical cleaning agents, make sure you follow the general rules and suppliers recommendation regarding ventilation, personnel protection etc.
- Use of lubricants in various situations.



S01512D1



Cut hazards

- Sharp edges, especially on bowl discs and threads can cause cuts. Wear protective gloves.



S01512B1



Flying objects

- Risk for accidental release of snap rings and springs when dismantling and assembly. Wear safety goggles.




S01512C1



Health hazard

- Risk for unhealthy dust when handling friction blocks/pads. Use a dust mask to make sure not to inhale any dust.

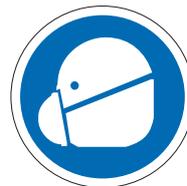

S01512V1



2.1 Warning signs in text

Pay attention to the safety instructions in this manual. Below are definitions of the three grades of warning signs used in the text where there is a risk for injury to personnel.



DANGER

Type of hazard

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Type of hazard

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Type of hazard

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTE

NOTE indicates a potentially hazardous situation which, if not avoided, may result in property damage.



2.2 Environmental issues

Unpacking

Packing material consists of wood, plastics, cardboard boxes and in some cases metal straps.

Wood and cardboard boxes can be reused, recycled or used for energy recovery.

Plastics should be recycled or burnt at a licensed waste incineration plant.

Metal straps should be sent for material recycling.

Maintenance

During maintenance oil and wear parts in the machine are replaced.

Oil must be taken care of in agreement with local regulations.

Rubber and plastics should be burnt at a licensed waste incineration plant. If not available they should be disposed to a suitable licensed land fill site.

Bearings and other metal parts should be sent to a licensed handler for material recycling.

Seal rings and friction linings should be disposed to a licensed land fill site. Check your local regulations.

Worn out or defected electronic parts should be sent to a licensed handler for material recycling.



2.3 Requirements of personnel

Only **skilled** or **instructed** persons are allowed to operate the machine, e.g. operating and maintenance staff.

- **Skilled person:** A person with technical knowledge or sufficient experience to enable him or her to perceive risks and to avoid hazards which electricity/mechanics can create.
- **Instructed person:** A person adequately advised or supervised by a skilled person to enable him or her to perceive risks and to avoid hazards which electricity/mechanics can create.

In some cases special skilled personnel may need to be hired, like electricians and others. In some of these cases the personnel has to be certified according to local regulations with experience of similar types of work.

3 *Separator Basics*


Contents

3.1 Basic principles of separation	16
3.2 Design and function	18
3.2.1 Overview	18
3.2.2 Mechanical power transmission	19
3.2.3 Brake	19
3.2.4 Feed inlet pump (option)	20
3.2.5 Paring disc pump	20
3.2.6 Sensors and indicators	20
3.2.7 Process main parts	22
3.3 Separating function	25
3.3.1 Purifier bowl	25
3.3.2 Clarifier bowl	27
3.3.3 Normal separation	28
3.3.4 Sludge discharge cycle	29
3.4 Definitions	31

3.1 Basic principles of separation

The purpose of separation can be:

- to free a liquid of solid particles,
- to separate two mutually insoluble liquids with different densities while removing any solids presents at the same time,
- to separate and concentrate solid particles from a liquid.

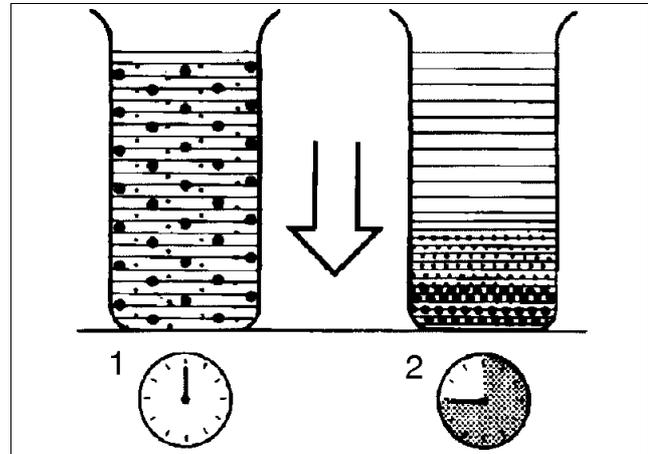

Sedimentation by gravity


Separation by gravity

A liquid mixture in a stationary bowl will clear slowly as the heavy particles in the liquid mixture sink to the bottom under the influence of gravity.

A lighter liquid rises while a heavier liquid and solids sink.

Continuous separation and sedimentation can be achieved in a settling tank having outlets arranged according to the difference in density of the liquids.

Heavier particles in the liquid mixture will settle and form a sediment layer on the tank bottom.

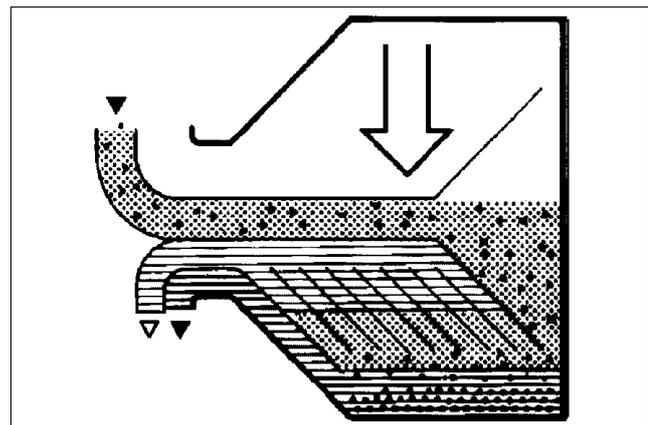


Sedimentation in a settling tank, with outlets making it possible to separate the lighter liquid parts from the heavier

Centrifugal separation

In a rapidly rotating bowl, the force of gravity is replaced by centrifugal force, which can be thousands of times greater.

Separation and sedimentation is continuous and happens very quickly.

The centrifugal force in the separator bowl can achieve in a few seconds what takes many hours in a tank under influence of gravity.

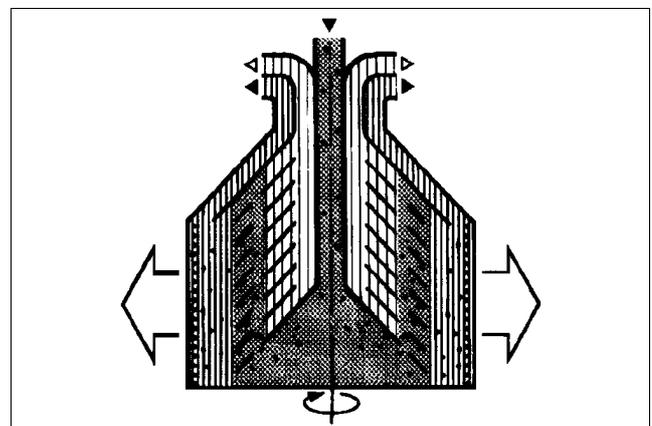


The centrifugal solution

Separating temperatures


For some types of process liquids (e.g. mineral oils) a high separating temperature will normally increase the separation capacity. The temperature influences oil viscosity and density and should be kept constant throughout the separation.

Viscosity

Low viscosity facilitates separation. Viscosity can be reduced by heating.

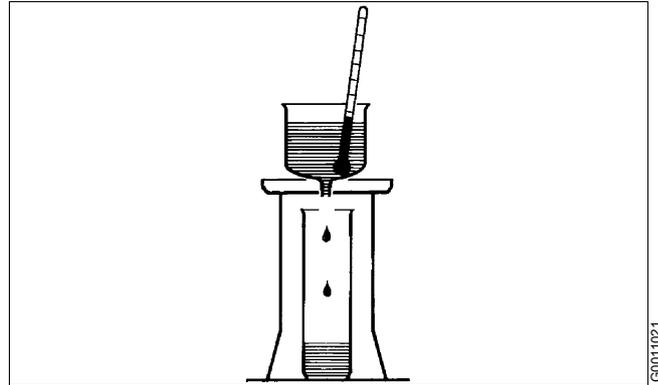


High viscosity (with low temperature)

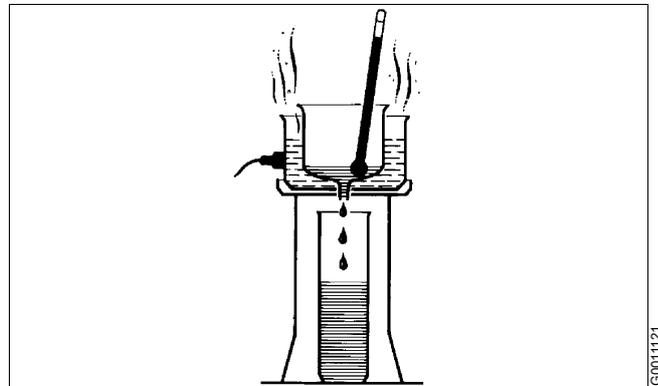


Low viscosity (with high temperature)

Density difference

The greater the density difference between the two liquids, the easier the separation. The density difference can be increased by heating.

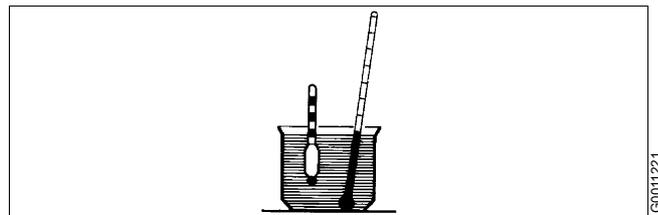

High density (with low temperature)

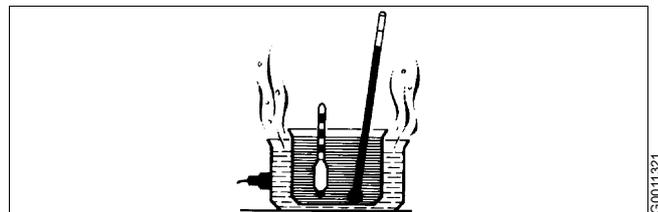

Low density (with high temperature)

3.2 Design and function

3.2.1 Overview

The separator comprises a processing part and a driving part. It is driven by an electric motor (10).

Mechanically, the separator machine frame is composed of a bottom part, a top part and a frame hood. The motor is flanged to the frame as shown in the illustration. The frame feet (5) are vibration damping.

The bottom part of the separator contains the horizontal driving device (6), driving shaft with couplings (8, 9), a worm gear (7) and a vertical spindle (3).


The bottom part also contains an oil bath for the worm gear, a brake and a revolution counter.

The frame top part and the frame hood contain the processing parts of the separator, the inlet, outlets and piping (1).

The liquid is cleaned in the separator bowl (2). This is fitted on the upper part of the vertical spindle and rotates at high speed in the space formed by the frame top part and frame hood. The bowl also contains the discharge mechanism which empties the sludge from the bowl.

The main inlets and outlets are shown with connection numbers in the illustration. These numbers correspond with the numbers used in the connection list and the basic size drawing which can be found in chapter “8 Technical Reference” on page 187.

As option the separator can be equipped with a feed inlet pump (4).

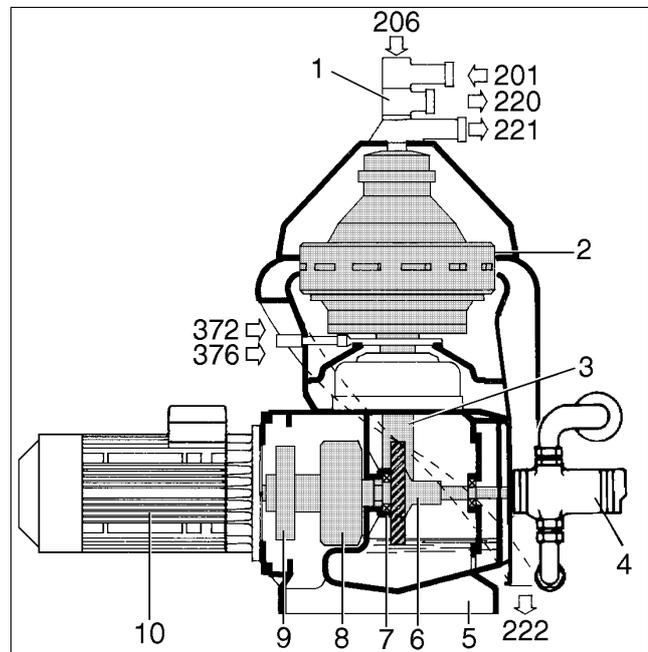

1. Inlet and outlet device
2. Bowl
3. Vertical driving device with bowl spindle
4. Feed inlet pump (option)
5. Frame feet
6. Horizontal driving device
7. Worm gear
8. Friction coupling
9. Elastic coupling
10. Electric motor

201. Unseparated oil inlet
206. Sealing/displacement water inlet
220. Clean oil outlet
221. Water outlet
222. Sludge discharge outlet
372. Bowl opening water inlet
376. Bowl closing and make-up water inlet

3.2.2 Mechanical power transmission


The main parts of the power transmission between motor and bowl are illustrated in the figure.

The friction coupling ensures a gentle start and acceleration and at the same time prevents overloading of the worm gear and motor.

The worm gear has a ratio which increase the bowl speed several times compared with the motor speed. For correct ratio see chapter “8.2 Technical data” on page 189.

To reduce bearing wear and the transmission of bowl vibrations to the frame and foundation, the top bearing of the bowl spindle is mounted in a spring casing.

The worm wheel runs in a lubricating oil bath. The bearings on the spindle and the worm wheel shaft are lubricated by the oil splash produced by the rotating worm wheel.

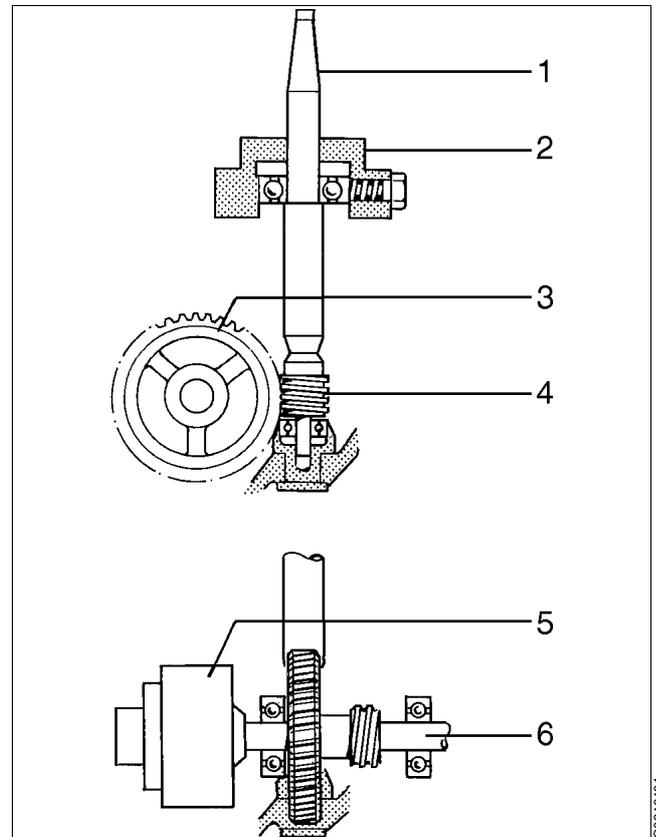


1. Bowl spindle
2. Top bearing and spring casing
3. Worm wheel
4. Worm
5. Friction coupling
6. Worm wheel shaft

3.2.3 Brake

The separator is equipped with a brake to be used when stopping the separator. The use of the brake reduces the retardation time of the bowl and critical speeds will therefore be quickly passed.


The brake friction pad acts on the outside of the coupling pulley.

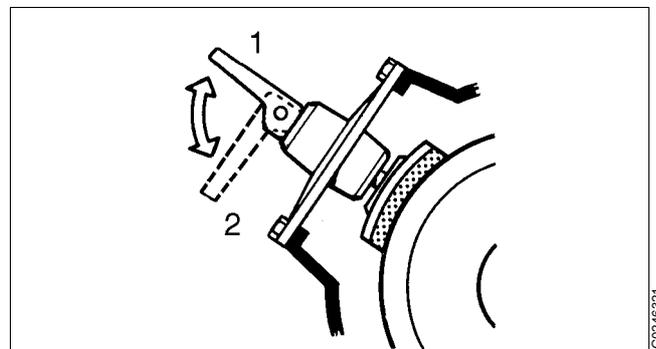

Applying (1) and releasing (2) of brake

3.2.4 Feed inlet pump (option)


The separator can be equipped with a built-on feed inlet pump of gear type. The pump will be attached to and driven by the horizontal worm wheel shaft.

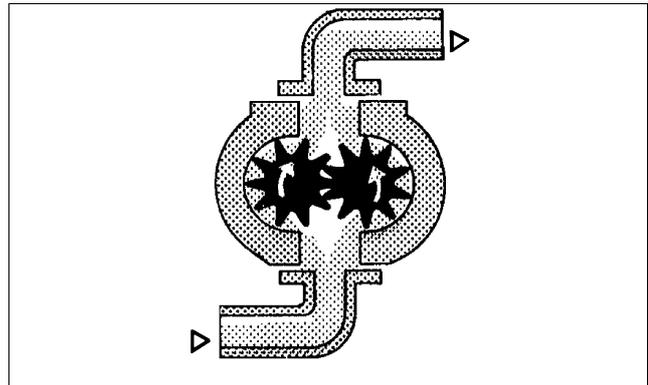

Feed inlet pump of gear type (option)

3.2.5 Paring disc pump

The paring disc serves as a stationary discharge pump mounted in a chamber in the rotating bowl neck. The paring disc dips radial into the rotating liquid which then is pared out.

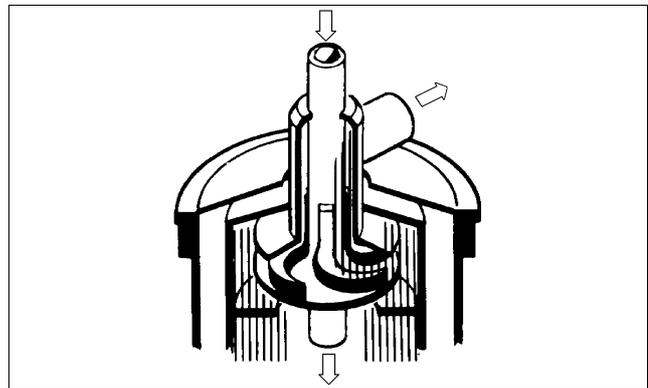

Paring disc pump


3.2.6 Sensors and indicators

Back pressure gauge (1)

Correct limit for the back pressure in the clean oil outlet can be found in chapter "4.1.5 Running" on page 42 or preferably in the System Manual, if any.

Increasing back pressure in the clean oil outlet can be caused by:


- restriction in the outlet piping, e.g. a buckled or bent pipe,
- increased throughput,
- increased viscosity, decreased separating temperature.

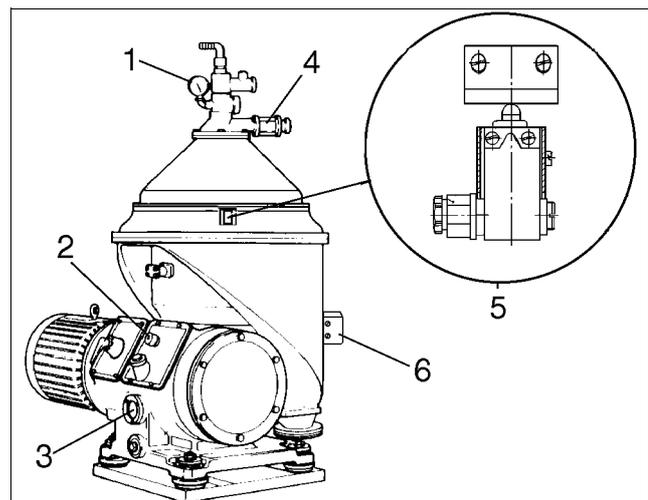

1. Back pressure gauge
2. Revolution counter
3. Oil sight glass
4. Sight glass for separated water outlet
5. Cover interlocking switch (option)
6. Vibration switch (option)

Revolution counter (2)

A revolution counter, which should turn clockwise during operation, indicates the speed of the separator and is driven from the worm wheel shaft. The correct speed is needed to achieve the best separating results and for reasons of safety. The number of revolutions on the revolution counter for correct speed is shown in chapter “[8 Technical Reference](#)” on page 187. Refer to name plate for speed particulars.

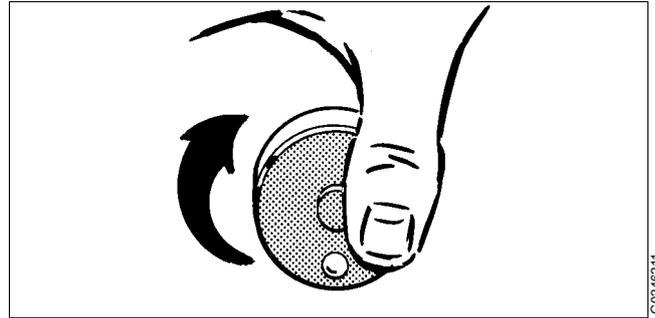

The revolution counter should turn clockwise

Oil sight glass (3)

The sight glass shows the oil level in the worm gear housing.

Sight glass for separated water outlet (4)

The sight glass shows the flow of the separated water and if any oil is escaping through the water outlet. If so, see chapter “[7 Trouble-tracing](#)” on page 175.


Cover interlocking switch (5, option)

When required, the cover interlocking switch should be connected to the starter equipment so that starting of the motor is prevented when the separator hood is not (completely) closed.

Vibration switch (6, option)

The vibration switch, properly adjusted, trips on a relative increase in vibration.

The vibration switch is sensitive to vibration in a direction perpendicular to its base. It contains a vibration detecting mechanism that actuates a snap-action switch when the selected level of vibration is exceeded. After the switch has tripped it must be reset manually by pressing the button on the switch.

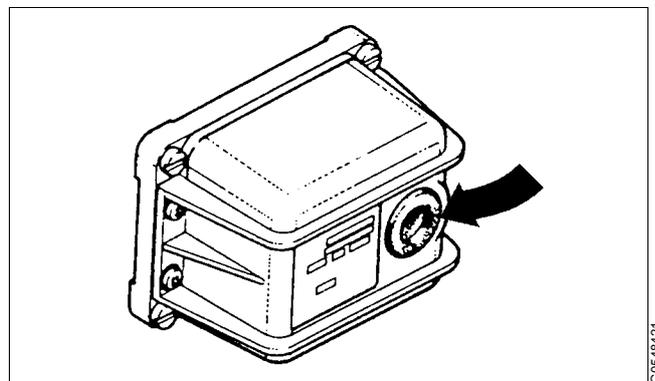


Reset push button on vibration switch

3.2.7 Process main parts

1. Upper paring camber
2. Gravity/clarifier disc
3. Small lock ring (with paring chamber cover)
4. Oil paring chamber
5. Level ring
6. Distributor
7. Top disc
8. Bowl hood
9. Bowl disc stack
10. Large lock ring
11. Sludge port *
12. Sludge space
13. Bowl body
14. Sliding bowl bottom *
15. Operating slide *
16. Nozzle *
17. Nozzle *
18. Upper paring disc (water)
19. Oil paring disc
20. Inlet pipe
21. Distributing cone
22. Bowl hood seal ring *
23. Drain valve plug *
24. Opening chamber *
25. Spring *
26. Spring support *
27. Control paring disc *

201. Unseparated oil inlet
206. Sealing/displacement water inlet
220. Clean oil outlet
221. Water outlet
372. Opening water inlet *
376. Closing and make-up water inlet *

* Parts effecting a sludge discharge

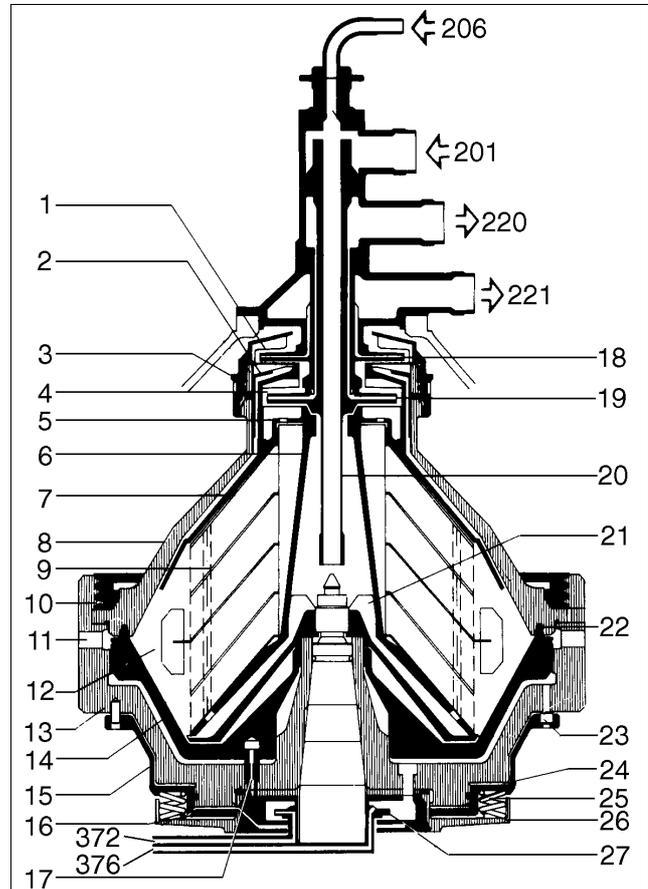

Separator bowl, feed and discharge assembly, control paring disc and liquid flow

Inlet and outlet device

The inlet and outlet device consists of the following parts:

- The inlet (201). This comprises the pipe bend and the long inlet pipe (20) which extends into the middle of the bowl.
- The outlets (220, 221). These comprise the discharge cover and the paring discs (18, 19) which pump the separated oil and water out of the bowl. Each paring disc is located in a paring chamber (1, 4) in the top of the bowl.

The inlet and outlet device is held together by the inlet pipe threading which is fixed to the oil paring disc. O-rings and a seal ring seal the connections between the parts.

The outlet connection housing is fastened to the separator frame hood. Height adjusting rings determine the height position of the paring discs in the paring chambers.

Separator bowl

The separator bowl with its sludge discharge mechanism is built-up as follows:

The bowl body (13) and bowl hood (8) are held together by the large lock ring (10). Inside the bowl are the distributing cone (21), the distributor (6) and the disc stack (9). The disc stack is kept compressed by the hood. The sliding bowl bottom (14) forms an internal separate bottom in the bowl.

The bowl top is covered by the paring chamber cover (3). The space between this cover and the top disc (7) is the upper paring chamber with the upper paring disc which pumps the separated water out of the bowl. The oil paring chamber with its paring disc is located inside the upper part of the top disc. From this space the cleaned oil is pumped out of the bowl.

The sludge space (12) is the space between the sliding bowl bottom and the bowl hood in the bowl periphery. It is kept closed by the sliding bowl bottom which seals against a seal ring (22) in the bowl hood.

Sludge discharge mechanism

At intervals decided by the operator, the sliding bowl bottom drops to empty the bowl of sludge.

The sludge discharge mechanism, which controls the sliding bowl bottom, comprises an operating slide (15) and an operating water device. Passive parts are the nozzles (16, 17) and drain valve plugs (23). The operating water device on the underside of the bowl supplies opening (372) and closing/make-up (376) water to the discharge mechanism via the control paring disc (27).

3.3 Separating function


3.3.1 Purifier bowl

Characteristic parts

The illustration shows the characteristic part of the purifier bowl, the gravity disc. The disc should be chosen according to directions in chapter "4.1.2 Selection of gravity disc" on page 37.

The gravity disc determines the interface position in a purifier bowl (see below).

A purifier bowl has two liquid outlets, 220 (oil) and 221 (water).

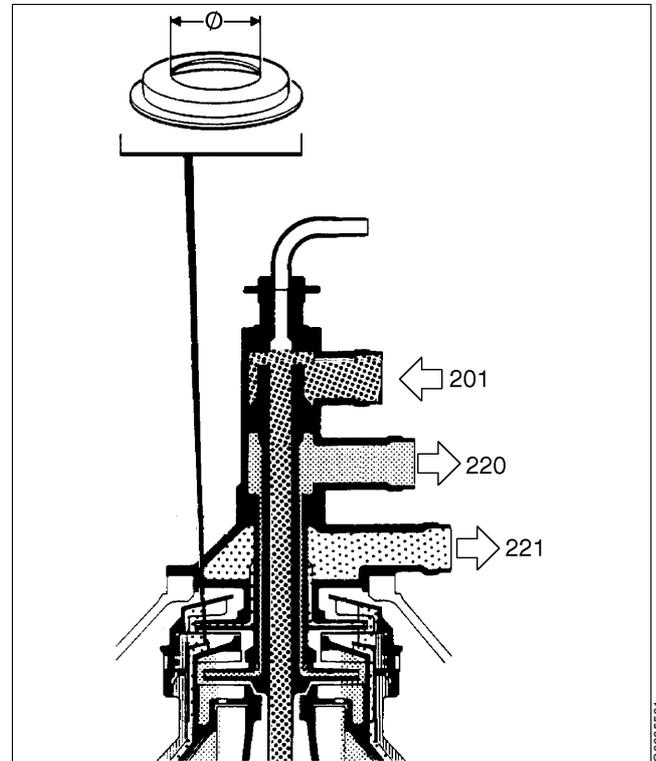


Purifier bowl

Position of interface

An interface (1) must be formed between the oil and water in the bowl. In order to achieve optimum separation of the oil, the interface must be maintained in the correct position, which is between the disc stack and the outer edge of the top disc. If the interface moves outside the outer edge of the top disc the water seal will break and oil will be discharged with the water. An interface positioned inside the disc stack will cause bad separation results.

The position of the interface is adjusted by altering the pressure balance of the liquid phases oil and water inside the separator. That is done by exchanging the gravity disc. For this purpose a number of gravity discs with various hole diameters are delivered with the separator.

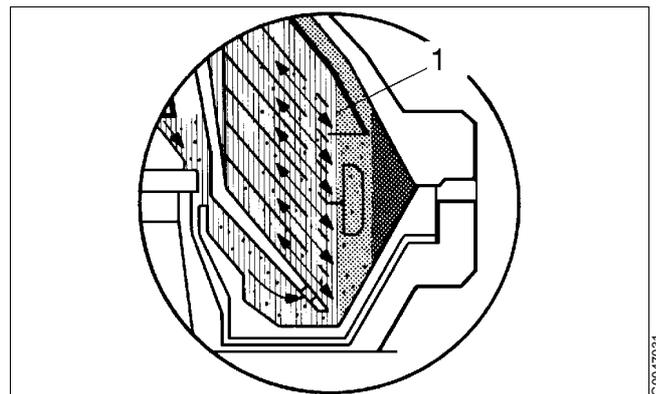


Interface position (1)

A. Correct interface position

B. Wrong interface position - broken water seal

C. Wrong interface position - bad separation

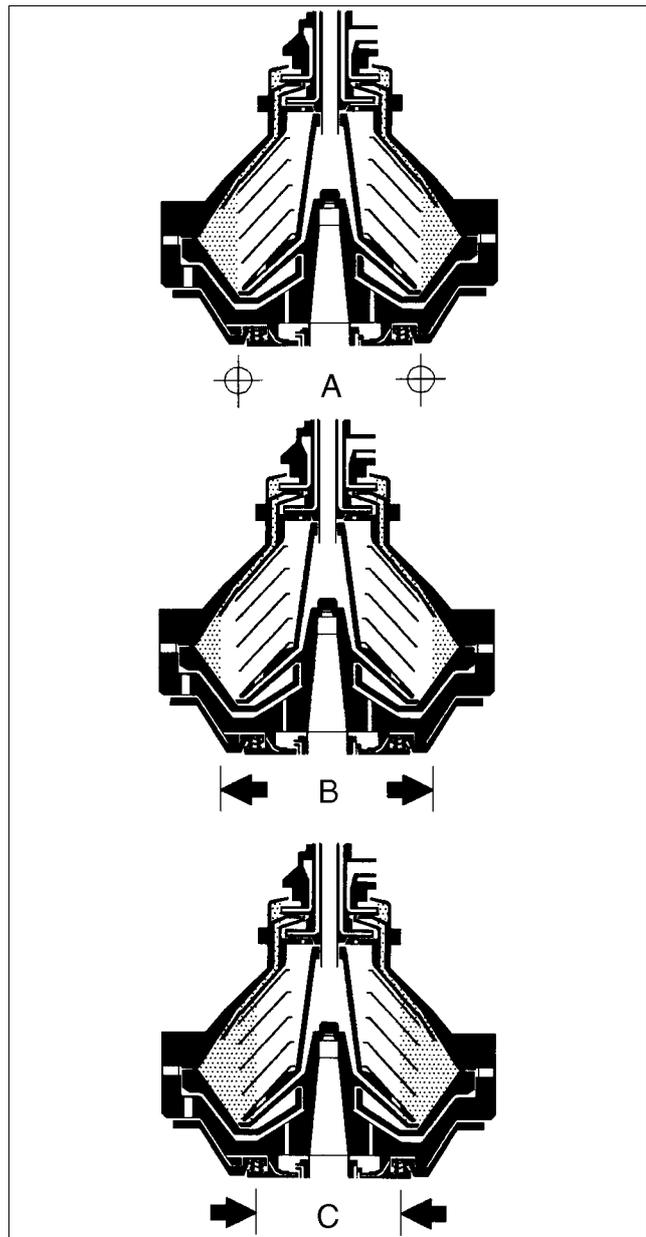

G0011721


Factors influencing the interface position

1. Oil viscosity, density and throughput

Oil with high density and/or high viscosity, as well as high throughput, will position the oil/water interface closer to the bowl periphery than for oil with low properties.

A. High viscosity/density/throughput

B. Low viscosity/density/throughput

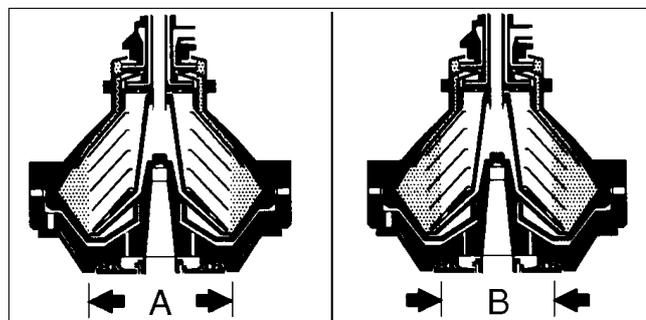


G0011821

2. Gravity disc

To compensate for the above factors the interface is adjusted to a correct position by altering the outlet for the water, i.e. exchanging the gravity disc. Changing to a gravity disc with larger hole diameter will move the interface towards the bowl periphery whereas a disc with smaller hole diameter will move the interface closer to the bowl centre.


- A. Gravity disc with large hole diameter
- B. Gravity disc with small hole diameter

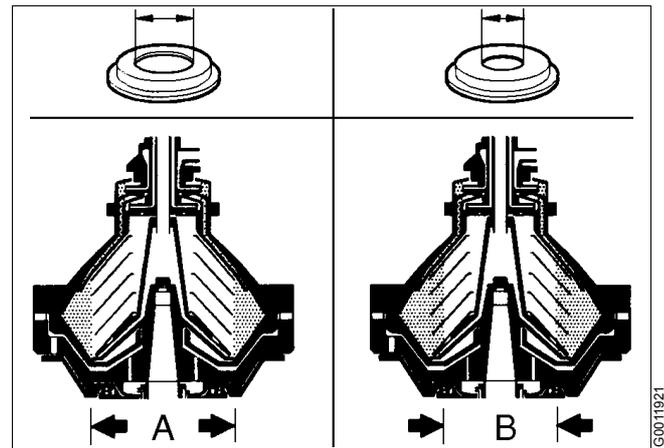

3. Excessive back pressure

Excessively high back pressure in the oil outlet prevents the oil from being pumped out. The inner oil level will then move towards centre of the bowl and, at the same time, push the oil/water interface outwards towards the bowl periphery. The effect is a wrong interface position, which may cause broken water seal.

- A. Excessive back pressure
- B. Normal back pressure

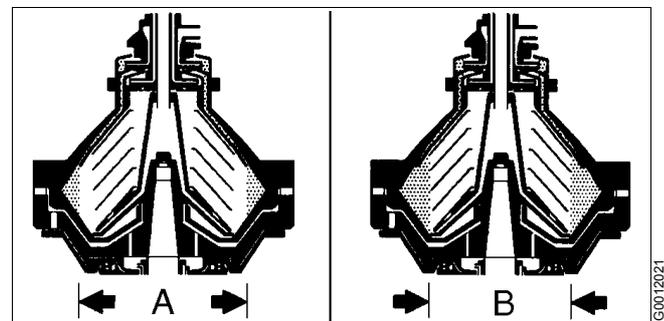


3.3.2 Clarifier bowl

Characteristic parts

The illustration shows the characteristic part of the clarifier bowl. In clarification the gravity disc is replaced by a so called clarifier disc, i.e. a disc with smallest possible hole diameter (Ø) which seals off the water outlet. No liquid seal is needed when clarifying.

The clarifier bowl has only one liquid outlet, 220 (oil).

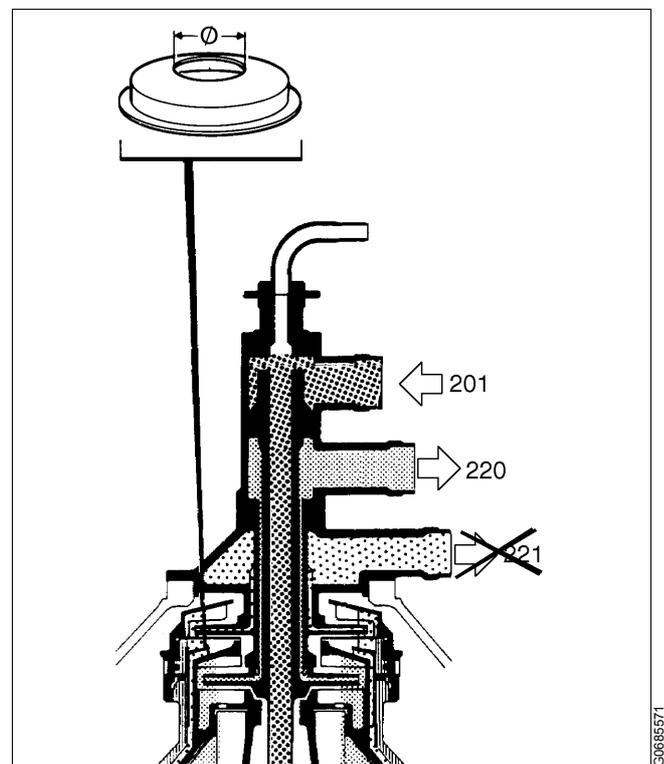

Clarifier bowl


3.3.3 Normal separation

Unseparated oil is fed into the bowl through the inlet pipe (11) and is pumped via the distributor (4) and distributing cone (12) towards the periphery of the bowl.

When the oil reaches slots of the distributor, it will rise through the channels formed by the disc stack (6) where it is evenly distributed.

The oil is continuously cleaned as it travels towards the centre of the bowl. When the cleaned oil leaves the disc stack it rises upwards, flows over the level ring (3) and enters the oil paring chamber (2). From here it is pumped by the non-rotating oil paring disc (10) and leaves the bowl through outlet (220). Separated water, sludge and solid particles, which are heavier than the oil, are forced towards the periphery of the bowl and collected in the sludge space (7). The bowl content is discharged at selected intervals through the sludge ports (8).

At purification the separated water rises along the outside of the top disc (5) over gravity disc (1) and is then pumped out by the non-rotating upper paring disc (9). The water then leaves the bowl through water outlet (221).

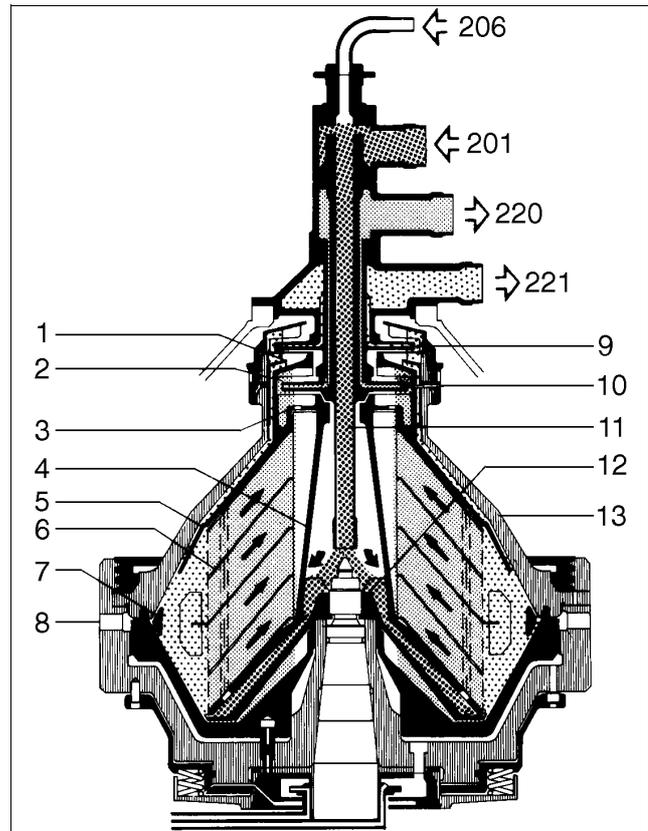

Separating principle

1. Gravity/clarifier disc
 2. Oil paring chamber
 3. Level ring
 4. Distributor
 5. Top disc
 6. Bowl disc stack
 7. Sludge space
 8. Sludge port
 9. Upper paring disc (water)
 10. Oil paring disc
 11. Inlet pipe
 12. Distributing cone
 13. Bowl hood
-
201. Unseparated oil inlet
 206. Sealing/displacement water inlet
 220. Clean oil outlet
 221. Water outlet (only at purification)

3.3.4 Sludge discharge cycle

Sludge discharge interval

The MOPX-separator is a total-discharge type separator which completely discharges sludge and water from the bowl.

The appropriate time to be chosen between sludge discharges depends on local conditions because many factors influence accumulation and hardening of sludge between discharges. However, keep the discharge interval within the min. and max. time stated in [“8.2 Technical data” on page 189](#).

Long intervals between sludge discharges can cause accumulation and compaction of sludge. The sludge may then break-up unevenly on discharge and cause the bowl to become unbalanced. If such unbalance is too large, there is risk of serious separator damage and injury to personnel.

Closed bowl (normal operation)

The sliding bowl bottom (2) is pressed upwards by force of the closing water in the closing water space (6) under the sliding bowl bottom which is greater than the force of the process liquid above the sliding bowl bottom.

The operating slide (3) is pressed upwards by the springs (9) and the valve plugs (8) then cover the drain channels (7).

Bowl opens for discharge

Before starting the sludge discharge cycle the oil feed should be cut off.

At purification, displacement water (206) should be added to the bowl before the discharge to avoid oil losses. The oil/water interface (h_1) moves towards the centre of the bowl (h_2).


The opening water (372), which is supplied into the space above the operating slide (3), overcomes the force from the springs (9) and the operating slide is pressed downwards. The drain channels (7) open and the closing water is drained. This allows the force on the underside of the sliding bowl bottom (2) to become lower than the force on the upper side. The sliding bowl bottom moves downwards and the bowl opens for a discharge through the sludge ports (1).

Bowl closes after discharge

The opening water supply is closed and the water in the opening chamber (10) is drained through nozzle (5). The springs (9) move the operating slide upwards and the drain channels (7) are closed by the drain valve plugs (8). The closing water (376) is supplied via the nozzle (4) to the closing water space (6) which presses the sliding bowl bottom (2) upwards. The bowl closes and the sludge discharge cycle is complete.

At purification, add sealing water (206) to the bowl before opening the oil supply to the separator.

Bowl closing water should be supplied during the sludge discharge sequence and at intervals during the separation sequence to replace evaporated water.

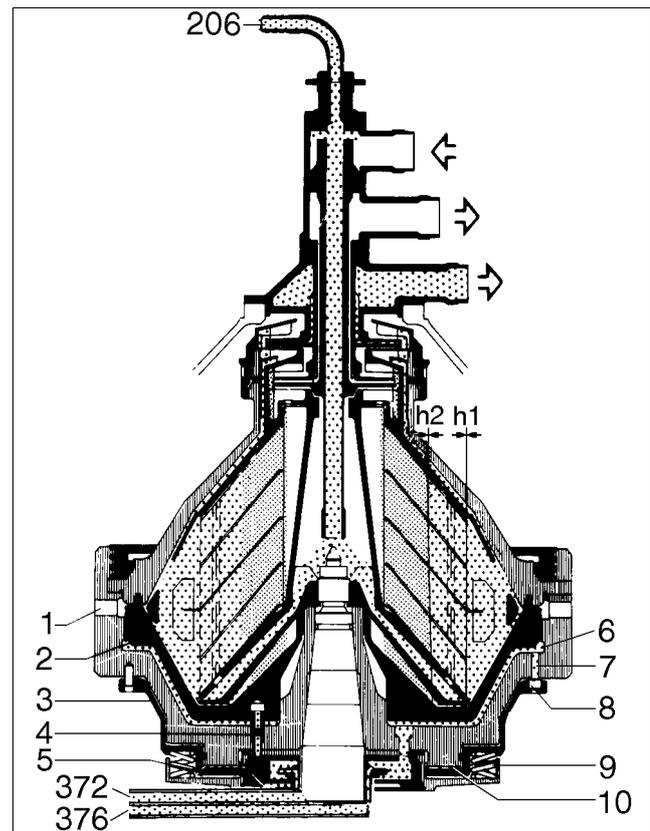

Separator bowl, feed and discharge assembly, control paring disc and liquid flow

1. Sludge port
2. Sliding bowl bottom *
3. Operating slide *
4. Nozzle *
5. Nozzle *
6. Closing water space
7. Drain channel
8. Drain valve plug
9. Spring *
10. Opening chamber *

206. Sealing/displacement water inlet
372. Opening water inlet *
376. Closing and make-up water inlet *

* Parts effecting a sludge discharge

3.4 Definitions

Back pressure	Pressure in the separator outlet.
Clarification	Liquid/solids separation with the intention of separating particles, normally solids, from a liquid (oil) having a lower density than the particles.
Clarifier disc	An optional disc, which replaces the gravity disc in the separator bowl, in the case of clarifier operation. The disc seals off the heavy phase (water) outlet in the bowl, thus no liquid seal exists.
Counter pressure	See Back pressure.
Density	Mass per volume unit. Expressed in kg/m ³ at a specified temperature, normally at +15 °C.
Gravity disc	Disc in the bowl hood for positioning the interface between the disc stack and the outer edge of the top disc. This disc is only used in purifier mode.
Interface	Boundary layer between the heavy phase (water) and the light phase (oil) in a separator bowl.
Intermediate Service (IS)	Overhaul of separator bowl, inlet/outlet and operating water device. Renewal of seals in bowl inlet/outlet and operating water device.
Major Service (MS)	Overhaul of the complete separator, including bottom part (and activities included in an Intermediate Service, if any). Renewal of seals and bearings in bottom part.
Purification	Liquid/liquid/solids separation with the intention of separating two intermixed and mutually insoluble liquid phases of different densities. Solids having a higher density than the liquids can be removed at the same time. The lighter liquid phase (oil), which is the major part of the mixture, shall be purified as far as possible.
Sediment (sludge)	Solids separated from a liquid.
Sludge discharge	Ejection of sludge from the separator bowl.
Throughput	The feed of process liquid to the separator per time unit. Expressed in m ³ /h or litres/h.
Viscosity	Fluid resistance against movement. Normally expressed in centistoke (cSt = mm ² /s), at a specified temperature.
Water seal	Water in the solids space of the separator bowl to prevent the light phase (oil) from leaving the bowl through the heavy phase (water) outlet, in purifier mode.

4 *Operating Instructions*

Contents

4.1	Operating routine	36
4.1.1	Before first start	36
4.1.2	Selection of gravity disc	37
4.1.3	Ready for start	40
4.1.4	Start	41
4.1.5	Running	42
4.1.6	Normal stop	43
4.1.7	Safety stop	44

4.1 Operating routine

These operating instructions are related only to the separator itself. If the separator is a part of a system or module follow also the instructions for the system.


4.1.1 Before first start

Technical demands for connections and logical limitations for the separator is described in the chapter [“8 Technical Reference” on page 187](#) in the documents:


1. Technical data
2. Basic size drawing
3. Connection list
4. Interface description
5. Foundation drawing.

Before first start the following check points shall be checked:

- Ensure the machine is installed correctly and that feed-lines and drains have been flushed clean.
- Fill oil in the gear housing. Fill up exactly to the middle of the sightglass. Use the correct grade of oil. The separator is delivered without oil in the worm gear housing. For grade and quality, see [“8.9 Lubricants” on page 204](#).
- Make sure the direction of rotation of the motor corresponds to the sign on the motor, see [“8.10.5 Machine plates and safety labels” on page 220](#).

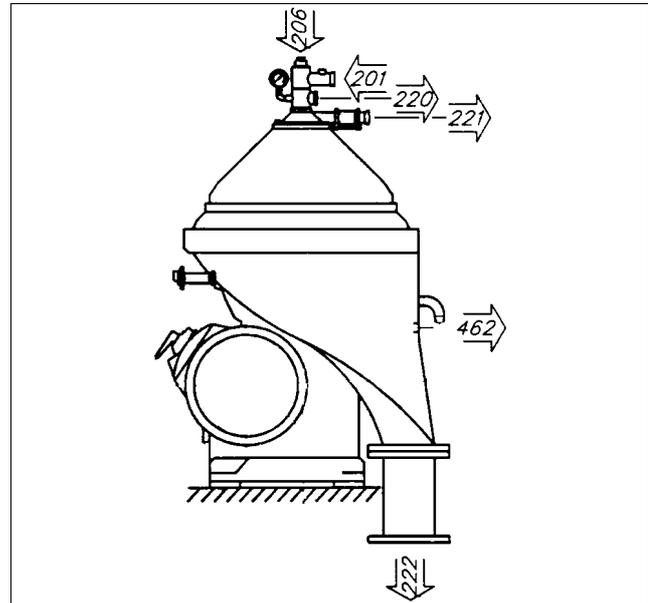

Explanations of the separator connections are given in [“8.4 Connection list, without pump” on page 193](#) and in [“8.6 Connection list, with pump” on](#)

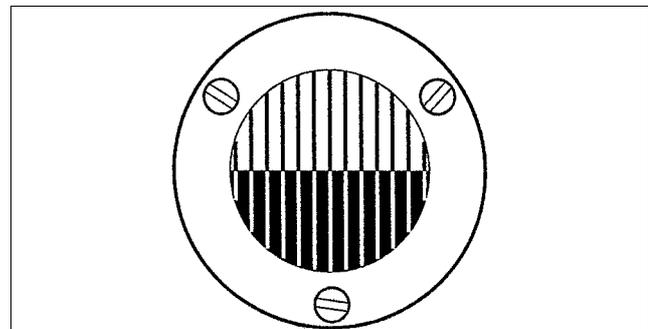

Fill oil in the gear housing

4.1.2 Selection of gravity disc

The separator is delivered with a set of gravity discs.

How to replace a gravity disc is described in “6.3 Bowl hood and disc stack (IS)” on page 114.

Clarification

When running the separator as a clarifier, select the gravity disc with the smallest hole diameter, the so-called clarifier disc. See the *Spare Parts Catalogue* for correct hole diameter.

Purification

A number of gravity discs are delivered for operating the separator as a purifier. The diameter of a gravity disc sets the position of the oil-water interface in the separator. The separation efficiency can be optimized by selection of the correct diameter for each process.


When selecting a gravity disc the general rule is to use the disc having the largest possible hole without causing a break of the water seal.

The heavier or more viscous the light phase (oil) and the larger the liquid feed the smaller the diameter should be.


When the heavy phase (water) is wanted more free from the light one (oil), the interface should be placed nearer the bowl centre, however not inside the outer edge of the discs (too small gravity disc), as this would prevent the liquid flow.

For a more detailed description of the interface position, see “3.3.1 Purifier bowl” on page 27.

Some gravity discs have two small holes drilled outside the large hole. You must pay regard to these holes when measure the hole diameter \varnothing , see the illustration. Measure between the centres of the holes.

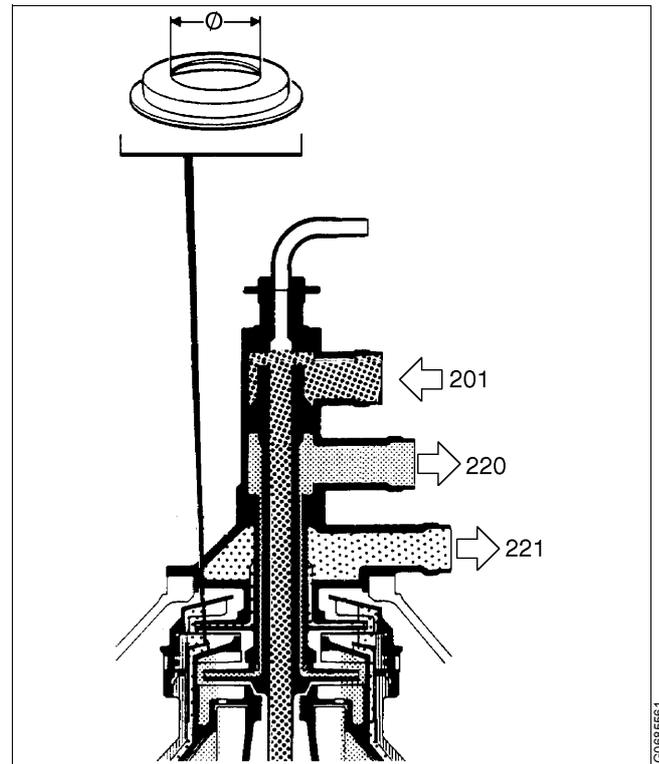

Fit correct gravity disc

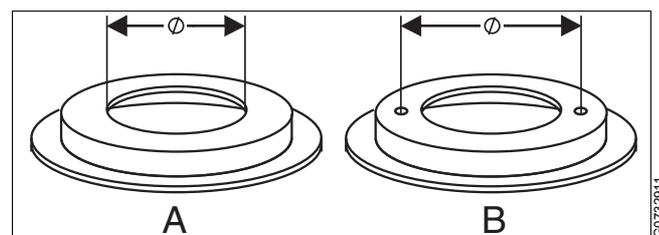


Where to measure the hole diameter of a gravity disc

- A. Gravity disc without small holes
- B. Gravity disc with two small holes


As an aid, use the nomogram on next page to find the correct gravity disc. It can be used when the density of the oil at a temperature of 15 °C is known. However, note that the nomogram is purely theoretical. In practical operation, practice the following general rule:

1. Fit a gravity disc one size larger than the recommended in the nomogram.
2. Run the separator.
3. Observe if oil flows through the water outlet. The observation can be done through the sight glass.
 - If **Yes**, stop the separator and fit the next **smaller** gravity disc.
 - If **No**, stop the separator and fit the next **larger** gravity disc.
4. Repeat steps 1-3 above until having the gravity disc with the **largest** hole diameter without causing a break of the water seal

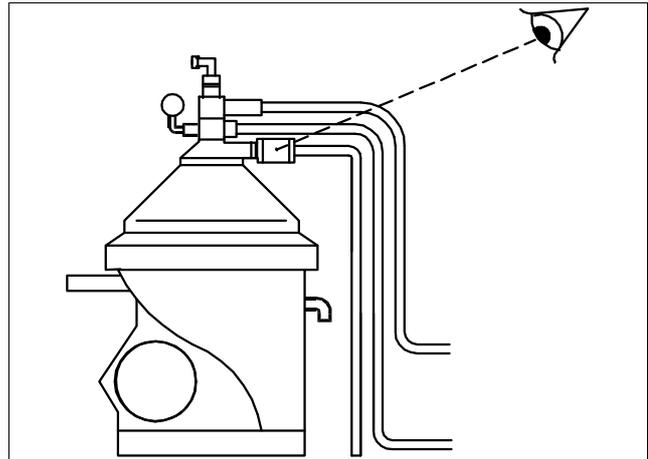

Check if oil flows through the water outlet

How to use the nomogram

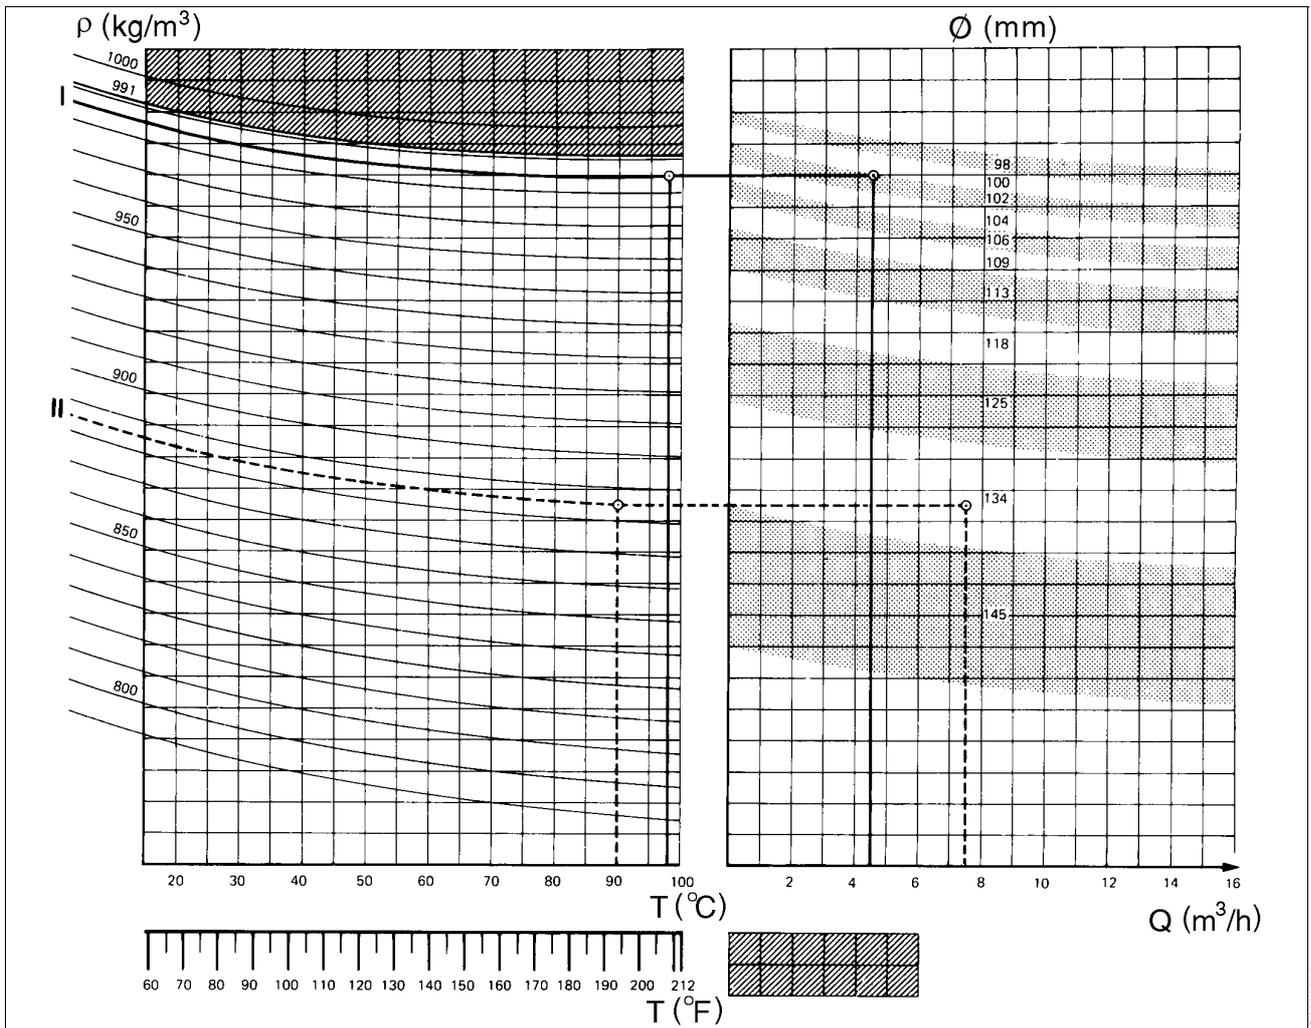

Nomogram for MOPX 310

The presence of salt water may demand the use of a gravity disc with larger hole diameter than indicated in the nomogram (the nomogram is based on the properties of fresh water).

- ρ = Density of oil in kg/m^3 at 15 °C
- Q = Throughput in m^3/h
- T = Separating temperature in °C or °F
- \varnothing = Gravity disc hole diameter in mm

Example I in nomogram

Reference in graph: _____
 Oil density: 985 kg/m^3 at 15 °C
 Separating temperature: 98 °C
 Throughput: 4,5 m^3/h

The nomogram indicates that a gravity disc with a hole diameter of 102 mm should be tried.

Example II in nomogram

Reference in graph: - - - - -
 Oil density: 885 kg/m^3 at 15 °C
 Separating temperature: 90 °C
 Throughput: 7,5 m^3/h

The nomogram indicates that a gravity disc with a hole diameter of 134 mm should be tried.

4.1.3 Ready for start

To achieve the best separation results the bowl should be in a clean condition.

1. Check that the bolts of the frame hood are fully tightened.
2. Check that all inlet and outlet connections have been correctly made and properly tightened.




CAUTION

Burn hazards

Make sure that hose connections and flange couplings are properly assembled and tightened.

Escaping hot liquid can cause burns.

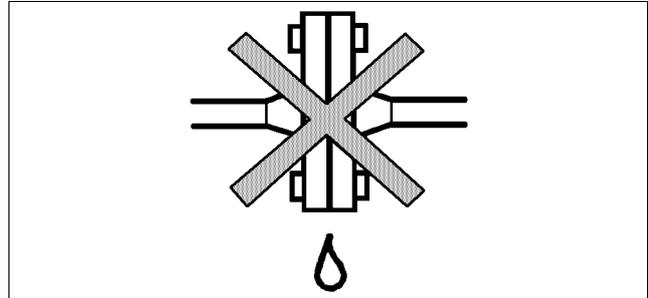

Check for leakages (not admitted)


S0009821

3. Check that the oil level is exactly in the middle of the sight glass.
Fill if necessary. See chapter [“8.9 Lubricants”](#) on page 204, for a list of recommended oils.

NOTE

During running the oil level should be slightly below the middle of the sight glass.


Too much or too little oil can damage the separating bearings.

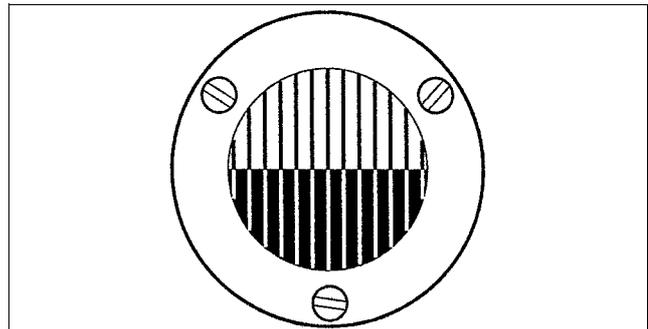

Check the oil level

G0262011

4. Make sure that the brake is released.

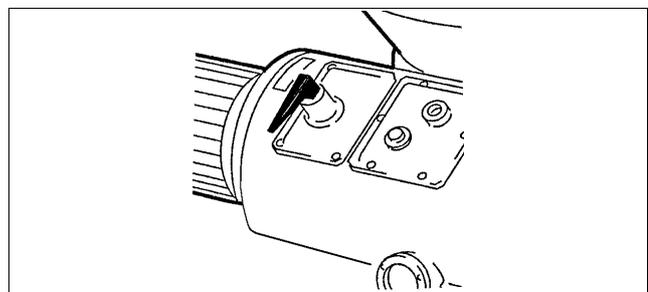

Release the brake

G0520111

4.1.4 Start


1. Start the separator.
2. Check the direction of rotation of the bowl.
The revolution counter should turn clockwise.



WARNING

Disintegration hazards

When power cables have been connected, always check direction of rotation. If incorrect, vital rotating parts could unscrew.

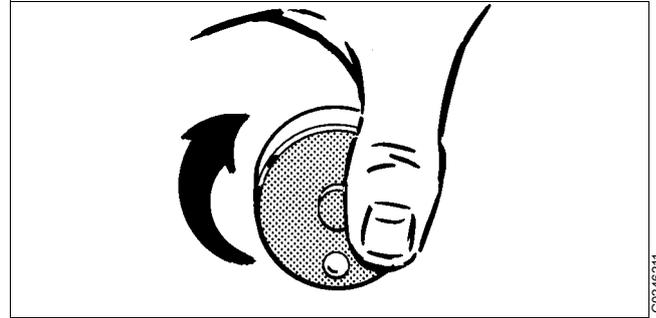

Check for correct direction of rotation

3. Check the separator for vibration. Some vibration can occur for short periods during the starting cycle, when the separator passes through its critical speeds. This is normal and passes without danger. Try to learn the vibration characteristics of the critical speed pattern.




WARNING

Disintegration hazards

When excessive vibration occurs, **keep bowl filled** and **stop** separator.

The cause of the vibration must be identified and rectified before the separator is restarted. Excessive vibration may be due to incorrect assembly or insufficient cleaning of the bowl.

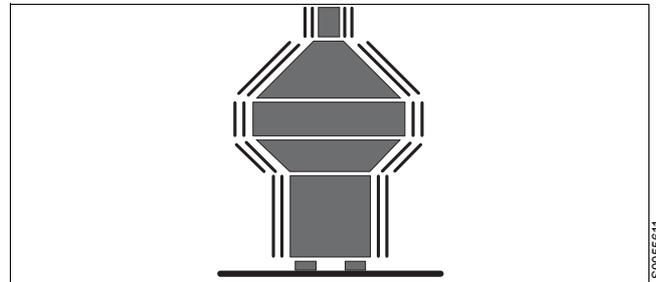

Check for vibration


In the trouble-tracing chapter “[7.1.1 Separator vibrates](#)” on [page 176](#), a number of causes are described that can create vibration.

4. Check, if possible, the current consumption of the motor starter to ensure that the separator has reached full speed.


During start, the current reaches a peak and then drops slowly to a low and stable level, which is the normal current during operation.

The time to reach full speed may not exceed the limit given in chapter “8 Technical Reference” on page 187.

5. When running normally, open the closing water valve (connection 376) for approximately 5 seconds to close the bowl.

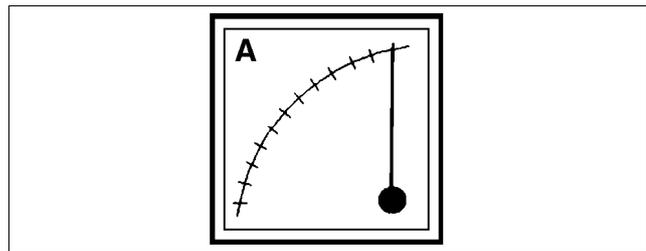

Current increases when the coupling engages...

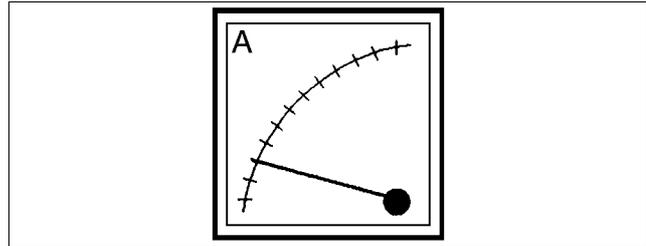

... to decrease to a stable value when full speed has been reached


4.1.5 Running

1. Circulate the process liquid through a heater until the desired temperature is obtained.
2. For **purification** mode:
 - a. Supply water (206) to form the liquid seal. Continue until water flows out through the water outlet (221).
3. For **clarification** mode:
 - a. Start the oil feed with full flow. Fill the bowl as quickly as possible.
4. For both **purification** and **clarification** mode:

Check the separator inlet and outlet pressures.

Adjust the oil outlet pressure to **1,5 bar**.

For permissible pressures, temperatures and flows, see section “8.2 Technical data” on page 189.

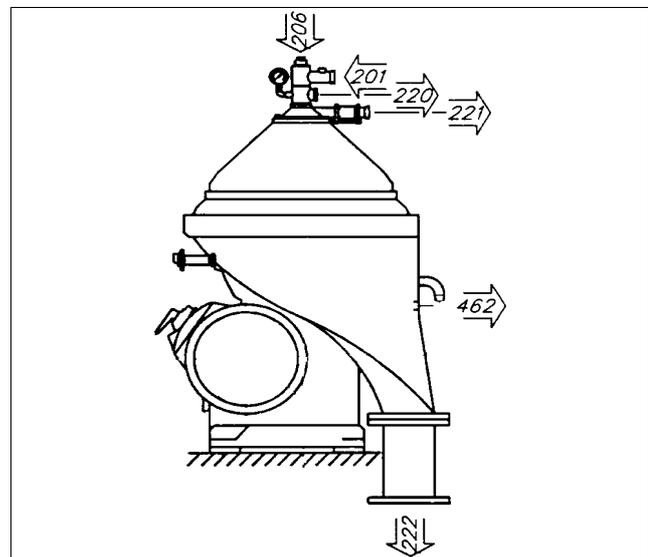

In- and outlets of the separator

5. Adjust to desired throughput.
6. Discharge by opening the valve for opening water (connection 372) until a discharge is heard. For max. and min. time for discharge intervals, see chapter “8.2 Technical data” on page 189.

 **WARNING**

Disintegration hazards


Ensure that correct discharge intervals and cleaning procedures are used.

Unbalance due to improper washing out of solids may lead to contact between rotating and non-rotating parts.

7. For daily condition checks, see “5.2.1 Daily checks” on page 51.

4.1.6 Normal stop

1. Shut off the feed.
2. Carry out a sludge discharge before stopping the separator. Otherwise the bowl must be cleaned manually before the next start up.
3. After discharge, supply sealing/displacement water to the bowl and stop the separator with the bowl filled.
4. Apply the brake.

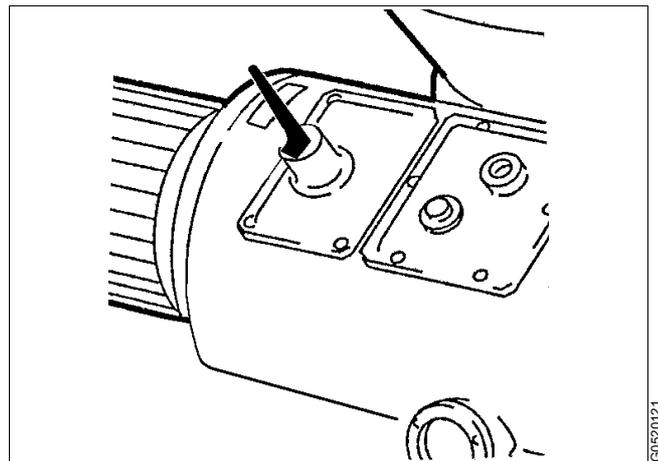

The final action, apply the brake


4.1.7 Safety stop



WARNING

Entrapment hazards

Make sure that rotating parts have come to a **complete standstill** before starting **any** dismantling work. The revolution counter and the motor fan indicate if the separator parts are rotating or not.

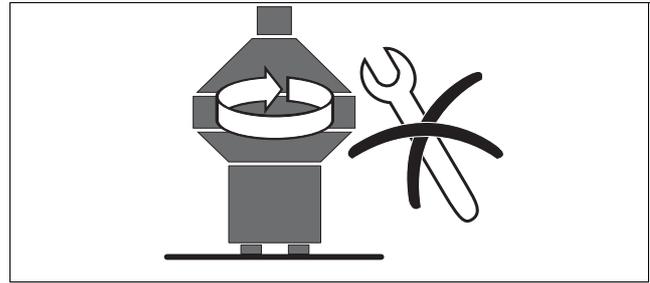


The separator must not be dismantled until standstill

1. If the separator begins to vibrate excessively during operation, stop it immediately by pushing the safety stop. The separator motor is switched off.

Keep the bowl filled during the run-down to minimize the excessive vibration.

2. Evacuate the room. The separator may be hazardous when passing its critical speeds during the run-down.

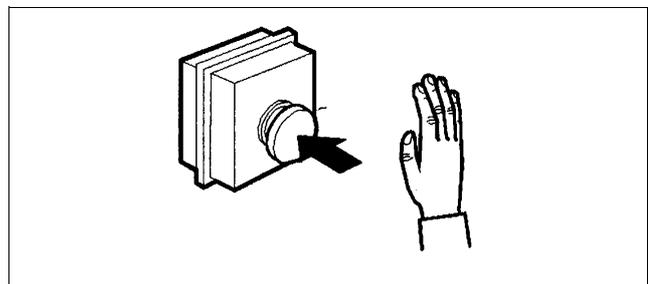

Push the safety stop if vibration is excessive



WARNING

Disintegration hazards

Do not discharge a vibrating separator.

Out-of-balance vibration can become worse if only part of the sediment is discharged.



CAUTION

Disintegration hazards

After a safety stop the cause of the fault must be identified.

If all parts have been checked and the cause remains unclear, contact Alfa Laval for advice.

5 Service Instructions

Contents

5.1 Periodic maintenance	47	5.4 Check points at Major Service (MS)	76
5.1.1 Introduction	47	5.4.1 Bowl hood seal ring	76
5.1.2 Maintenance intervals	47	5.4.2 Bowl spindle cone and bowl body nave	76
5.1.3 Maintenance procedure	49	5.4.3 Bowl spindle; height position	76
5.1.4 Service kits	50	5.4.4 Bowl spindle; radial wobble	77
5.2 Maintenance Logs	51	5.4.5 Brake	78
5.2.1 Daily checks	51	5.4.6 Buffer springs and ball bearing housing	79
5.2.2 Oil change	51	5.4.7 Coupling friction pads	81
5.2.3 Intermediate Service (IS)	52	5.4.8 Corrosion	83
5.2.4 Major Service (MS)	54	5.4.9 Cracks	83
5.2.5 3-year Service (3S)	57	5.4.10 Disc stack pressure	83
5.3 Check points at Intermediate Service (IS)	58	5.4.11 Erosion	83
5.3.1 Bowl hood seal ring	58	5.4.12 Flexible plate in coupling	84
5.3.2 Bowl spindle cone and bowl body nave	59	5.4.13 Guide surfaces	85
5.3.3 Corrosion	59	5.4.14 Inlet pipe and oil paring disc	85
5.3.4 Cracks	62	5.4.15 Level ring	86
5.3.5 Disc stack pressure	63	5.4.16 Lock ring; priming	86
5.3.6 Erosion	65	5.4.17 Lock ring; wear and damage	88
5.3.7 Guide surfaces	67	5.4.18 Oil paring disc; height position	88
5.3.8 Inlet pipe and oil paring disc	69	5.4.19 Operating mechanism	88
5.3.9 Level ring	69	5.4.20 Operating paring disc; height position	89
5.3.10 Lock ring; wear and damage	70	5.4.21 Operating slide	89
5.3.11 Operating mechanism	72	5.4.22 Sliding bowl bottom	89
5.3.12 Operating slide	72	5.4.23 Springs for operating mechanism	90
5.3.13 Sliding bowl bottom	73	5.4.24 Worm; wear of groove	90
5.3.14 Springs for operating mechanism	74	5.4.25 Worm wheel and worm; wear of teeth	90
5.3.15 Worm wheel and worm; wear of teeth	74	5.4.26 Worm wheel shaft; radial wobble	91
5.3.16 Cover interlocking switch (option)	74	5.4.27 Cover interlocking switch (option)	91
5.3.17 Vibration switch (option)	75	5.4.28 Vibration switch (option)	91

5.5 Lifting instructions	92
5.6 Cleaning	93
5.6.1 External cleaning	93
5.6.2 Cleaning agents	93
5.6.3 Cleaning of bowl discs	95
5.6.4 CIP-system	96
5.7 When changing oil	97
5.7.1 Worm wheel and worm; wear of teeth	97
5.7.2 Oil change procedure	100
5.8 Vibration	101
5.8.1 Vibration analysis	101
5.8.2 Vibration switch (option)	102
5.9 Common maintenance directions	103
5.9.1 Ball and roller bearings	103
5.9.2 Before shutdowns	106

5.1 Periodic maintenance

5.1.1 Introduction

Periodic (preventive) maintenance reduces the risk of unexpected stoppages and breakdowns. Follow the maintenance logs on the following pages in order to facilitate the periodic maintenance.

	WARNING Disintegration hazards Separator parts that are either worn beyond their safe limits or incorrectly assembled may cause severe damage or fatal injury.
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

5.1.2 Maintenance intervals

The following directions for periodic maintenance give a brief description of which parts to be cleaned, checked and renewed at different maintenance intervals.

The maintenance logs for each maintenance interval later in this chapter give detailed enumeration of the check points that must be done.

Daily checks consist of minor check points to carry out for detecting abnormal operating conditions.

Oil change

The oil change interval is every **1000-1500 hours** or at least once every year if the total number of operating hours is less than **1000-1500 hours**.

When using a group D oil, time of operation between oil changes can be extended from the normal **1000-1500 hours** to **2000 hours**.

Intermediate Service (IS)


Intermediate Service consists of an overhaul of the separator bowl, inlet/outlet and operating device every **3 months** or **2000 operating hours**. Seals in bowl and gaskets in inlet/outlet device are renewed.

Major Service (MS)

Major Service consists of an overhaul of the complete separator and includes an Intermediate Service every **12 months** or **8000 operating hours**. Seals and bearings in the bottom part are renewed.

3-year Service (3S)

3-year Service consists of an overhaul of the complete separator. The service should be coordinated with a Major Service. Compared with the Major Service additional spare parts with longer lifetime have to be renewed.

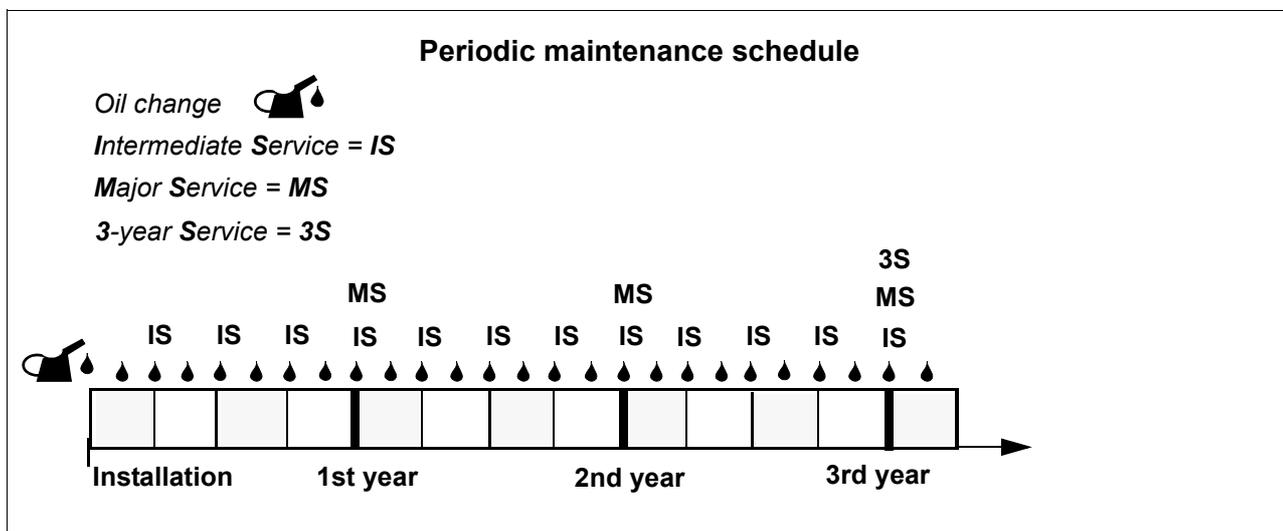

5.1.3 Maintenance procedure

At each Intermediate and Major Service, take a copy of the maintenance log and use it for notations during the service.

An Intermediate and Major Service should be carried out in the following manner:

1. Dismantle the parts as mentioned in the maintenance log and described in chapter [“6 Dismantling/Assembly” on page 107](#).
Place the separator parts on clean, soft surfaces such as pallets.
2. Inspect and clean the dismantled separator parts according to the maintenance log.
3. Fit all the parts delivered in the service kits while assembling the separator as described in chapter [“6 Dismantling/Assembly” on page 107](#). The assembly instructions have references to check points which should be carried out before and during the assembly.


5.1.4 Service kits

Special service kits are available for Intermediate Service (IS), Major Service (MS) and 3-year Service (3S).

For other services the spare parts have to be ordered separately.

Note that the parts for IS are **not** included in the MS kit and parts for IS & MS are not included in the 3S kit.

The contents of the service kits are described in the *Spare Parts Catalogue*.

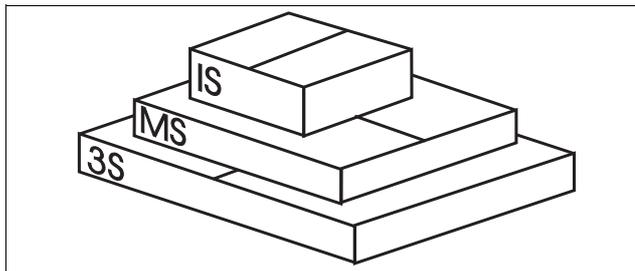

Kits are available for Intermediate Service, Major Service and 3-year Service

NOTE

Always use Alfa Laval genuine parts as otherwise the warranty will become invalid.

Alfa Laval takes no responsibility for the safe operation of the equipment if non-genuine spare parts are used.



WARNING

Disintegration hazards

Use of imitation parts may cause severe damage.

5.2 Maintenance Logs

5.2.1 Daily checks

The following steps should be carried out daily.

Main component and activity	Part	Page	Notes
Inlet and outlet Check for leakage	Connecting housing	–	
Separator bowl Check for vibration and noise		101	
Horizontal driving device Worm wheel shaft and gear casing Check for vibration and noise Check Electrical motor Check for heat, vibration and noise	Oil level in gear housing	101 40 1)	

1) See manufacturer's instruction

5.2.2 Oil change

The oil change and check of worm gear should be carried out every **1000-1500^{a)} hours** of operation.

Note! In a new installation, or after replacement of gear, change the oil after **200 operating hours** and clean the gear housing.

Main component and activity	Part	Page	Notes
Horizontal driving device Worm wheel shaft and gear housing Check Renew	Worm wheel and worm Oil ^{b)} in gear housing	97 100	

When the separator is running for short periods, the lubricating oil must be changed every **12 months** even if the total number of operating hours is less than **1000-1500 hours (2000 h)**.

a) When using a group D oil, time of operation between oil changes can be extended from the normal **1000-1500 hours to 2000 hours**.

b) See chapter [“8.9 Lubricants” on page 204](#) for further information.

5.2.3 Intermediate Service (IS)

Name of plant: _____ Local identification: _____
 Separator: MOPX 310TGT-24 Manufacture No./Year: _____
 Total running hours: _____ Product No: 881077-03-03
 Date: _____ Signature: _____

Note: Renew all parts included in the Intermediate Service kit (IS).

Main component and activity	Part	Page	Notes	
Inlet and outlet Clean and inspect	Threads of inlet pipe	69		
	Connecting housing	–		
Separator bowl Clean and check	Upper paring disc	–		
	Gravity/clarifier disc	–		
	Lock ring	70		
	Bowl hood	58		
	Top disc	–		
	Oil paring disc	69		
	Level ring	69		
	Bowl discs	95		
	Distributor	–		
	Distributing cone	–		
	Sliding bowl bottom	73		
	Bowl body	–		
	Bowl spindle cone and bowl body nave	59		
	Operating mechanism	72, 74		
	Check	Corrosion	59	
		Cracks	62	
		Erosion	65	
Galling of guide surface		68		
Renew	Disc stack pressure	63		
	O-rings and sealings	–		

Main component and activity	Part	Page	Notes
Operating device			
Clean and check	Operating paring disc	–	
Renew	O-rings	–	
Horizontal driving device			
Worm wheel shaft and gear housing			
Check	Worm wheel and worm	97	
Renew	Oil in gear housing	100	
Electrical motor			
Lubrication (if nipples are fitted)	See sign on motor	–	
Signs and labels on separator			
Check attachment and legibility	Safety label on hood	220	
	Direction of rotation arrow	220	
	Power supply frequency	220	
Monitoring equipment (option)			
Function check	Vibration switch	75	
	Cover interlocking switch	74	

5.2.4 Major Service (MS)

Name of plant: _____ Local identification: _____
 Separator: MOPX 310TGT-24 Manufacture No./Year: _____
 Total running hours: _____ Product No: 881077-03-03
 Date: _____ Signature: _____

Note: Renew all parts included in the Intermediate Service kit (IS) and Major Service kit (MS).

Main component and activity	Part	Page	Notes
Inlet and outlet Clean and inspect	Threads of inlet pipe	69	
	Connecting housing	–	
Separator bowl Clean and check	Upper paring disc	–	
	Gravity/clarifier disc	–	
	Lock ring	86, 70	
	Bowl hood	58	
	Top disc	–	
	Oil paring disc	69	
	Level ring	69	
	Bowl discs	95	
	Distributor	–	
	Distributing cone	–	
	Sliding bowl bottom	73	
	Bowl body	–	
	Bowl spindle cone and bowl body nave	59	
	Operating mechanism	72, 74	
	Check	Corrosion	59
Cracks		62	
Erosion		68	
Galling of guide surface		68	
Disc stack pressure		63	
Renew	Oil paring disc height position	88	
	O-rings and sealings	–	

Main component and activity	Part	Page	Notes
Operating device			
Clean and check	Operating paring disc	–	
Check	Height position of operating paring disc	88	
Renew	O-rings	–	
Vertical driving device			
Clean and check	Bowl spindle	–	
	Wear of groove in worm	90	
	Buffer springs and ball bearing housing	79	
	Radial wobble of bowl spindle	77	
Renew	Spindle bearings and O-rings	140	
Horizontal driving device			
Worm wheel shaft and gear housing			
Check	Worm wheel and worm	97	
	Radial wobble of worm wheel shaft	91	
	Axial play of flexible plate	84	
Renew	Bearings, O-rings and sealings	152	
	Oil in gear housing	100	
Brake			
Clean and check	Spring and brake shoe	79	
Renew	Friction pad	78	
Friction coupling			
Clean and check	Worm wheel coupling	–	
Renew	Friction pads	81	
Electrical motor			
Lubrication (if nipples are fitted)	See sign on motor	–	
Signs and labels on separator			
Check attachment and legibility	Safety label on hood	220	
	Direction of rotation arrow	220	
	Power supply frequency	220	
Monitoring equipment (option)			
Function check	Vibration switch	75	
	Cover interlocking switch	74	

Main component and activity	Part	Page	Notes
Feed pump (option) Clean and check Renew	Bushings, wear gaskets, flexible coupling, relief/safety valve and impeller shaft Lipseal rings	166 166	

5.2.5 3-year Service (3S)

The 3-year service should be carried out in conjunction with a Major Service (MS). The extent of the 3-year service is the same as for a major service plus renewing of parts included in the 3-year Service kit (3S).

NOTE

Renew all parts included in the Intermediate Service kit (IS), Major Service kit (MS) and 3-year Service kit (3S).

The 3S kit consists among other parts of vibration dampers for renewal of frame feet. How to renew the frame feet is described below.


Frame feet, renewal

1. Disconnect pipes, hoses and cables connected to the separator.
2. Remove the nuts (3, 4).
3. Lift the separator.

NOTE

When lifting a separator it must always **hang securely**. See separate instruction in chapter [“5.5 Lifting instructions”](#) on page 92.

4. Renew the vibration dampers (1, 2).
5. Lower the frame. Check that the bolts do not press against the edges of the holes.
6. Tighten the nut (3) to **20 Nm**.
7. Hold the nut (3) firmly and secure with the lock nut (4).
8. Connect the previously disconnected pipes, hoses and cables.

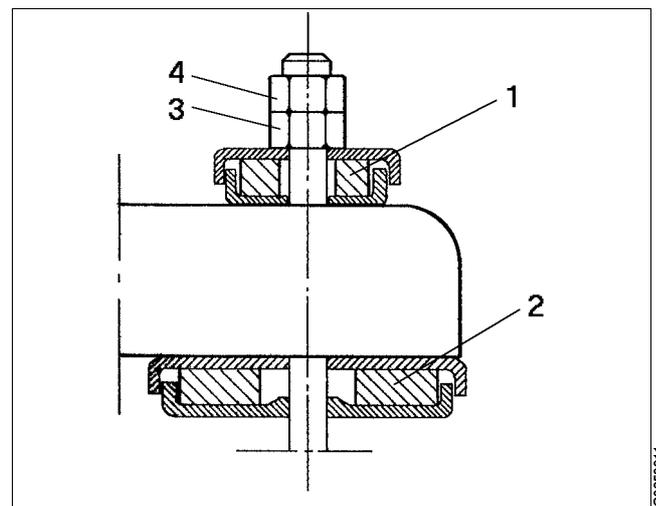

1. *Vibration damper, upper*
2. *Vibration damper, lower*
3. *Nut*
4. *Lock nut*


G0258911

5.3 Check points at Intermediate Service (IS)

5.3.1 Bowl hood seal ring


Poor sealing between the bowl hood seal ring and the sealing edge of the sliding bowl bottom will cause a leakage of process liquid from the bowl.

Renew the bowl hood seal ring at each Intermediate Service (IS).

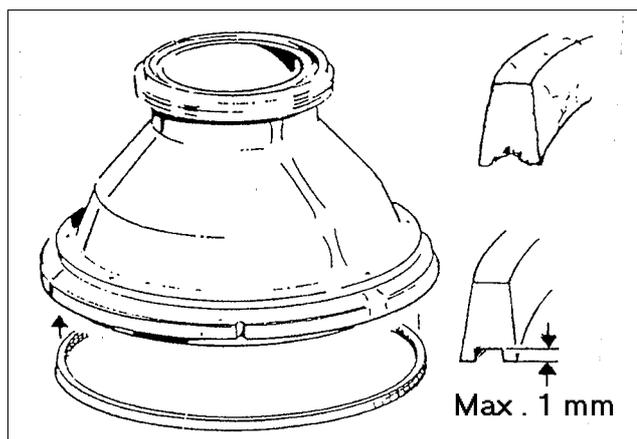

Max. permitted indentation of the seal ring is 1 mm


Knock out the old ring by means of a pin inserted in the holes intended for this purpose.

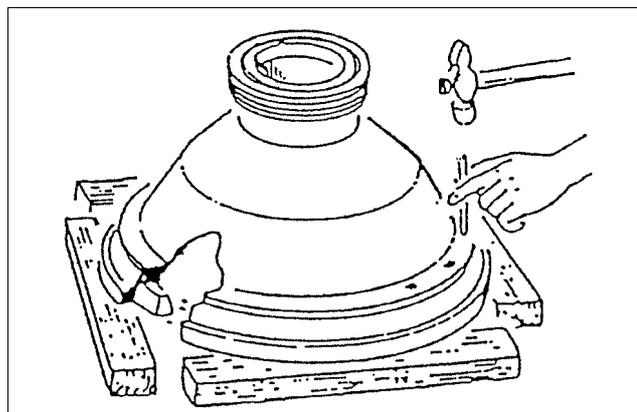

Removal of the seal ring

Fit the new ring as follows:

Press the ring into the groove with a straight wooden board placed across the ring.

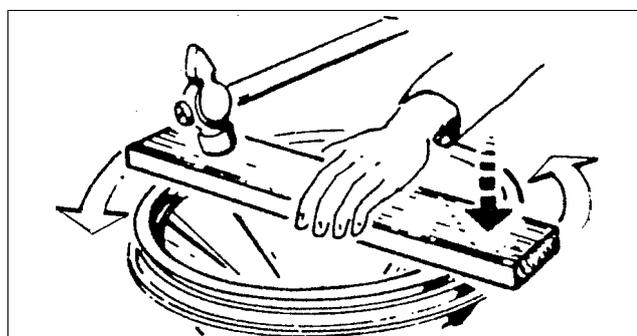

Fitting of the seal ring

NOTE

If the new ring is too narrow, place it in hot water (70-80 °C) for about 5 minutes.
If it is too wide, it will shrink after drying in 80-90 °C for about 24 hours.

5.3.2 Bowl spindle cone and bowl body nave

Impact marks on the spindle cone or in the bowl body nave may cause poor fit and out-of-balance vibrations.

The bowl spindle and the nave should also be checked if the bowl spindle has been dismantled or if the bowl runs roughly.

Corrosion may cause the bowl to stick firmly to the spindle cone and cause difficulties during the next dismantling.


- Remove any impact marks with a scraper and/or whetstone.

Rust can be removed by using a fine-grain emery cloth (e.g. No. 320).

Finish with polishing paper (e.g. No. 600).

NOTE

Always use a scraper with great care. The cone shape must not be deformed.

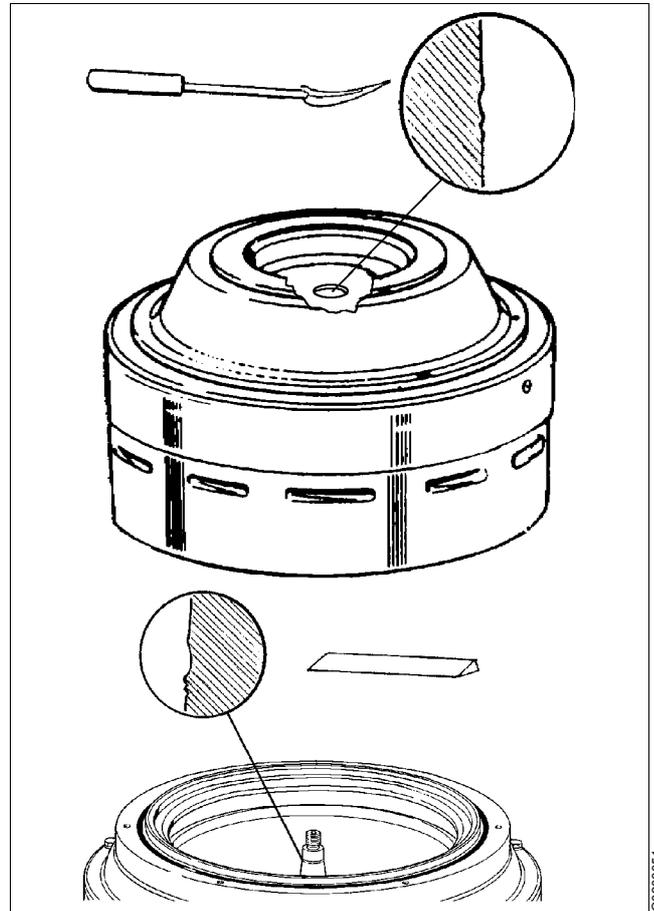

Remove impact marks from the nave and cone

5.3.3 Corrosion


Evidence of corrosion attacks should be looked for and rectified each time the separator is dismantled. Main bowl parts such as the bowl body, bowl hood and lock ring must be inspected with particular care for corrosion damage.



WARNING

Disintegration hazard

Inspect regularly for corrosion damage. Inspect frequently if the process liquid is corrosive.

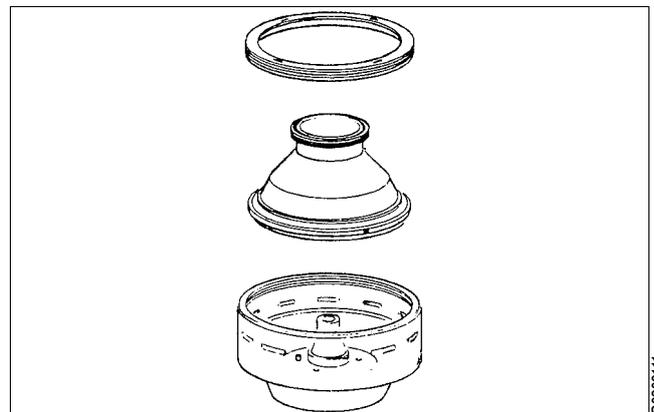

Main bowl parts to check for corrosion

Always contact your Alfa Laval representative if you suspect that the largest depth of the corrosion damage exceeds 1,0 mm or if cracks have been found. Do not continue to use the separator until it has been inspected and given clearance for operation by Alfa Laval.

Cracks or damage forming a line should be considered as being particularly hazardous.

Non-stainless steel and cast iron parts


Corrosion (rusting) can occur on unprotected surfaces of non-stainless steel and cast iron. Frame parts can corrode when exposed to an aggressive environment.

Stainless steel

Stainless steel parts corrode when in contact with either chlorides or acidic solutions. Acidic solutions causes a general corrosion. The chloride corrosion is characterised by local damage such as pitting, grooves or cracks. The risk of chloride corrosion is higher if the surface is:

- Exposed to a stationary solution.
- In a crevice.
- Covered by deposits.
- Exposed to a solution that has a low pH value.


A corrosion damage caused by chlorides on stainless steel begins as small dark spots that can be difficult to detect.

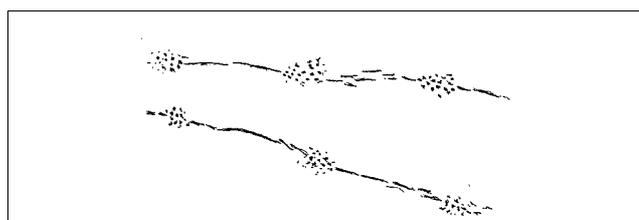

Example of chloride corrosion in stainless steel

50020611

1. Inspect closely for all types of damage by corrosion and record these observations carefully.
2. Polish dark-coloured spots and other corrosion marks with a fine grain emery cloth. This may prevent further damage.

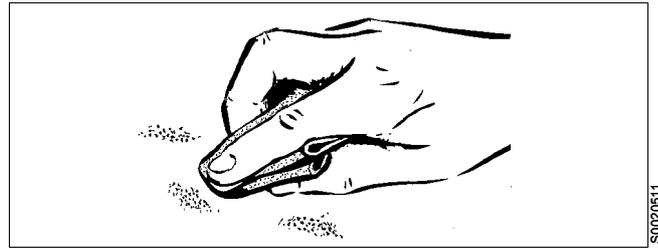

Polish corrosion marks to prevent further damage



WARNING

Disintegration hazard

Pits and spots forming a line may indicate cracks beneath the surface.

All forms of cracks are a potential danger and are totally unacceptable.

Replace the part if corrosion can be suspected of affecting its strength or function.

Other metal parts

Separator parts made of materials other than steel, such as brass or other copper alloys, can also be damaged by corrosion when exposed to an aggressive environment. Possible corrosion damage can be in the form of pits and/or cracks.

5.3.4 Cracks

Cracks can initiate on the machine after a period of operation and propagate with time.

- Cracks often initiate in an area exposed to high cyclic material stresses. These are called fatigue cracks.
- Cracks can also initiate due to corrosion in an aggressive environment.
- Although very unlikely, cracks may also occur due to the low temperature embrittlement of certain materials.

The combination of an aggressive environment and cyclic stresses will speed-up the formation of cracks. Keeping the machine and its parts clean and free from deposits will help to prevent corrosion attacks.

	<p>WARNING</p> <p>Disintegration hazard</p> <p>All forms of cracks are potentially dangerous as they reduce the strength and functional ability of components.</p> <p>Always replace a part if cracks are present.</p>
------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

It is particularly important to inspect for cracks in rotating parts and especially the pillars between the sludge ports in the bowl wall.

Always contact your Alfa Laval representative if you suspect that the largest depth of the damage exceeds 1,0 mm. Do not continue to use the separator until it has been inspected and cleared for operation by Alfa Laval.


5.3.5 Disc stack pressure

NOTE

Ensure that the disc stack pressure is sufficient to maintain bowl balance.

Insufficient pressure in the disc stack can cause vibration and reduce lifetime of ball bearings.

The lock ring (1) should press the bowl hood (2) firmly against the bowl body (3). The hood in turn should exert a pressure on the disc stack (4), clamping it in place.

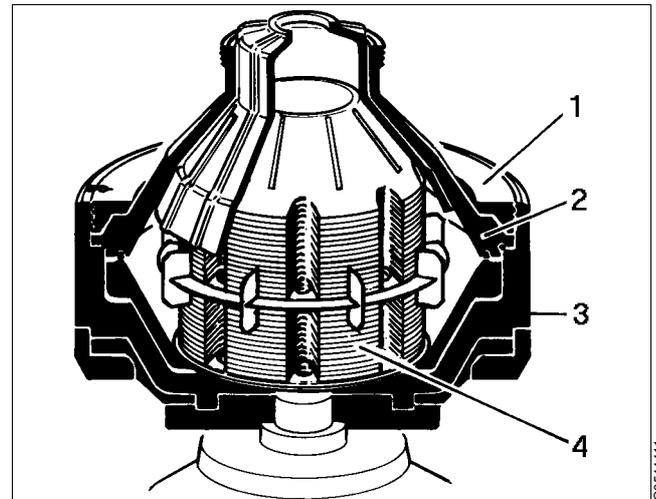

1. Lock ring
2. Bowl hood
3. Bowl body
4. Disc stack


Compress the disc stack by tightening the lock ring, see chapter “6.3.3 Assembly” on page 121.

Correct pressure is obtained when it is possible to tighten the lock ring so far by hand that the ϕ -mark on the lock ring is positioned 60° - 90° ahead of the mark on the bowl body.

To achieve this, add an appropriate number of discs to the top of the disc stack beneath the top disc.

Then advance the lock ring by giving the spanner handle some blows till the ϕ -marks are passed and the bowl is fully assembled.

If the ϕ -marks do not reach or pass each other, the reason could be an incorrectly assembled bowl or too many discs in the disc stack. Reassemble and check.

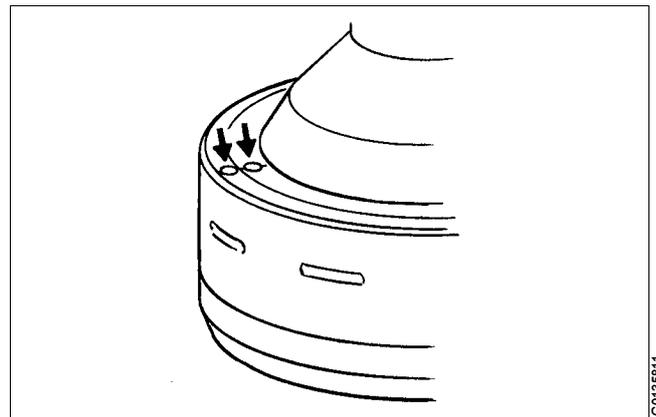

ϕ -marks on bowl body and lock ring in line

Complementary check using the compressing tool

With the large lock ring correctly tighten and the compressing tool mounted on the separator bowl, turn the switch to position 1 for compression.


Compress the disc stack by pumping the lever arm until the oil pressure is released through the relief valve.

Measure the height (H1) of the piston rod (see illustration) with the slide callipers depth gauge. Make a note of the reading obtained.

Release the pressure in the compressing tool by turning the switch to position 0. The piston rod will now move downwards slightly when the disc set is released inside the bowl.

Measure once again the height (H2) of the piston rod with the slide callipers and make a note of the reading obtained.

If the difference between H1 and H2 is less than 1,5 mm, the disc stack pressure is correct. If it exceeds 1,5 mm, the number of discs is insufficient. Add one or more discs and repeat the above procedure until the correct disc stack pressure is obtained.

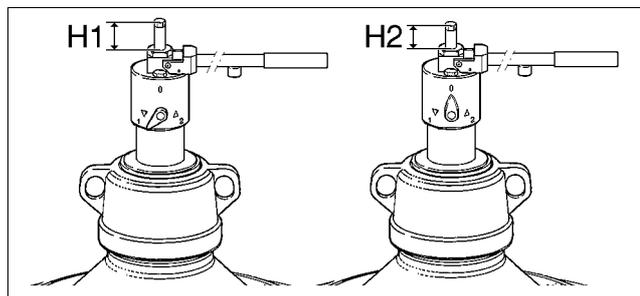

Measure of disc stack pressure with use of a compressing tool

NOTE

An insufficient number of discs will create an imbalance causing vibration.

5.3.6 Erosion


Erosion can occur when particles suspended in the process liquid slide along or strike against a surface. Erosion can become intensified locally by flows of higher velocity.

	<p>WARNING</p> <p>Disintegration hazard</p> <p>Inspect regularly for erosion damage. Inspect frequently if the process liquid is erosive.</p>
-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

Always contact your Alfa Laval representative if the largest depth of any erosion damage exceeds 1,0 mm. Valuable information as to the nature of the damage can be recorded using photographs, plaster impressions or hammered-in lead.

Erosion is characterised by:

- Burnished traces in the material.
- Dents and pits having a granular and shiny surface.

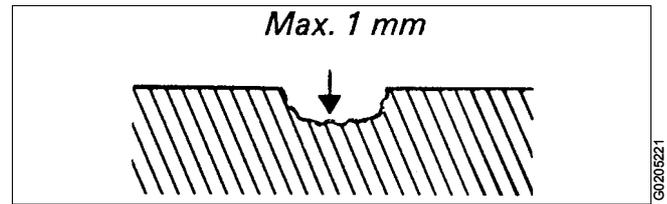


Max. permitted erosion

G020521

Surfaces particularly subjected to erosion are:

1. The upper paring disc.
2. The top disc.
3. The pillars between the sludge ports in the bowl wall.
4. The sealing edge of the bowl body for the seal ring in the sliding bowl bottom.
5. The underside of the distributor in the vicinity of the distribution holes and wings.
6. The surface of the sliding bowl bottom that faces the conical part of the distributor.
7. The sealing edge of the sliding bowl bottom.

Look carefully for any signs of erosion damage. Erosion damage can deepen rapidly and consequently weaken parts by reducing the thickness of the metal.

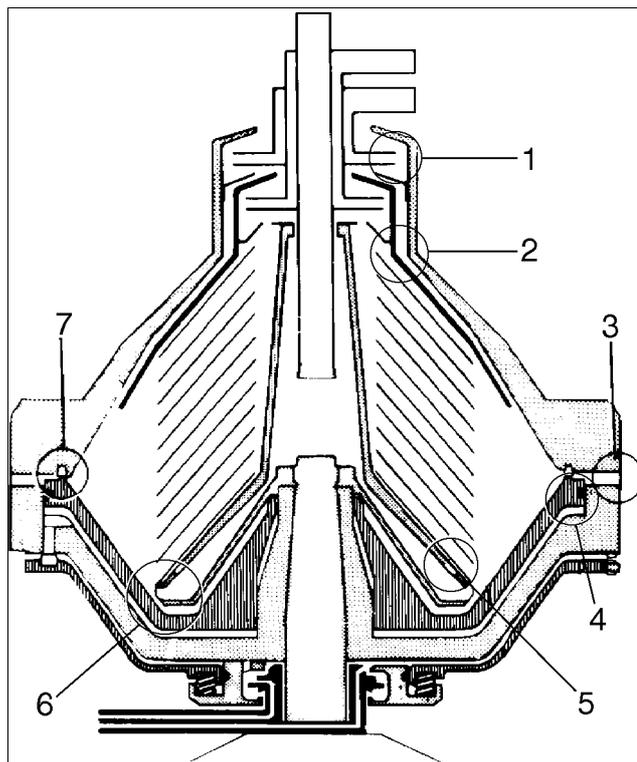

Surfaces particularly subjected to erosion



WARNING

Disintegration hazard

Erosion damage can weaken parts by reducing the thickness of the metal.

Pay special attention to the pillars between the sludge ports in the bowl wall.

Replace the part if erosion can be suspected of affecting its strength or function.

5.3.7 Guide surfaces

Check surfaces indicated (1) for burrs or galling. Rectify when necessary.


Repair of galling on guide surfaces; see following pages. Before fitting the sliding bowl bottom, clean (**do not** degrease) the contact surfaces (1 and 2). Apply Alfa Laval lubricating paste or Molykote 1000 Paste with a well-cleaned brush on surfaces (1 and 2).

NOTE


To avoid the risk of galling, the contact surfaces (1) should be primed with a slide lacquer at every Major Service (MS).

The slide-lacquered surfaces will be destroyed if the surfaces are degreased.


Lubricate the O-ring and the seal ring with silicone grease making sure they are not damaged and lie properly in their grooves.

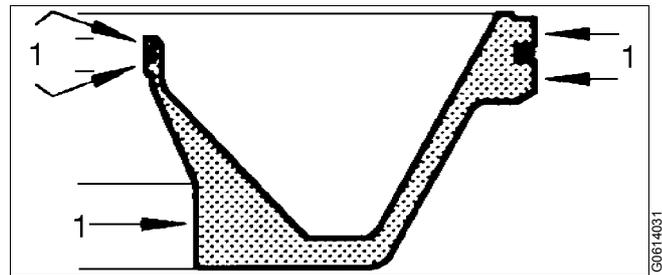

Sliding bowl bottom

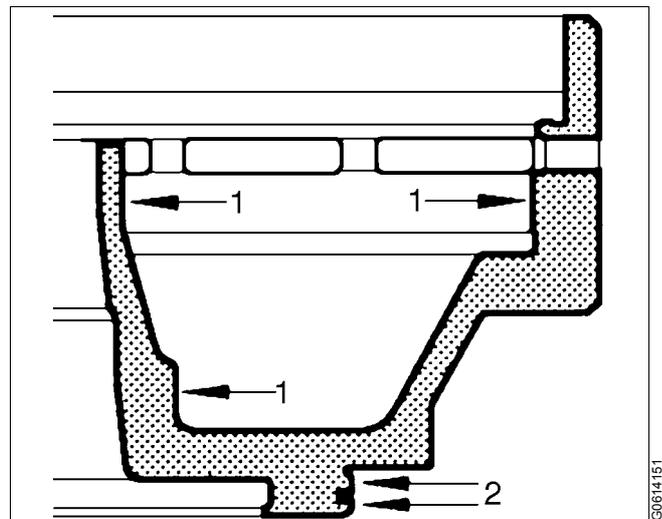

Bowl body

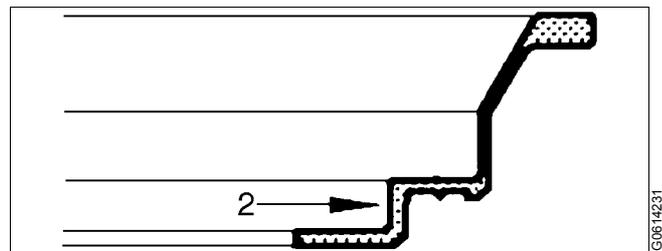


Operating slide

1, 2 =  Alfa Laval lubricating paste or Molykote 1000 Paste.

Repair of galling on guide surfaces

Galling (friction marks) may appear on guide surfaces in the operating system, the bowl body and the sliding bowl bottom. Surfaces subject to repair are indicated by an arrow.

The example below describes the repair of the lower guide surface of the bowl body nave.

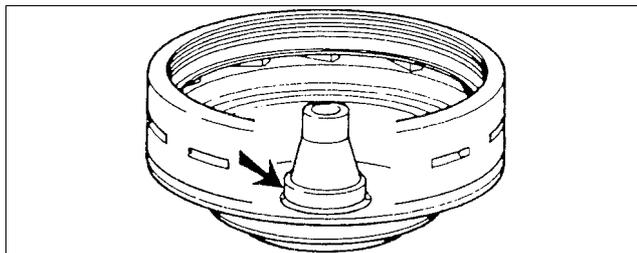


Guide surface in the bowl body

Recommended tools for correction of galling:


- Emery cloth, 240 grade.
- Hand drilling machine
- Degreasing agent.
- Fibre brush, \varnothing 25mm.
- Fibre brush, \varnothing 50 mm.
- Very fine single-cut file.

1. Clean the surface thoroughly with a degreasing agent, i.e. white spirit. This is important.

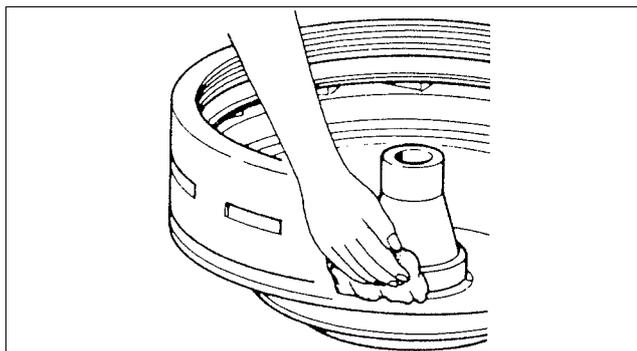


2. If the galling is excessive, first use the fine single-cut file. The file should be used with caution so that the damage is not made worse.


Remove the high spots on the surface. Do not use rotating files or similar. Remove the high spots only - not the undamaged material.

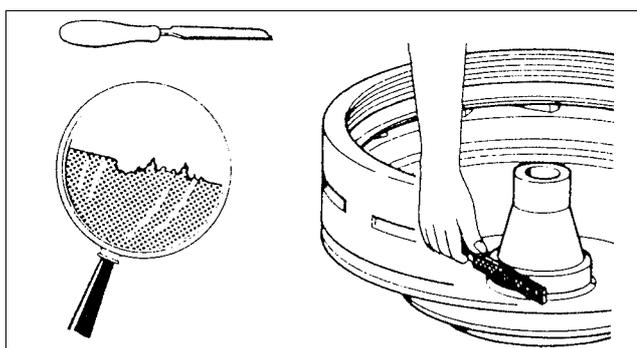

3. An emery cloth of 240 grade should be used to smooth the edges and to remove any burnt-in foreign matter.

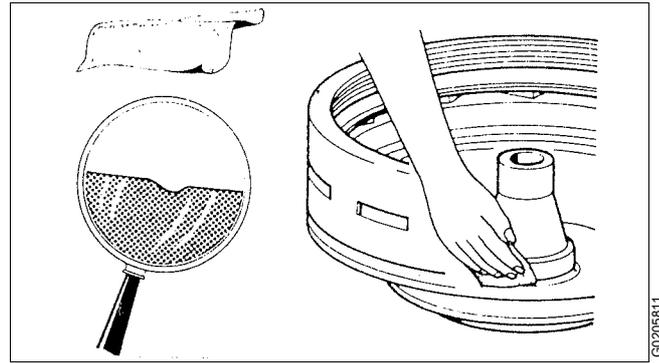

4. Finish off by polishing the damaged spot with the fibre brushes and brush wax. It is recommended that the whole area where galling may occur is polished. Polishing will help smoothen the whole of the damaged area, even in the deepest parts.

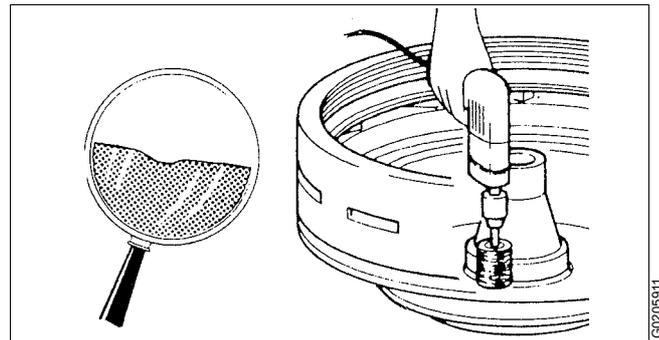


Prime the repaired area with lubricating spray Molykote 321 R. Read the correct procedure under checkpoint. Apply Alfa Laval lubricating paste or Molykote 1000 Paste to the surface after priming.

5.3.8 Inlet pipe and oil paring disc

Damage to the threads and the top surface of level ring may cause the paring disc to scrape against the paring chamber cover even if the height has been adjusted correctly.


Screw the inlet pipe into the paring disc and check that the inlet pipe turns easily.

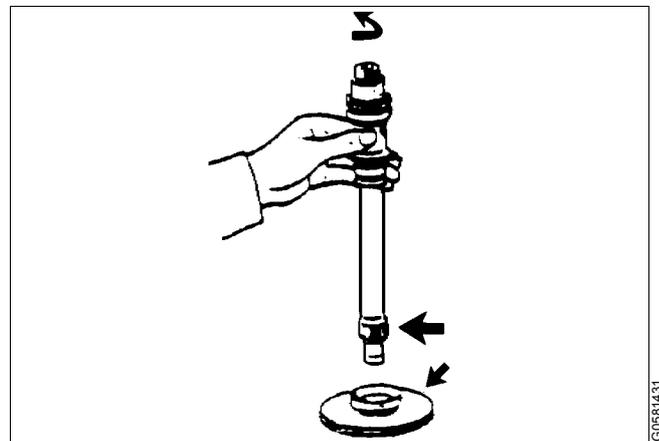

Check the threads of the inlet pipe and oil paring disc

5.3.9 Level ring

Remove any burrs on the surface of the level ring with a file as the paring disc rests on that surface during the height position check.

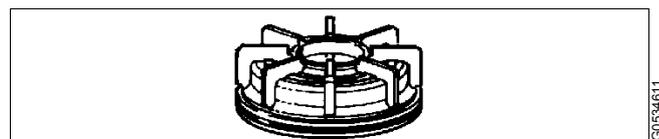

Check the level ring for burrs

5.3.10 Lock ring; wear and damage

Excessive wear or impact marks on threads, guide and contact surfaces of the lock ring, bowl hood and bowl body may cause hazardous galling.


Check the thread condition by tightening the lock ring (1) after removing the disc stack and bowl hood O-ring (2) from the bowl.



WARNING

Disintegration hazards

Wear on large lock ring thread must not exceed safety limit. The ϕ -mark on lock ring must not pass opposite ϕ -mark by more than the specified distance.

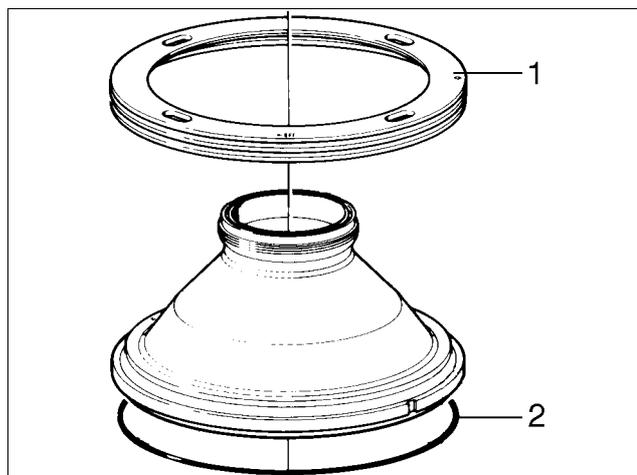


1. Lock ring
2. O-ring for the bowl hood

In a new bowl the alignment marks on the lock ring and the bowl body are exactly opposite each other.

If thread wear is observed, mark the bowl body at the new position of the alignment mark on the lock ring by punching in a new alignment mark.

If the original ϕ -mark on the lock ring passes the ϕ -mark on the bowl body by more than 25° (which corresponds to **A=100 mm for MOPX 310TGT-24**), an Alfa Laval representative must be contacted immediately.

If the marks become illegible, an Alfa Laval representative should be contacted immediately to inspect thread wear and for determining the position of new alignment marks.

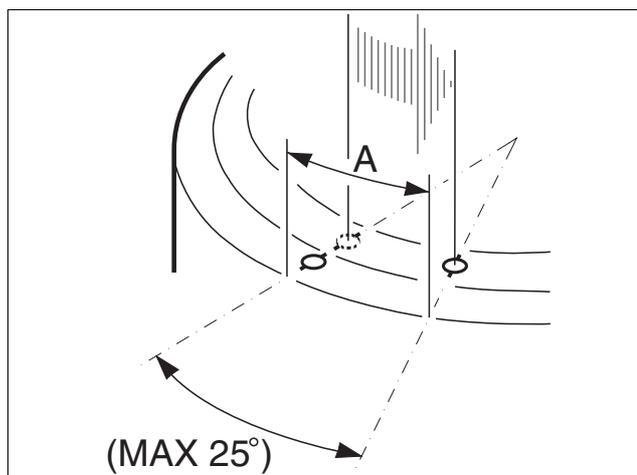

The ϕ -mark on the lock ring must not pass the ϕ -mark on the bowl body by more than 25°

Damage


The position of the threads, contact and guide surfaces are indicated by arrows in the illustration.

Clean the threads, contact and guide surfaces with a suitable degreasing agent.

Check for burrs and protrusions caused by impact. Watch your fingers for sharp edges.

If damage is established, rectify using a whetstone or fine emery cloth (recommended grain size 240).

If the damage is considerable, use a fine single-cut file, followed by a whetstone.

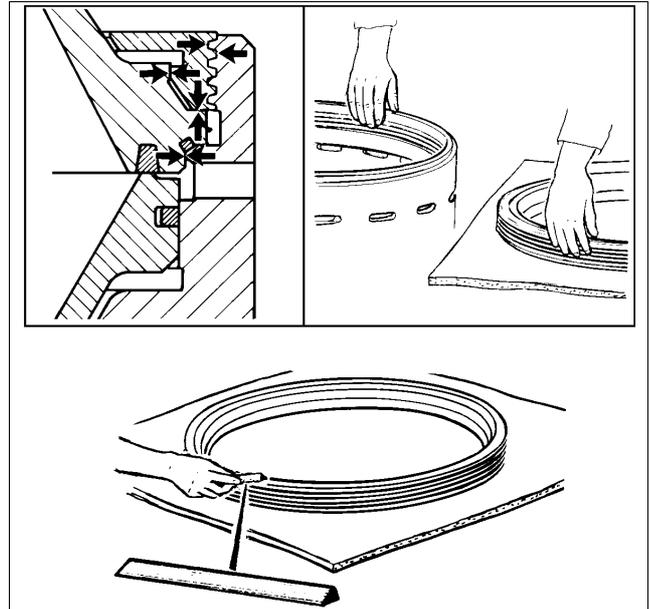

Clean and check thread, contact and guide surfaces of the lock ring

G0537231


5.3.11 Operating mechanism

Dirt and lime deposits in the operating mechanism may cause poor discharge function or no function at all.

Clean and polish surfaces with steel wool if necessary.

Reasons for dirt or deposits:

- Hard or unclean operating water. Change water supply or install a water softener or a fine filter.
- Sludge has been sucked down into bowl casing and into the operating system. Check the installation and the venting system of both the sludge tank and bowl casing drain.

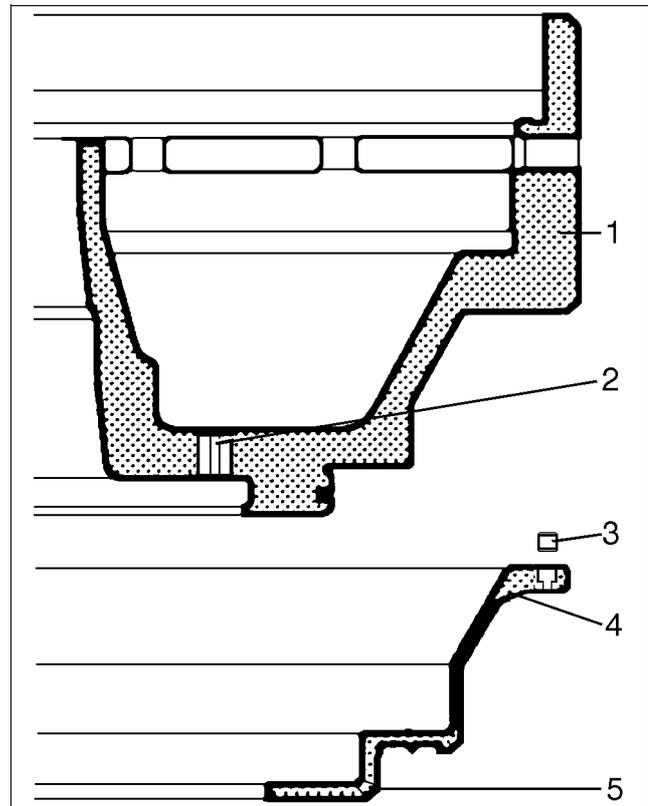


1. Bowl body
2. Nozzle, $\varnothing = 2,5 \text{ mm}$
3. Valve plug
4. Operating slide
5. Nozzle, $\varnothing = 1,1 \text{ mm}$

5.3.12 Operating slide

Poor sealing between the valve plugs on the operating slide and bowl body may prevent complete closing of the bowl.

Examine the sealing surfaces (1) of the bowl body in contact with the valve plugs. Remove any marks and lime deposits with a very fine grain emery cloth.


Check the guiding surface (2) in contact with the dosing ring. Remove any marks with a whetstone (grain size 240).

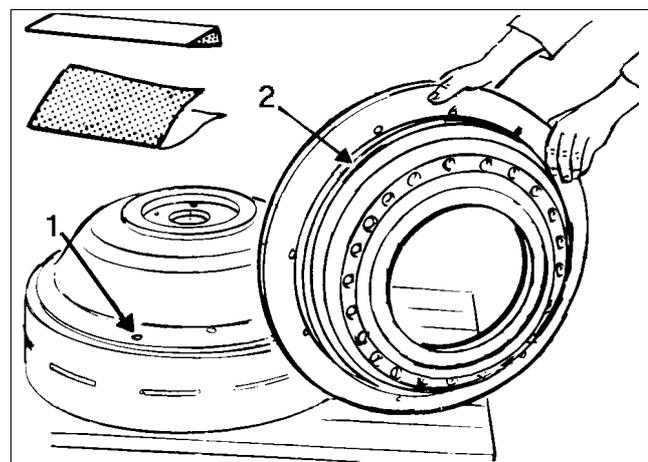

1. Bowl body sealing surfaces in contact with the valve plugs
2. Operating slide guide surface in contact with the dosing ring

Remove all the valve plugs. Tap in the new plugs.

Correct height of plugs: **11,0 mm**.

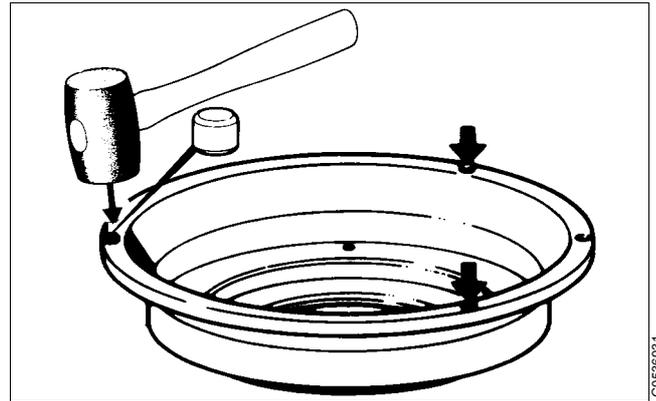

Tap in new valve plugs


5.3.13 Sliding bowl bottom

Poor sealing between the bowl hood seal ring and the sealing edge of the sliding bowl bottom will cause a leakage of process liquid from the bowl.

Check the sealing edge of the sliding bowl bottom. If damaged either through corrosion or erosion or other means, it can be rectified by turning in a lathe. Maximum permissible reduction of the original profile height (2,5 mm) is 0,5 mm.

NOTE

Never reduce the height outside the sealing edge to reach the minimum profile height.

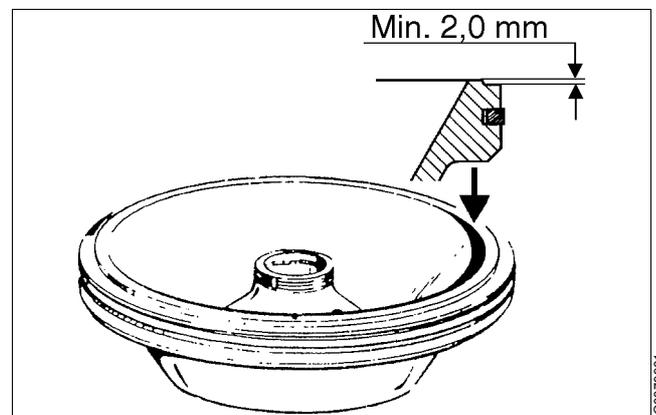

Min. height of the profile on sliding bowl bottom


If the seal ring for the sliding bowl bottom is to be replaced, turn the sliding bowl bottom upside down and inject compressed air through the hole on the underside. This will press the ring outwards far enough to be gripped easily.



WARNING

Risk for eye injury

Wear safety goggles.

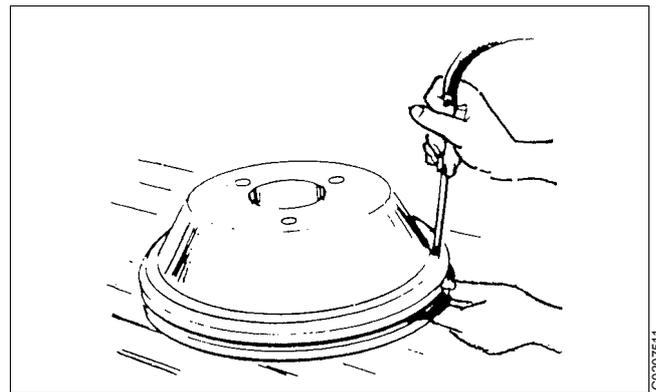


Removal of the O-ring in sliding bowl bottom using compressed air

5.3.14 Springs for operating mechanism

Defective or broken springs may prevent complete closing of the bowl.

Renew those springs which differ from other springs in regard to length or are defective in other respects.

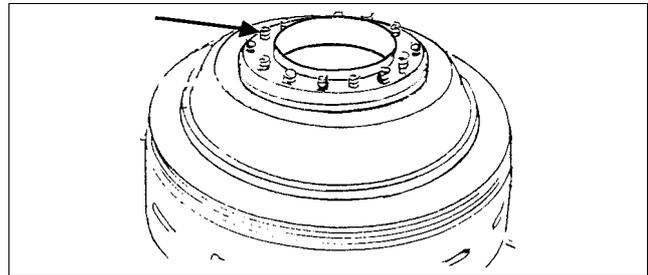

Check for defective or broken springs

5.3.15 Worm wheel and worm; wear of teeth


Same as described in “5.7.1 Worm wheel and worm; wear of teeth” on page 97 in this chapter.

5.3.16 Cover interlocking switch (option)

When the button is pushed, check that the brown and blue wires are short-circuited and the two black wires are out-of-circuit.

Check also the reverse when the button not pressed.

See the illustration for exact measurement when the button is operated.

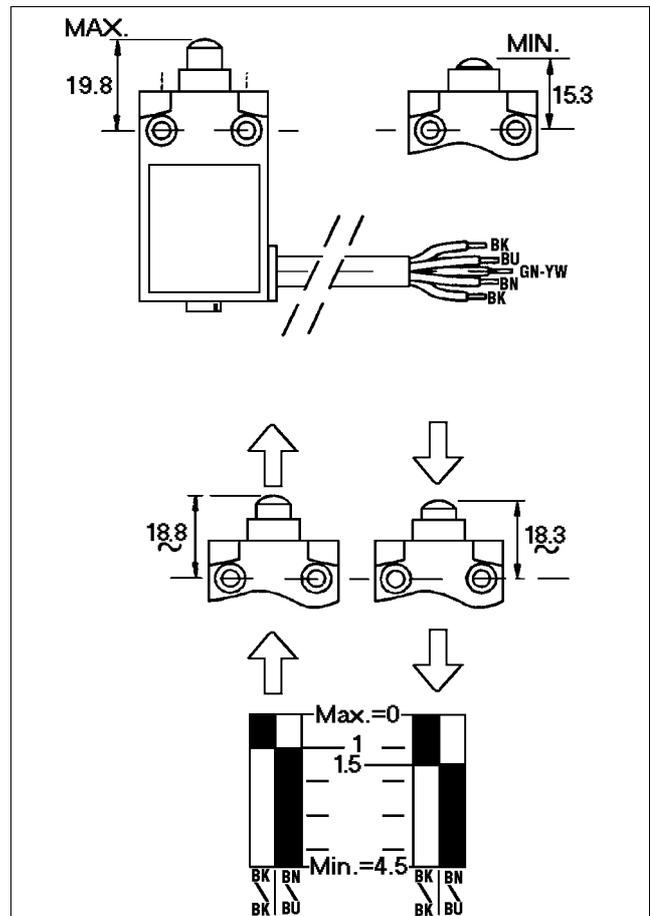

Measurements for operation range of the cover interlocking switch button


5.3.17 Vibration switch (option)

NOTE

Before carrying out the function check described below, check that a safety stop will not cause serious interruption of the operation.

Knock on the vibration switch cap a number of times within one second (the number is decided by the system parameter settings). If the switch functions correctly, the separator will perform a safety stop.

How to adjust the setpoint is described in chapter [“5.8.2 Vibration switch \(option\)”](#) on page 102.

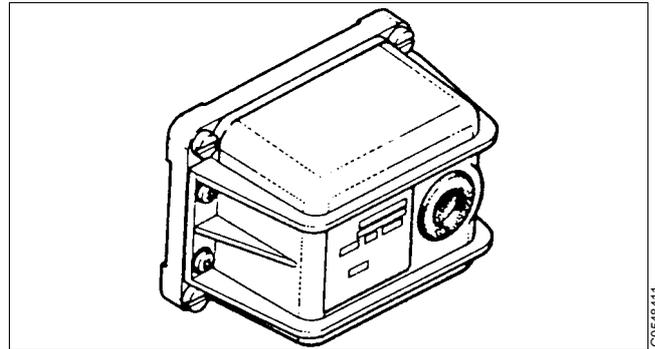

Vibration switch

G058411

5.4 Check points at Major Service (MS)

5.4.1 Bowl hood seal ring

Same as described in “5.3.1 Bowl hood seal ring” on page 58.

5.4.2 Bowl spindle cone and bowl body nave

Same as described in “5.3.2 Bowl spindle cone and bowl body nave” on page 59.


5.4.3 Bowl spindle; height position

If the bowl spindle has been removed, its height position relative to the frame ring must be checked.

- Place a steel ruler across the frame ring. Measure the distance between the spindle top and the underside of the steel ruler with a depth gauge or a graduated ruler.
- The distance (A) should be **24 ±1 mm**.
- The height position is adjusted by adding or removing height adjusting rings inside the bottom bearing housing.

NOTE

Before starting adjustment, tap the spindle top a few times with a tin hammer to ensure that the bottom bearing of the spindle is properly seated in the bottom bearing housing.

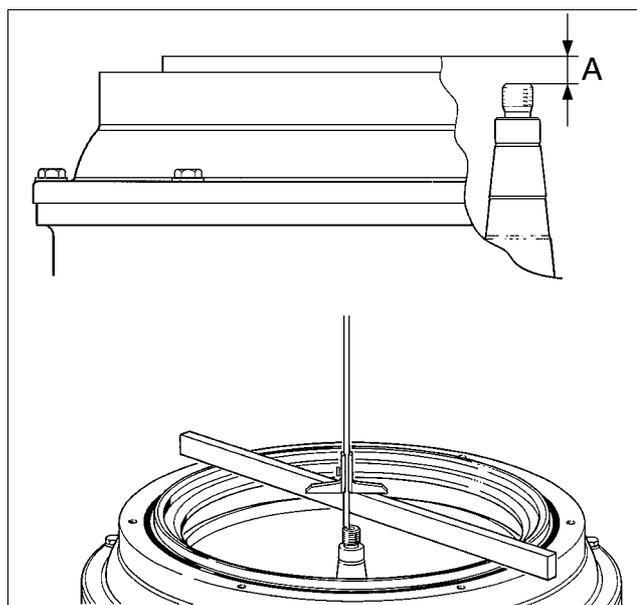

Measuring the bowl spindle height (A)

G0540111

5.4.4 Bowl spindle; radial wobble

The bowl spindle wobble should be checked if the bowl spindle has been dismantled or if rough bowl running (vibration) occurs.

NOTE


Spindle wobble will cause rough bowl run. This leads to vibration and reduces lifetime of ball bearings.

Check the wobble before mounting the bowl.

Before measuring, make sure that the buffer plugs are properly tightened.

- Fit a dial indicator in a support and fasten it to the frame.
- Remove the brake cover to get access to the coupling drum. Use the coupling drum to revolve the spindle manually.
- Measure the wobble at the top of the tapered end of the spindle. Permissible radial wobble is **maximum 0,04 mm**.
- If wobble is too large, renew all the ball bearings on the spindle.

Measure wobble after assembly. If it is still excessive, the spindle is probably damaged and must be replaced.

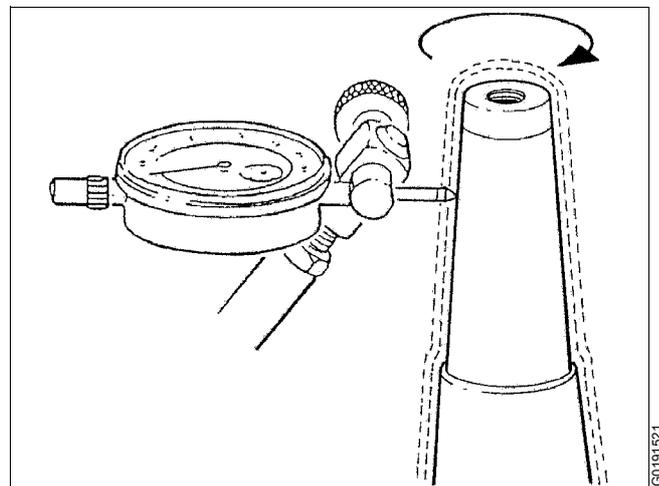

Measuring the radial wobble

G0191521

5.4.5 Brake

A worn or oily friction pad will lengthen the braking period.




CAUTION

Inhalation hazard

When handling friction blocks/pads use a dust mask to make sure not to inhale any dust.

Do not use compressed air for removal of any dust. Remove dust by vacuum or wet cloth.

See Safety instructions for environmental issues regarding correct disposal of used friction blocks/pads.

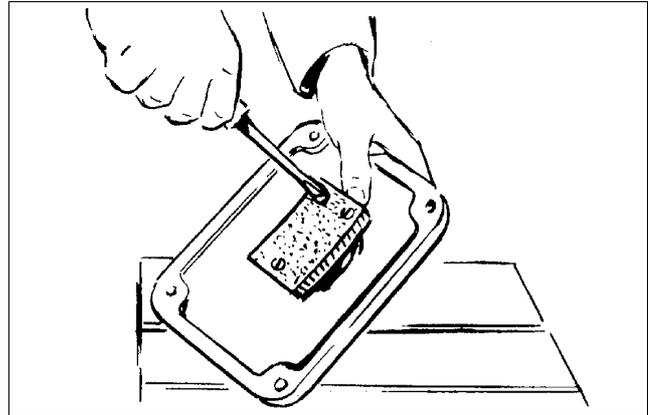

Friction pad is fastened with screws

If the friction pad is worn:

- Remove the screws and exchange the friction pad.

NOTE


The screws are slotted in both ends.

If the friction pad is oily:

- Clean the friction pad and the coupling drum with a suitable degreasing agent.
- Roughen the friction surface of the friction pad with a coarse file.

NOTE

Identify the cause of oily friction pad. If oil is leaking from the gear housing, renew the sealing ring between the two parts.

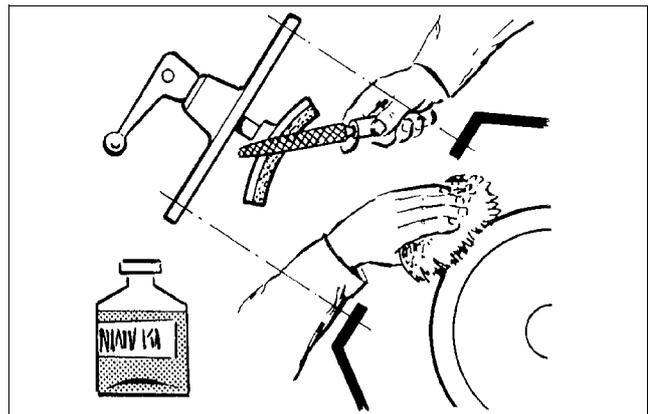


Actions to be taken when the brake friction pad is oily

Checking of spring and brake shoe:

Formation of rust on brake parts may cause the brake to jam.


- Remove any rust from the surface (1) of the brake shoe and the corresponding guide surface in the cap (2).
- Rub in Molykote Paste on the surfaces.
- Replace the spring (3) if it has become weak. This is indicated by chattering from the spring when the brake is in released position.
- Oil the spring when assembling.

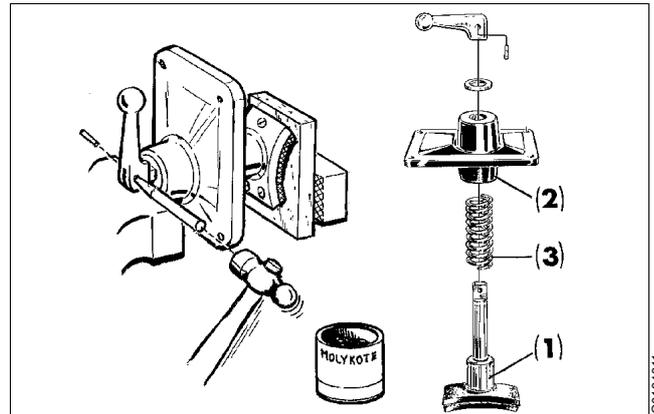

1. Contact surface on the brake shoe for the spring
2. Guide surface in the cap for the brake shoe
3. Spring

5.4.6 Buffer springs and ball bearing housing


Weakened or broken buffer springs or defective contact surfaces for the buffers on the ball bearing housing may give rise to separator vibration (rough bowl run).

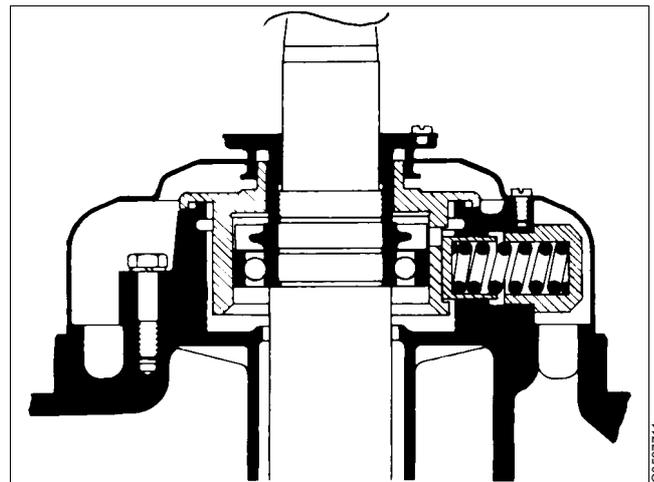

Cut view of ball bearing housing

Top bearing springs


In case of spring fracture, the complete set of springs should be replaced, even if only one spring is broken.

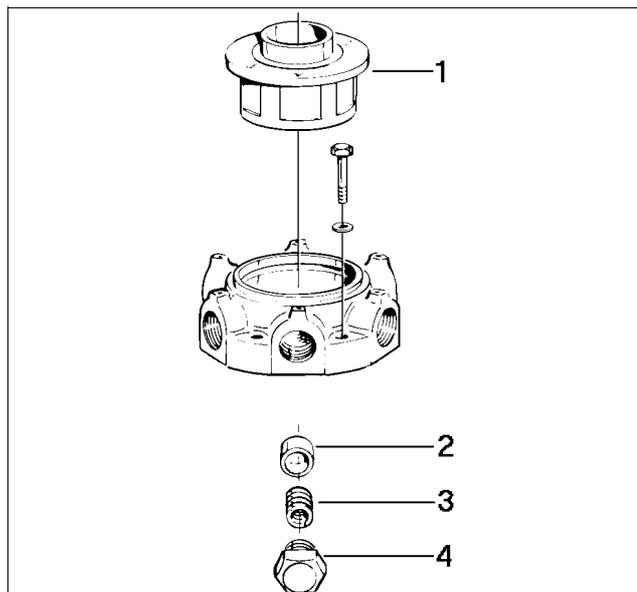

1. Ball bearing housing
2. Radial buffer
3. Buffer spring
4. Screw plug

Ball bearing housing

Examine the contact surface for the buffers on the ball bearing housing. In case of defects (indentations deeper than **0,5 mm**), renew the housing as well as buffers and springs.

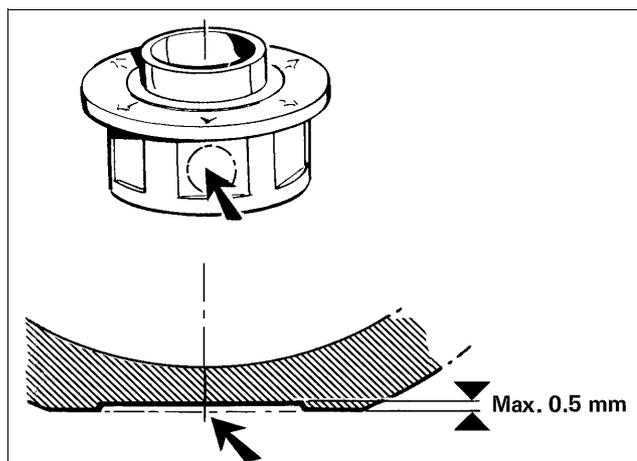

Max. permitted indentations made by radial buffers

5.4.7 Coupling friction pads

Worn or oily pads in the coupling will cause a long acceleration period.



CAUTION

Inhalation hazard

When handling friction blocks/pads use a dust mask to make sure not to inhale any dust.

Do not use compressed air for removal of any dust. Remove dust by vacuum or wet cloth.

See Safety instructions for environmental issues regarding correct disposal of used friction blocks/pads.

If the separator does not attain full speed within about 10 minutes or the bowl lose speed during operation, the friction pads of the coupling may be worn or oily.

Check the pads. If the pads are oily:

- Clean the pads and the inside of the coupling drum with a suitable degreasing agent. Roughen the friction surfaces of the pads with a coarse file.


If the pads are worn:

- Remove the screws and renew the pads.


NOTE

The screws are slotted in both ends.

Replace all pads even if only one is worn.

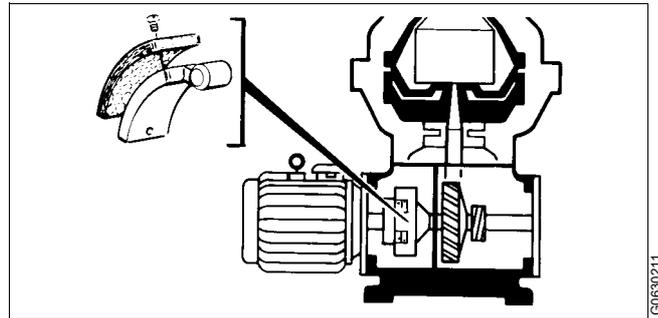


Location of coupling friction blocks

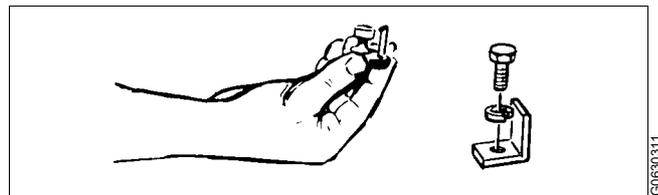


A friction block is fixed with screw, spring washer and holding bracket

How to renew friction pads without dismantled horizontal driving device.

- Remove the brake cap.
- Undo the screws of the holding brackets.
- Remove the holding brackets and friction blocks.
- Remove the screws and renew the pads.

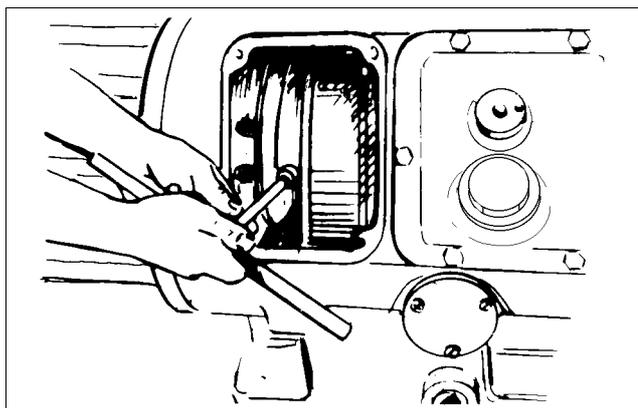

Unscrew the holding bracket screws to remove the friction blocks

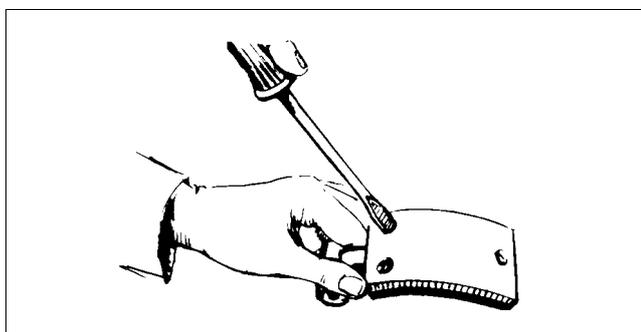

The screws fix the friction pad to the friction block


Different friction blocks for different power supply frequencies

If mounting new friction blocks, check that the blocks are correct for the power supply frequency. The measure A is different for 50 and 60 Hz separators

50 Hz: A = 20 mm

60 Hz: A = 5,5 mm

The thickness does not include the friction pad.

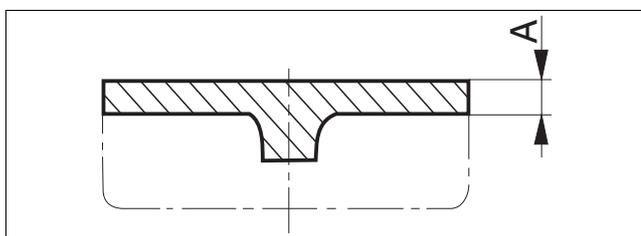

Measure A is different for 50 and 60 Hz installations

5.4.8 Corrosion

Same as described in [“5.3.3 Corrosion”](#) on page 59.

5.4.9 Cracks

Same as described in [“5.3.4 Cracks”](#) on page 62.

5.4.10 Disc stack pressure


Same as described in [“5.3.5 Disc stack pressure”](#) on page 63.

5.4.11 Erosion

Same as described in [“5.3.6 Erosion”](#) on page 65.

5.4.12 Flexible plate in coupling


The axial play (1) of the flexible plate should be approximately 2 mm.

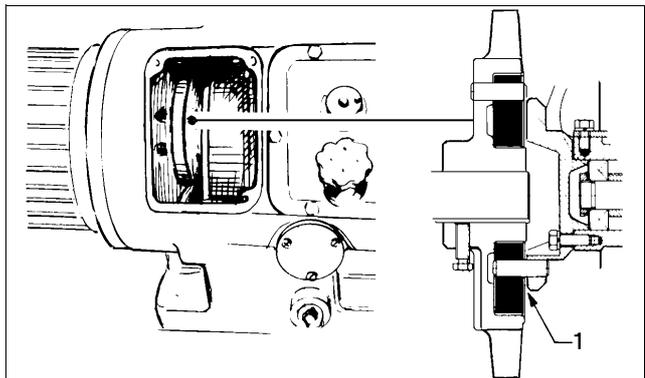

Location of the axial play (1) in the flexible coupling

Check the play as follows:

Measure the distance from the frame ring to the coupling disc of the separator.

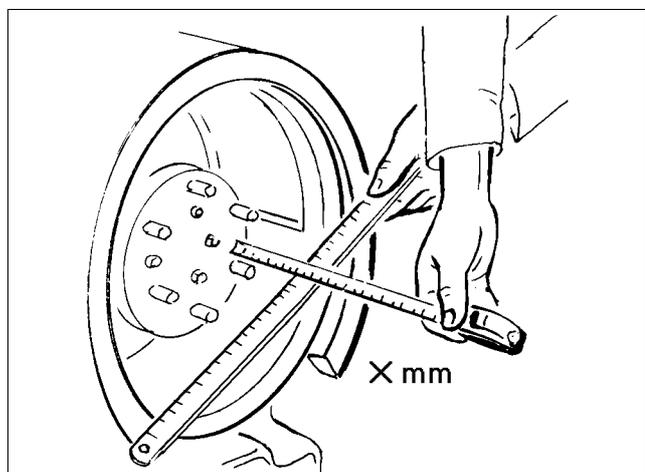


Measuring the distance for coupling in separator frame

Measure the distance from the motor coupling disc to the motor flange.

$$X \text{ mm} - Y \text{ mm} = 2 \text{ mm}$$

If required, adjust the position of the motor coupling disc.

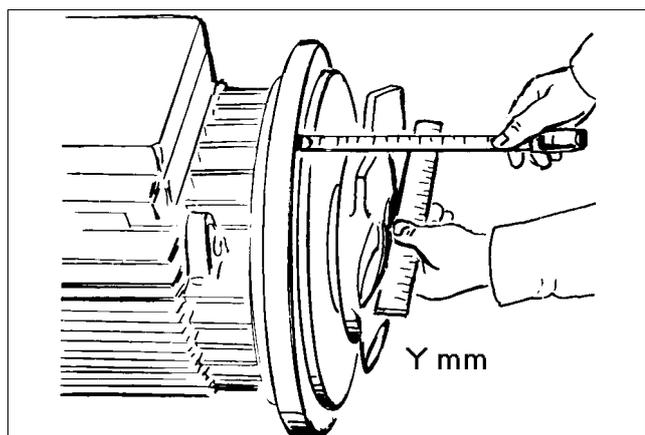

Measuring the distance for coupling on motor


5.4.13 Guide surfaces

Check surfaces indicated (1) for burrs or galling. Rectify when necessary.


Repair of galling on guiding surfaces, see “5.3.7 Guide surfaces” on page 67.

Treat the guide surfaces with slide lacquer in the following way:


1. Mask the nave hole of the bowl body. Slide lacquer must not enter this hole.
2. Carefully degrease the contact surfaces (1) between the sliding bowl bottom and bowl body. Dry the surfaces well.
3. Apply slide lacquer Molykote D321R with a well cleaned brush. Protect the surfaces which should not be treated.
4. Air-cure the treated surfaces for 15 minutes.
5. Use a smooth fibre brush to polish to an even, homogeneous contact film.
6. Apply slide lacquer a second time.
7. Air-cure the lacquer for a further 15 minutes.
8. Polish the film to a shiny surface. The film should look like well-polished leather when properly done.
9. Finish the treatment by lubricating the contact surfaces (A) with Alfa Laval lubricating paste or Molykote 1000 Paste. Use a well-cleaned brush. Rub it into the surface, do not leave any excessive paste.
10. Lubricate the O-ring and the seal ring with silicone grease and check that they lie properly in their grooves.

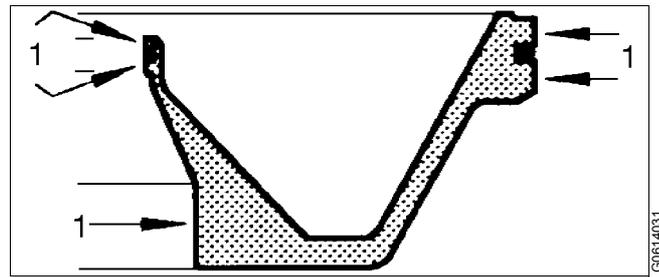

Sliding bowl bottom

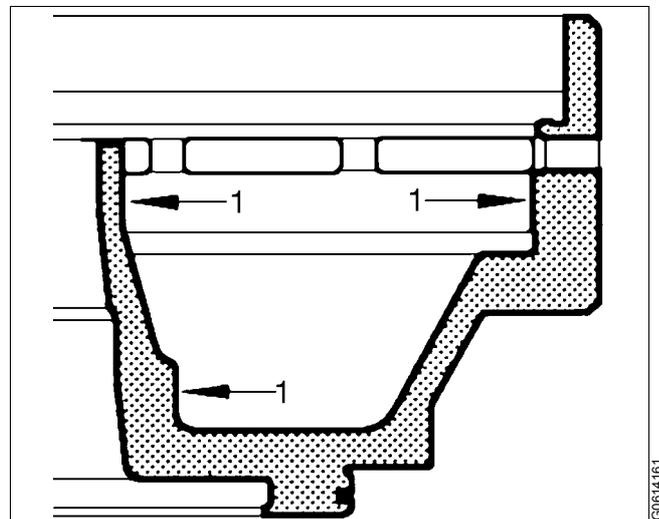

Bowl body

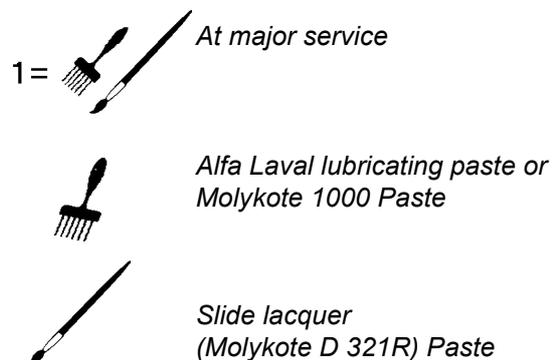

5.4.14 Inlet pipe and oil paring disc

Same as described in “5.3.8 Inlet pipe and oil paring disc” on page 69.

5.4.15 Level ring


Same as described in section “5.3.9 Level ring” on page 69.

5.4.16 Lock ring; priming

The arrows indicate positions of threads, guide and contact surfaces to be primed.


Recommended agents for priming procedure:

- Degreasing agent
- Lubricating spray Molykote 321 R
- Hand drilling machine
- 2 fibre brushes

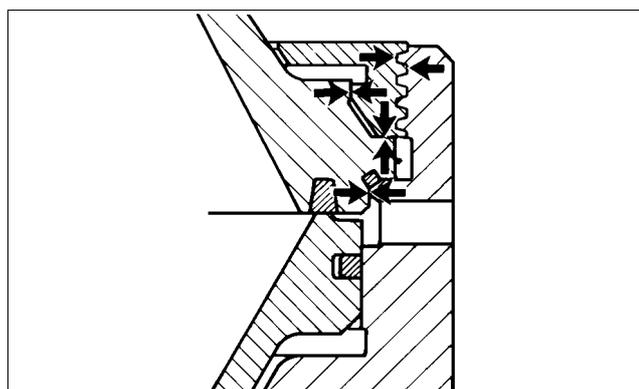


Threads, guide and contact surfaces to be primed


1. Clean the lock ring thoroughly with a degreasing agent and wipe it off.

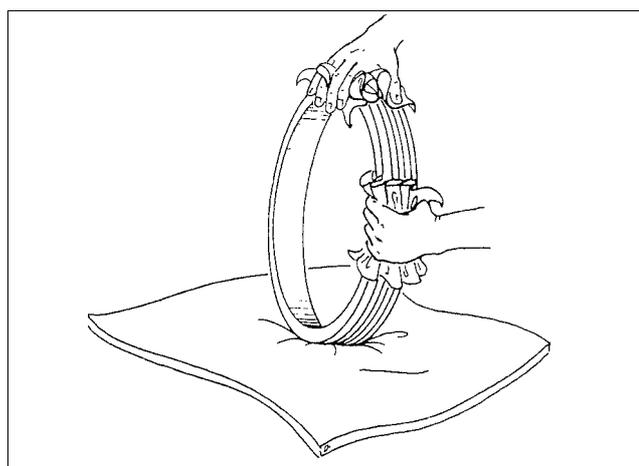


2. Spray the threads, guide and contact surfaces with slide lacquer Molykote 321 R. Let the lacquer air-cure for about 15 minutes.

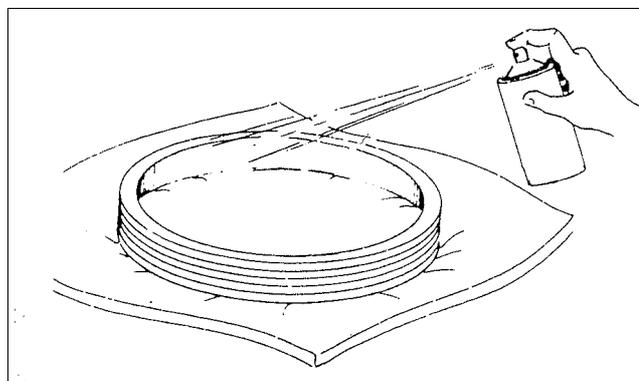


3. Use a fibre brush to polish the slide lacquer into the surface. The black spray will look like well-polished leather when properly done.

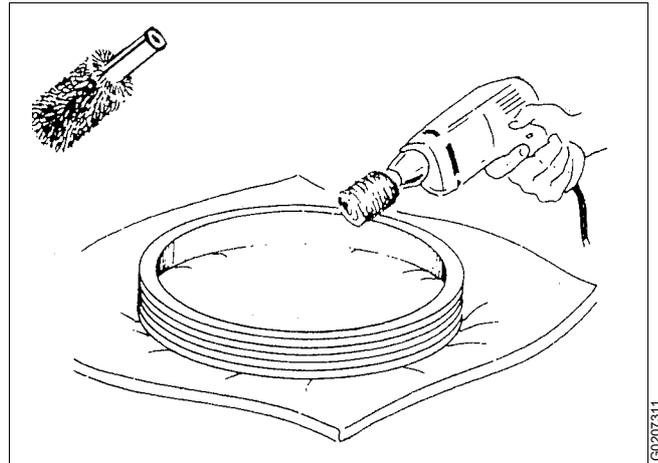

4. Spray the lock ring a second time and let it dry for about 15 minutes.

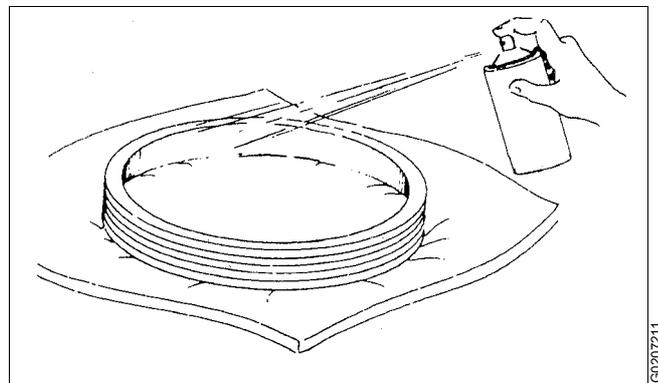

5. Polish the slide lacquer to a black shiny surface which can now last about a year. Proceed in the same way with the threads of the bowl body and with the guide surfaces of the bowl hood and bowl body.

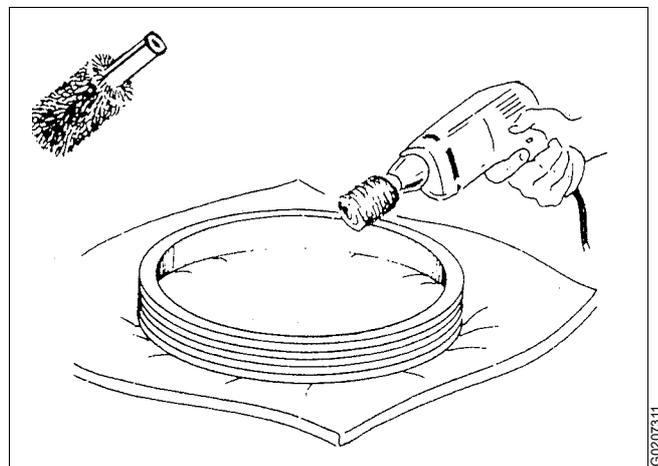

5.4.17 Lock ring; wear and damage

Same as described in section [“5.3.10 Lock ring; wear and damage”](#) on page 70.


5.4.18 Oil paring disc; height position

The height position of the oil paring disc (1) should be checked if the bowl spindle has been removed or the bowl has been replaced.

- Assemble the bowl without upper paring disc, gravity disc and paring chamber cover.
- Tighten the large lock ring until the bowl hood is in close contact with the bowl body.
- Put the frame hood in place and tighten it to the frame ring.
- Measure the distance A according to the figure. The distance should be **67 ±0,5 mm**.
- Adjust the distance by adding or removing height adjusting rings (2).

With inlet and outlet parts mounted:

- Revolve the worm wheel shaft by hand. If it turns heavily or if a scraping noise is heard, wrong height adjustment or wrong fitting of the inlet pipe may be the cause.

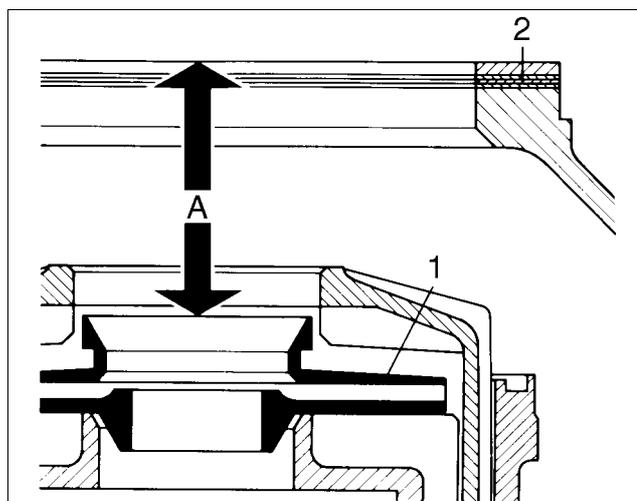

Measuring distance A

5.4.19 Operating mechanism

Same as described in section [“5.3.11 Operating mechanism”](#) on page 72.

5.4.20 Operating paring disc; height position

If the bowl spindle has been removed or the bowl has been replaced, the height position of the operating device relative to the bowl spindle top must be checked.

Correct measure (A) is $176 \pm 0,5$ mm.


- The operating water device should be assembled and fitted.
- Support the templet on the spindle top with the measurement indication 175,5 facing the spindle.

There should be a small gap between the lower end of the templet and the top face of the ring nut (1), otherwise the paring disc position is too high.


- Turn the templet so that the measurement indication on the other side (176,5) faces the spindle and the templet lower end supports on the paring disc.

There should be a small gap between the templet tongue and the spindle top, otherwise the paring disc position is too low.

- The height position is adjusted by adding or by removing height adjusting rings (4) under the distributing cover (3).
- After adjustment rotate the spindle. If a scraping noise is heard, re-adjust.

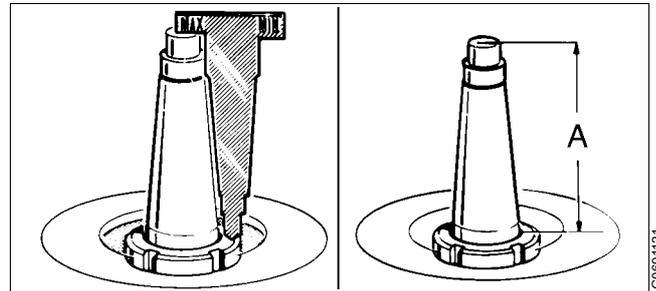

Measuring distance A

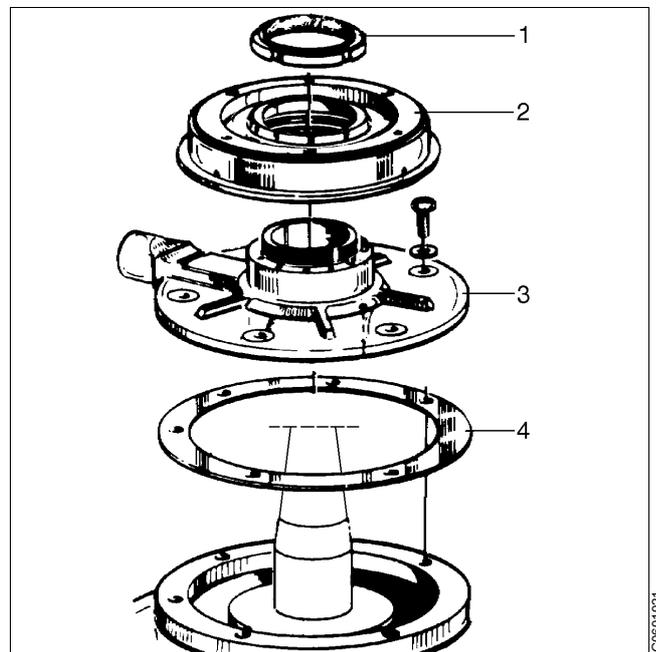

1. Ring nut
2. Paring disc assembly
3. Distributing cover
4. Height adjusting ring(s)

5.4.21 Operating slide

Same as described in section [“5.3.12 Operating slide”](#) on page 72.

5.4.22 Sliding bowl bottom


Same as described in section [“5.3.13 Sliding bowl bottom”](#) on page 73.

5.4.23 Springs for operating mechanism

Same as described in “5.3.14 Springs for operating mechanism” on page 74.

5.4.24 Worm; wear of groove

Renew the worm if the wear in the groove (1) which receives the conveyor exceeds **3-4 mm**.

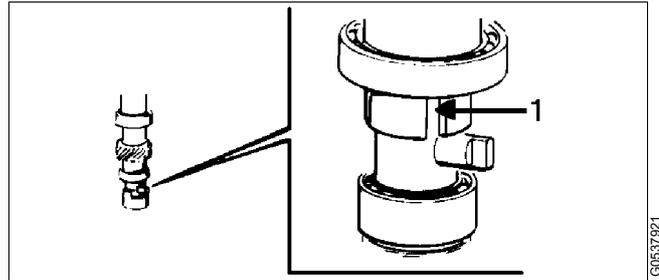

Measurement of wear in groove (1)

5.4.25 Worm wheel and worm; wear of teeth

Same as described in section “5.7.1 Worm wheel and worm; wear of teeth” on page 97.


5.4.26 Worm wheel shaft; radial wobble

Excessive wobble on the worm wheel shaft may cause vibration and noise.

Clamp a dial indicator in a magnetic support and fasten it to the surface for the worm wheel guard. Turn the worm wheel shaft by hand.

Permissible radial wobble is **maximum 0,10 mm**.

If the wobble is larger, the worm wheel shaft must be removed from the frame for closer examination. Get in touch with your Alfa Laval representative as the worm wheel shaft may need to be replaced.

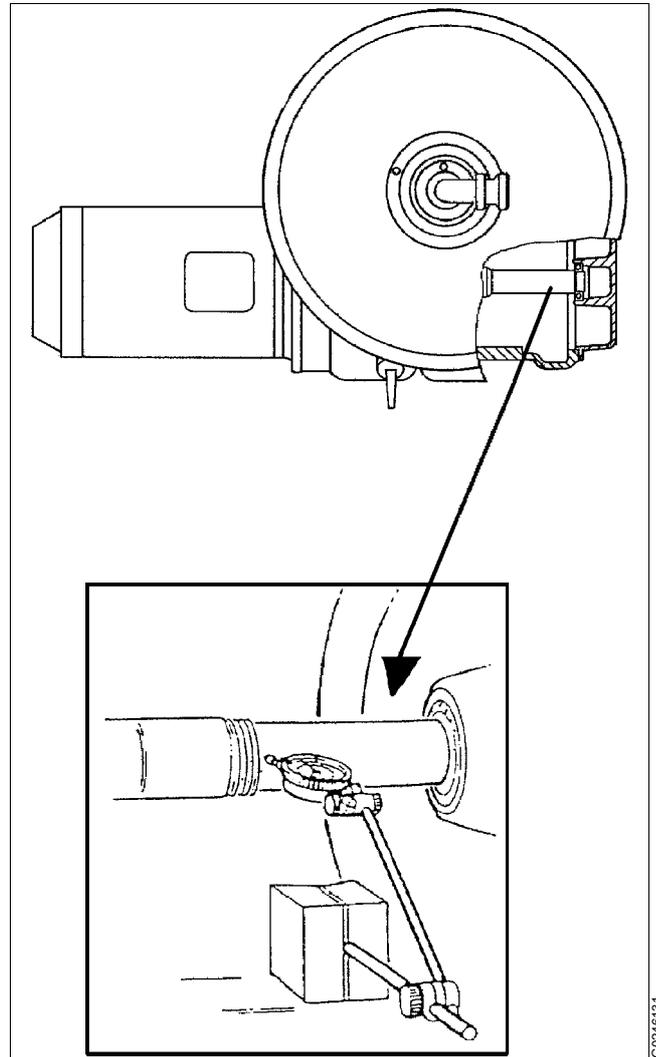

Measurement of the radial wobble

5.4.27 Cover interlocking switch (option)

Same as described in [“5.3.16 Cover interlocking switch \(option\)”](#) on page 74.

5.4.28 Vibration switch (option)

Same as described in [“5.3.17 Vibration switch \(option\)”](#) on page 75.

5.5 Lifting instructions

Attach three endless slings or cables to the lifting eyes (the screws must be tightened with spanner).

Length of each sling must be **min. 2 metres**.

NOTE

Machine weight without frame hood and bowl is approx. **850 kg**.

Do not lift the separator unless the frame hood and bowl have been removed.




WARNING

Crush hazards

Use only the three **special lifting eyes** (M16) for lifting the machine. They are to be screwed into the special threaded holes normally covered by the frame hood.

Other holes are **not** dimensioned for lifting the machine.

A falling separator can cause accidents resulting in serious injury to persons and damage to equipment.

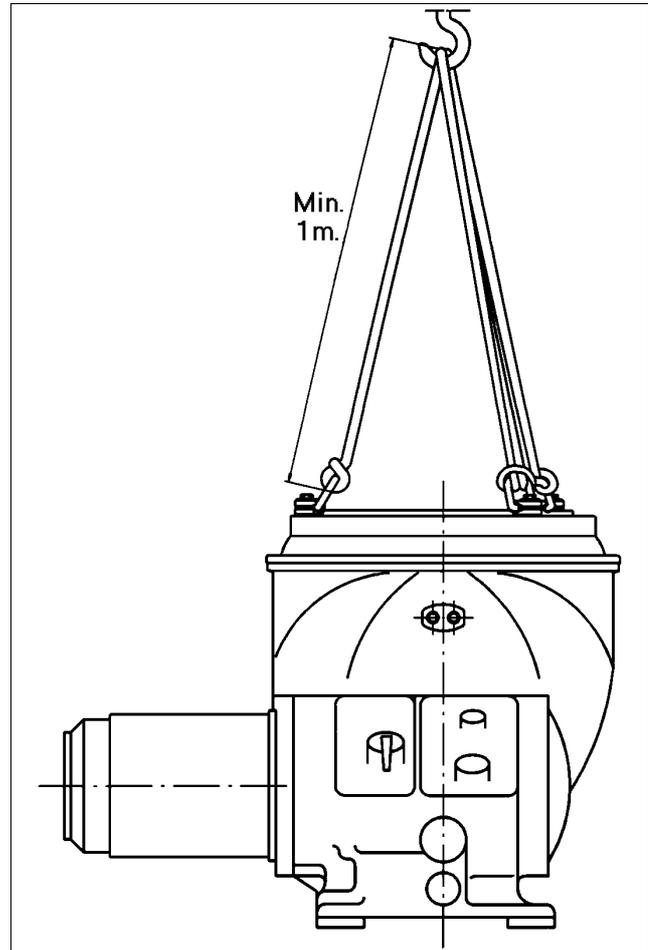

Lift the separator with the frame hood and bowl removed

When lifting the bowl, use the special lifting tool fastened on the bowl hood.


NOTE

Check that the lock ring is properly tightened.

The height of the lock ring above the bowl body must not exceed **12 mm**.

Weight to lift is approx. **300 kg**.

When lifting the bowl out of the separator frame, the cap nut fixing the bowl to the bowl spindle and the screws fixing the bowl body to the operating water device must first be removed.

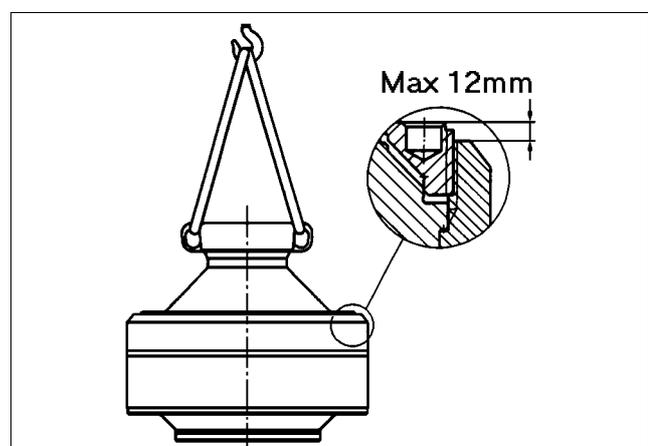

The lock ring must be properly tightened when lifting the bowl

5.6 Cleaning


5.6.1 External cleaning

The external cleaning of the frame and motor should be restricted to brushing, sponging or wiping while the motor is running or is still hot.


Never wash down a separator with a direct water stream. Totally enclosed motors can be damaged by direct hosing to the same extent as open motors and even more than those, because:

- Many operators believe that these motors are sealed, and normally they are not.
- A water jet played on these motors will produce an internal vacuum, which will suck the water between the metal-to-metal contact surfaces into the windings, and this water cannot escape.
- Water directed on a hot motor may cause condensation resulting in short-circuiting and internal corrosion.

Be careful even when the motor is equipped with a protecting hood. Never play a water jet on the ventilation grill of the hood.

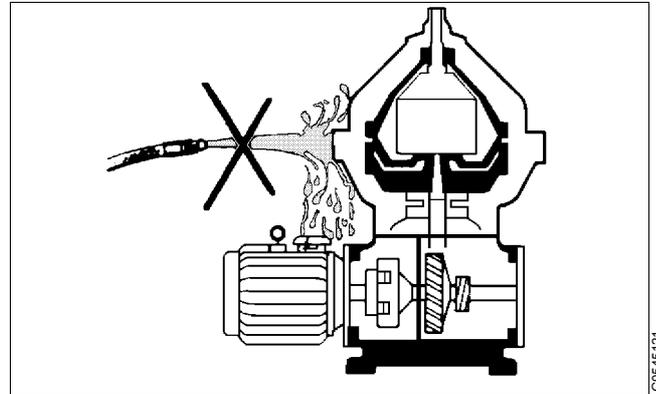

Never play a water jet on the motor or wash down a separator with a direct water stream

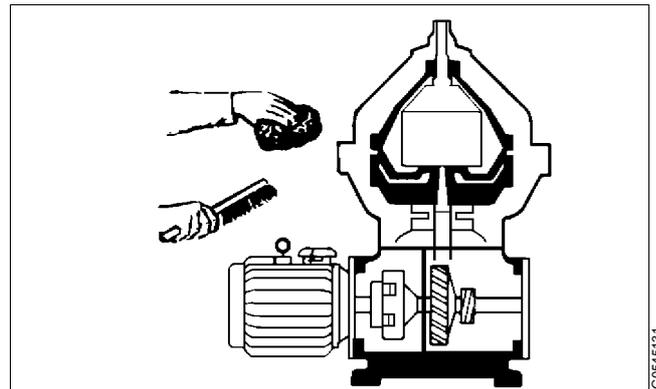

Use a sponge or cloth and a brush when cleaning

5.6.2 Cleaning agents

When using chemical cleaning agents, make sure you follow the general rules and suppliers' recommendations regarding ventilation, protection of personnel, etc.


For separator bowl, inlet and outlet

A chemical cleaning agent must dissolve the deposits quickly without attacking the material of the separator parts.

- For cleaning of **lube oil** separators the most important function of the cleaning agent is to be a good solvent for the gypsum in the sludge. It should also act as a dispersant and emulsifier for oil. It is recommended to use **Alfa Laval cleaning liquid for lube oil separators** which has the above mentioned qualities. Note that carbon steel parts can be damaged by the cleaning agent if submerged for a long time.
- **Fuel oil** sludge mainly consists of complex organic substances such as asphaltenes. The most important property of a cleaning liquid for the removal of fuel oil sludge is the ability to dissolve these asphaltenes.

Alfa Laval cleaning liquid for fuel oil separators has been developed for this purpose. The liquid is water soluble, non-flammable and does not cause corrosion of brass and steel. It is also gentle to rubber and nylon gaskets in the separator bowl.

Before use, dilute the liquid with water to a concentration of 3-5%. Recommended cleaning temperature is 50-70 °C.

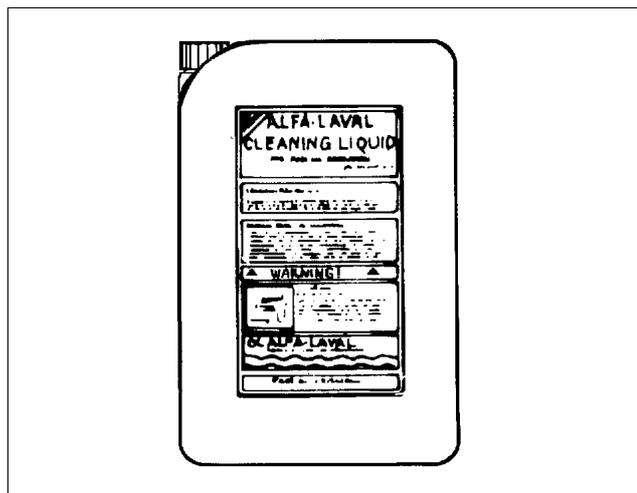

Alfa Laval cleaning liquid for fuel and lube oil separators

50008511



CAUTION

Skin irritation hazard

Read the instructions on the label of the plastic container before using the cleaning liquid.

Always wear safety goggles, gloves and protective clothing as the liquid is alkaline and dangerous to skin and eyes.

For operating mechanism

Use 10% acetic acid solution to dissolve lime deposits. The acid should be heated to 80 °C.

For parts of the driving devices

Use white spirit, cleaning-grade kerosene or diesel oil.

Oiling (protect surfaces against corrosion)

Protect cleaned carbon steel parts against corrosion by oiling. Separator parts that are not assembled after cleaning must be wiped and coated with a thin layer of clean oil and protected from dust and dirt.

5.6.3 Cleaning of bowl discs


Handle the bowl discs carefully so as to avoid damage to the surfaces during cleaning.

NOTE

Mechanical cleaning is likely to scratch the disc surfaces causing deposits to form quicker and adhere more firmly.

A gentle chemical cleaning is therefore preferable to mechanical cleaning.

1. Remove the bowl discs from the distributor and lay them down, **one by one**, in the cleaning agent.
2. Let the discs remain in the cleaning agent until the deposits have been dissolved. This will normally take between two and four hours.
3. Finally clean the discs with a **soft** brush.

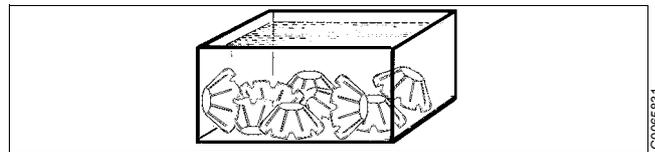


Put the discs one by one into the cleaning agent



Clean the discs with a soft brush

5.6.4 CIP-system

Alfa Laval has developed a CIP (Cleaning-In-Place) system specifically designed for cleaning the bowl and with the inlet and outlets of lube and fuel oil separators without the need of dismantling.

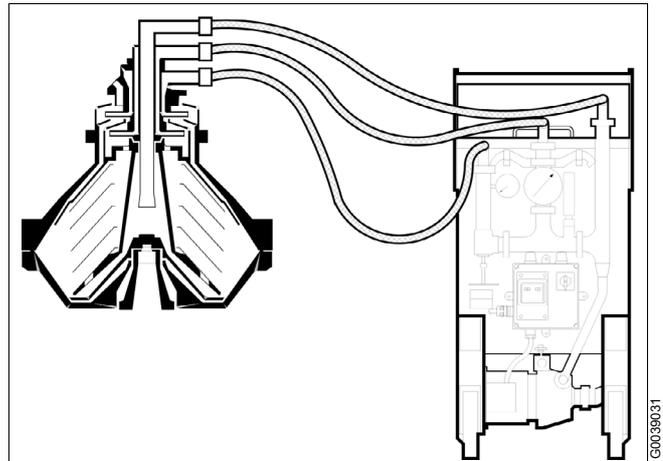

CIP Unit connected to separator

5.7 When changing oil

5.7.1 Worm wheel and worm; wear of teeth


To check at each oil change

Check the teeth of both the worm wheel and worm for wear. Examine the contact surfaces and compare the tooth profiles with the “[Tooth appearance examples](#)” on page 99. The gear may operate satisfactorily even when worn to some degree.

- Replace both worm wheel and worm at the same time, even if only one of them is worn.
- To avoid damaging the teeth when lifting the bowl spindle: push the worm wheel to one side first.

Position the spindle in correct place before fitting the worm wheel.

When replacing the gear, always make sure that the new worm wheel and worm have the same number of teeth as the old ones. See chapter “[8.2 Technical data](#)” on page 189 for correct number of teeth.

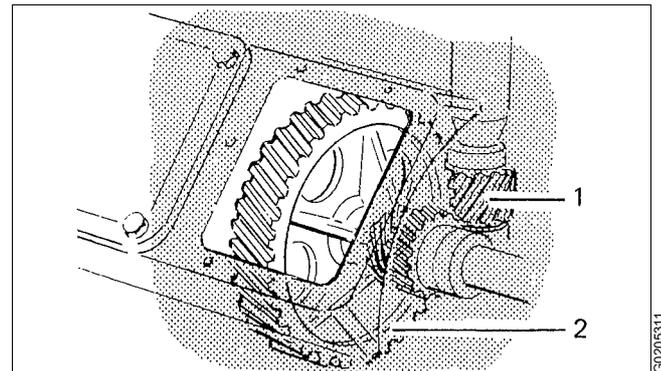


1. Worm
2. Worm wheel



WARNING

Disintegration hazards

Check that gear ratio is correct for power frequency used. If incorrect, subsequent overspeed may result in a serious breakdown.

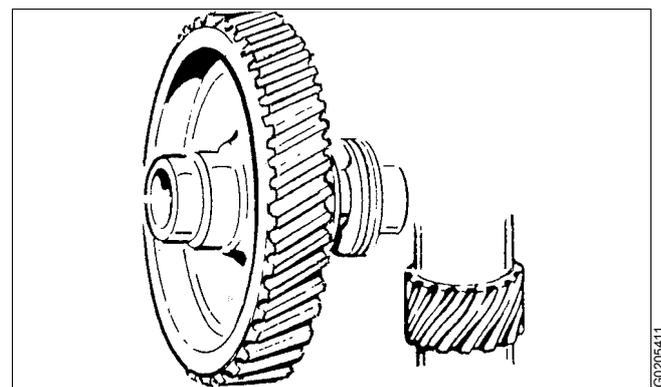

Check the gear ratio (number of teeth) when replacing the gear

NOTE

Presence of metal chips in the oil bath is an indication that the gear is wearing abnormally.

Important!

When using mineral-type oil in the worm gear housing, the presence of black deposits on the spindle parts is an indication that the oil base has deteriorated seriously or that some of the oil additives have precipitated. If pits are found on the worm gear, the cause could be that the additives are not suitable for this purpose.

In all these cases it is imperative to change to a high-temperature oil.


For further information, see chapter [“8.9 Lubricants”](#) on page 204.

Tooth appearance examples

Satisfactory teeth:

Uniform wear of contact surfaces. Surfaces are smooth.

Good contact surfaces will form on the teeth when the gear is subjected to only moderate load during its running-in period.

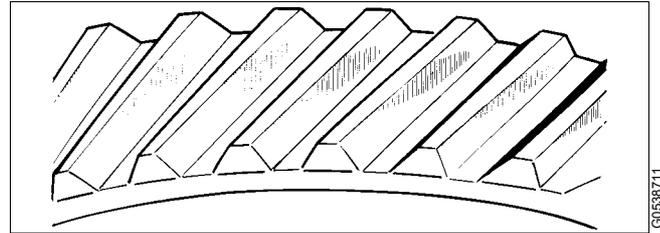


Satisfactory teeth

Worn teeth:

Permissible wear is as a rule 1/3 of the thickness of the upper part of a tooth, provided that


- the wear is uniform over the whole of the flank of a tooth
- and all teeth are worn in the same way.

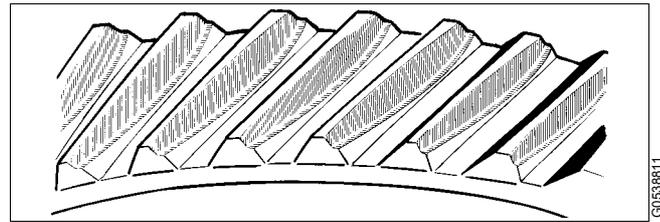

Worn teeth

Spalling:


Small bits of the teeth have broken off, so-called spalling. This is generally caused by excessive load or improper lubrication. Damage of this type need not necessitate immediate replacement, but careful checking at short intervals is of imperative importance.

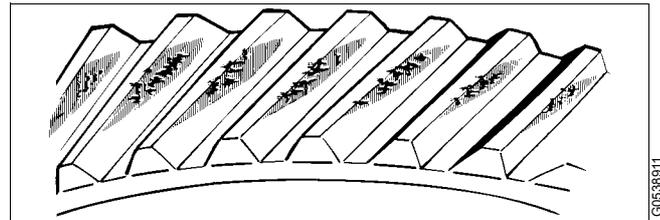

Spalling

Pitting:

Small cavities in the teeth, so-called pitting, can occur through excessive load or improper lubrication. Damage of this type need not necessitate immediate replacement, but careful check at short intervals is of imperative importance.

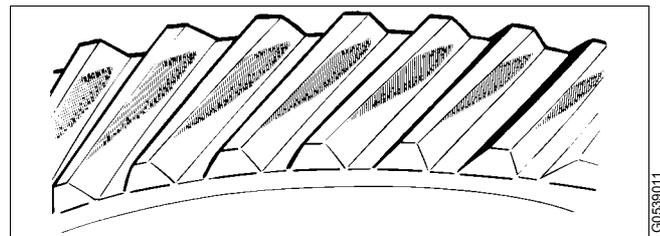


Pitting

5.7.2 Oil change procedure

NOTE

Before adding or renewing lubricating oil in the worm gear housing, the information concerning different oil groups, handling of oils, oil change intervals etc. given in chapter [“8.9 Lubricants” on page 204](#) must be well known.

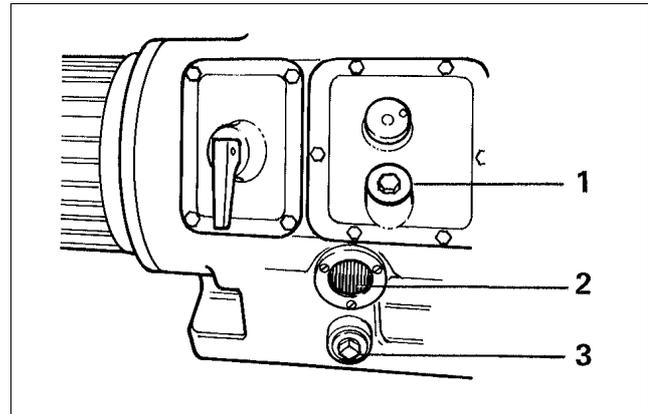

1. Oil filling plug
2. Sight glass
3. Oil drain plug


1. Place a collecting tray under the drain hole, remove the drain plug and drain off the oil.



CAUTION

Burn hazards

Lubricating oil and various machine surfaces can be sufficiently hot to cause burns.

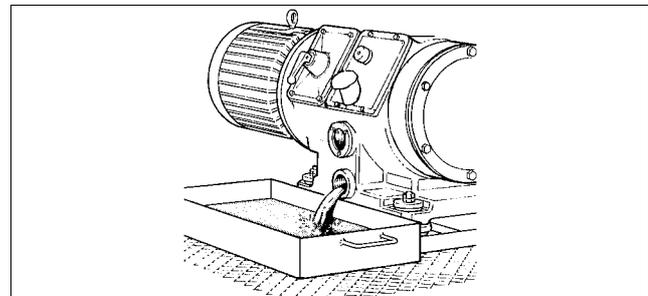


Burn hazards: The drained oil can be hot

2. Fill new oil in the worm gear housing. The oil level should be exactly in the middle of the sight glass:
Oil volume: approx. **12 litres**.
Suitable oil brands can be found in [“8.9.2 Recommended lubricating oils” on page 205](#).

NOTE

During operation the oil level must be slightly below the middle of the sight glass.

If the oil level is too high, the lifetime of the rolling bearings will be reduced due to high temperature.

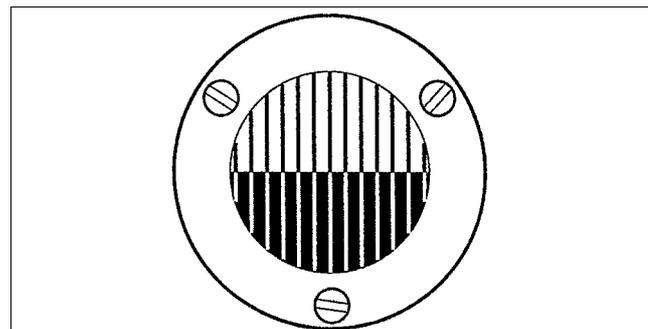

The oil level must not be above the middle of the sight glass

5.8 Vibration

5.8.1 Vibration analysis

Excessive vibration or noise indicates that something is incorrect. Stop the separator and identify the cause.

Use vibration analysis instrument to periodically check and record the level of vibration. See the illustration where to take measurements.

NOTE

The level of vibration should not exceed **11,2 mm/s** at full speed.




WARNING

Disintegration hazards

If excessive vibration occurs, **stop** separator and **keep bowl filled** with liquid during rundown.

The cause of the vibration must be identified and corrected before the separator is restarted. Excessive vibration can be due to incorrect assembly or poor cleaning of the bowl.

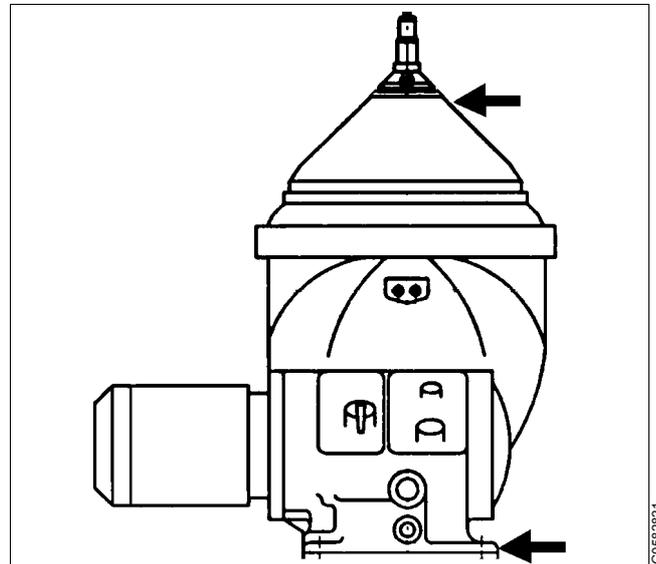

Measuring points for vibration analysis


001652821

5.8.2 Vibration switch (option)

Adjustment of setpoint

The vibration switch is adjusted with the separator in operation. The cover must be removed to gain access to the setpoint adjusting screw (1).

1. Back-off the setpoint adjusting screw counter-clockwise (A) two or three turns. Press the reset button. If the armature does not remain in the reset position, turn the adjusting screw another turn or two until the armature stays in position when the reset button is pressed.
2. Now turn the adjusting screw slowly clockwise until the armature rocks. Mark this position with a line immediately in front-of the adjusting screw pointer (2).
3. Back-off the adjusting screw counter-clockwise a three-quarter turn. Press the reset button. If the armature now rocks, turn the adjusting screw counter-clockwise another quarter turn and so on until the armature remains in the reset position.
4. Refit the cap and fasten with the screws.

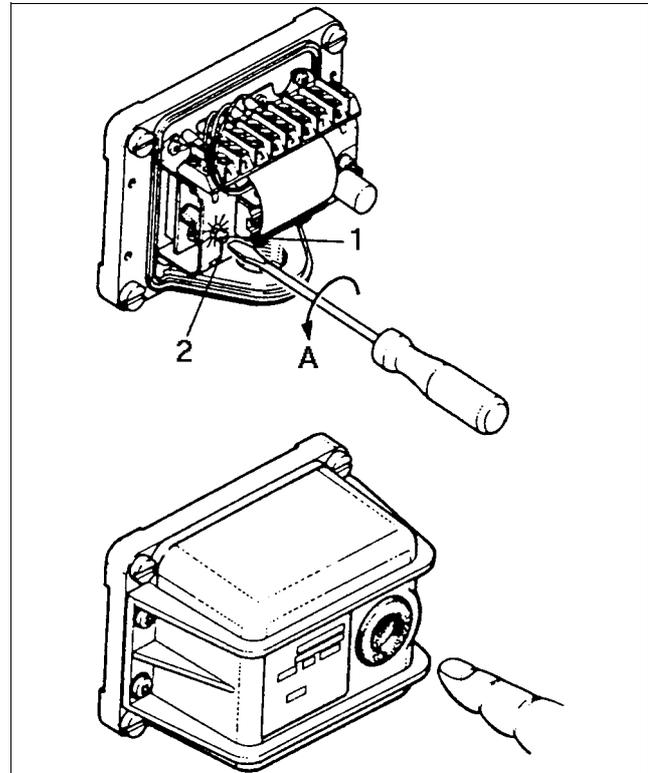

Setpoint adjustment

1. Adjusting screw
2. Pointer
- A. Direction of increased set point (admit higher vibration)

NOTE

Further adjustment may become necessary if alarm occurs due to vibration from surrounding equipment.

5.9 Common maintenance directions

5.9.1 Ball and roller bearings

Special-design bearings for the bowl spindle

The bearings used for the bowl spindle are special to withstand the speed, vibration, temperature and load characteristics of high-speed separators.


Only Alfa Laval genuine spare parts should be used.

A bearing that in appearance looks equivalent to the correct may be considerably different in various respects: inside clearances, design and tolerances of the cage and races as well as material and heat treatment.

NOTE

Using an incorrect bearing can cause a serious breakdown with damage to equipment as a result.

Do not re-fit a used bearing. Always replace it with a new.

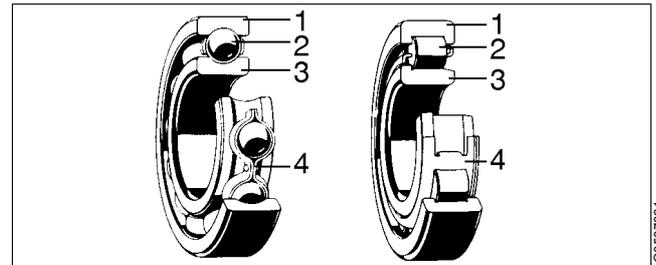

1. Outer race
2. Ball/roller
3. Inner race
4. Cage


Dismantling

For bearings where no driving-off sleeve is included in the tool kit, remove the bearing from its seat by using a puller. If possible, let the puller engage the inner ring, then remove the bearing with a steady force until the bearing bore completely clears the entire length of the cylindrical seat.

The puller should be accurately centered during dismantling; otherwise, it is easy to damage the seating.

NOTE

Do not hit with a hammer directly on the bearing.

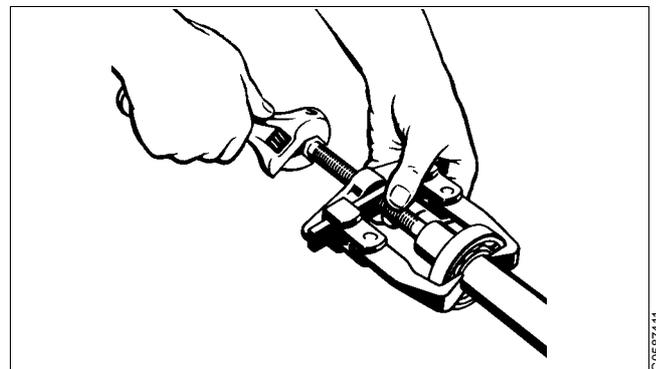


For bearings where no driving-off sleeve is included in the tool kit, use a puller when removing bearings

Cleaning and inspection


Check shaft (spindle) end and/or bearing seat in the housing for damage indicating that the bearing has rotated on the shaft (spindle) and/or in the housing respectively. Replace the damaged part(s), if the faults cannot be remedied by polishing.

Assembly

- Leave new bearings in original wrapping until ready to fit. The anti-rust agent protecting a new bearing should not be removed before use.
- Use the greatest cleanliness when handling the bearings.
- To facilitate assembly and also reduce the risk of damage, first clean and then lightly oil the bearing seating on shaft (spindle) or alternatively in housing, with a thin oil.
- When assembling ball bearings, the bearings must be heated in oil to **max. 125 °C**.

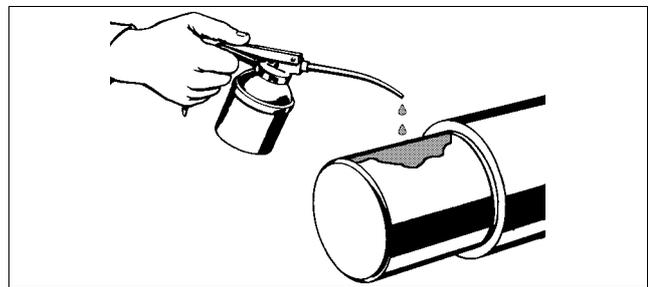

Clean and lightly oil the bearing seating before assembly

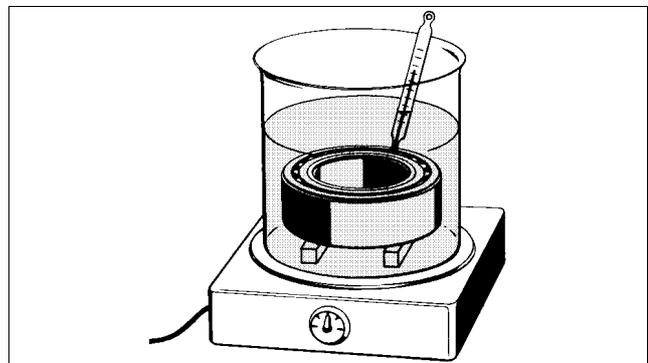

The bearing must not be in direct contact with the container

NOTE

Heat the bearing in a clean container.

Use only clean oil with a flash point above 250 °C.

The bearing must be well covered by the oil and not be in direct contact with the sides or the bottom of the container. Place the bearing on some kind of support or suspended in the oil bath.




WARNING

Burn hazards

Use protective gloves when handling the heated bearings.


- There are several basic rules for assembling cylindrical bore bearings:
 - Never directly strike a bearing's rings, cage or rolling elements while assembling. A ring may crack or metal fragments break off.
 - Never apply pressure to one ring in order to assemble the other.
 - Use an ordinary hammer. Hammers with soft metal heads are unsuitable as fragments of the metal may break off and enter the bearing.
 - Make sure the bearing is assembled at a right angle to the shaft (spindle).
- If necessary use a driving-on sleeve that abuts the ring which is to be assembled with an interference fit, otherwise there is a risk that the rolling elements and raceways may be damaged and premature failure may follow.

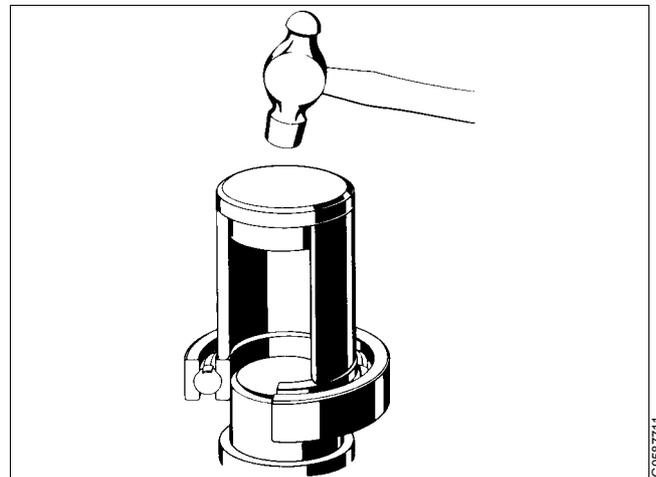

Use a driving-on sleeve for bearings that are not heated

Angular contact ball bearings

Always fit single-row angular contact ball bearings with the wide shoulder of the inner race facing the axial load (upwards on a bowl spindle).

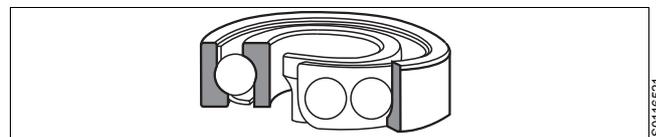

The wide shoulder of the inner race must face the axial load

5.9.2 Before shutdowns

Before the separator is shut-down for a period of time, the following must be carried out:

- Remove the bowl, according to instructions in chapter [“6 Dismantling/Assembly”](#) on page 107.

NOTE

The bowl must not be left on the spindle during standstill for more than one week.


Vibration in foundations can be transmitted to the bowl and produce one-sided loading of the bearings. The resultant indentations in the ball bearing races can cause premature bearing failure.

- Protect cleaned carbon steel parts against corrosion by oiling. Separator parts that are not assembled after cleaning must be wiped and protected against dust and dirt.
- If the separator has been shut-down for more than 3 months but less than 12 months, an Intermediate Service (IS) has to be made. If the shut-down period has been longer than 12 months, a Major Service (MS) should be carried out.

6 Dismantling/Assembly

Contents

6.1 Introduction	108	6.7 Horizontal driving device (MS)	152
6.1.1 General directions	108	6.7.1 Exploded view	152
6.1.2 References to check points	109	6.7.2 Dismantling	154
6.1.3 Tools	109	6.7.3 Assembly	159
6.2 Inlet/outlet, frame hood (IS)	110	6.8 Feed pump (MS) (option)	166
6.2.1 Exploded view	110	6.8.1 Exploded view	166
6.2.2 Dismantling	111	6.8.2 Dismantling	168
6.2.3 Assembly	112	6.8.3 Cleaning and inspection	170
6.3 Bowl hood and disc stack (IS)	114	6.8.4 Assembly	171
6.3.1 Exploded view	114		
6.3.2 Dismantling	115		
6.3.3 Assembly	121		
6.4 Bowl body and operating mechanism (IS)	127		
6.4.1 Exploded view	127		
6.4.2 Dismantling	128		
6.4.3 Assembly	131		
6.5 Operating water device (IS)	136		
6.5.1 Exploded view	136		
6.5.2 Dismantling	137		
6.5.3 Assembly	138		
6.6 Vertical driving device (MS)	140		
6.6.1 Exploded view	140		
6.6.2 Dismantling	142		
6.6.3 Assembly	147		

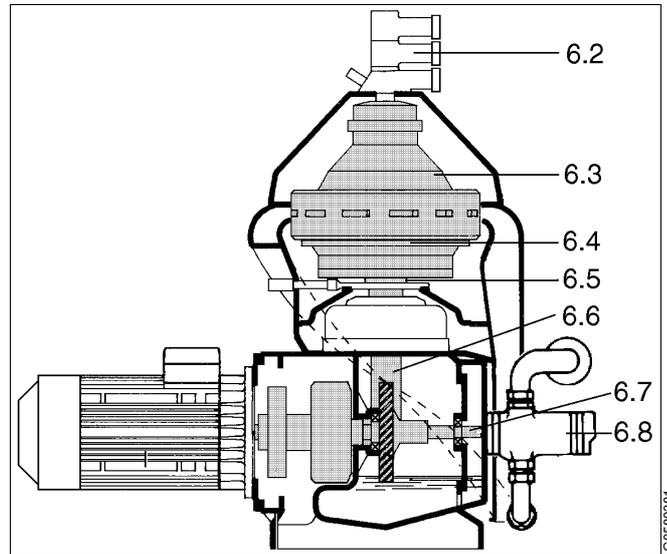

6.1 Introduction

6.1.1 General directions

The separator must be dismantled regularly for cleaning and inspection.

The recommended intervals are stated in chapter “5.1.2 Maintenance intervals” on page 47.




WARNING

Entrapment hazard

Make sure that rotating parts have come to a **complete standstill** before starting **any** dismantling work.

The revolution counter and the motor fan indicate if separator parts are rotating or not.

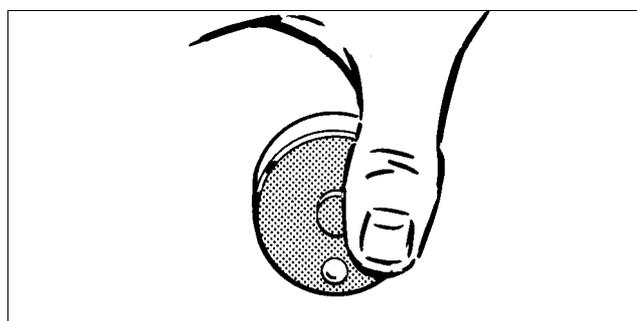

The revolution counter indicates if the separator still is rotating

The frame hood and heavy bowl parts must be lifted by hoist. Position the hoist directly above the bowl centre. Use an endless sling and a lifting hook with catch.

These parts must be handled carefully.

Do not place parts directly on the floor, but on a clean rubber mat, fibreboard or a suitable pallet.

NOTE

Never interchange bowl parts

To prevent mixing of parts, e.g. in an installation comprising several machines of the same type, the major bowl parts carry the machine manufacturing number or its last three digits.

6.1.2 References to check points

In the text you will find references to the Check point instructions in chapter 5. The references appear in the text as in the following example:

4 Check point

[“5.3.5 Disc stack pressure” on page 63.](#)

In this example, look up check point Disc stack pressure in chapter 5 for further instructions.

6.1.3 Tools

Special tools from the tool box must be used for dismantling and assembly. The special tools are specified in the *Spare Parts Catalogue* and are shown as illustrations together with the dismantling/assembly instructions.


NOTE

When lifting parts without weight specifications, always use lifting straps with the capacity of at least **500 kg**.

6.2 Inlet/outlet, frame hood (IS)

6.2.1 Exploded view

1. O-ring
2. Inlet pipe
3. Support
4. Pressure gauge
5. Rectangular ring
6. Support
7. Rectangular ring
8. Connecting housing
9. Sight glass
10. Screw
11. Protecting washer
12. Height adjusting ring(s)
13. Frame hood
14. Screw
15. Washer

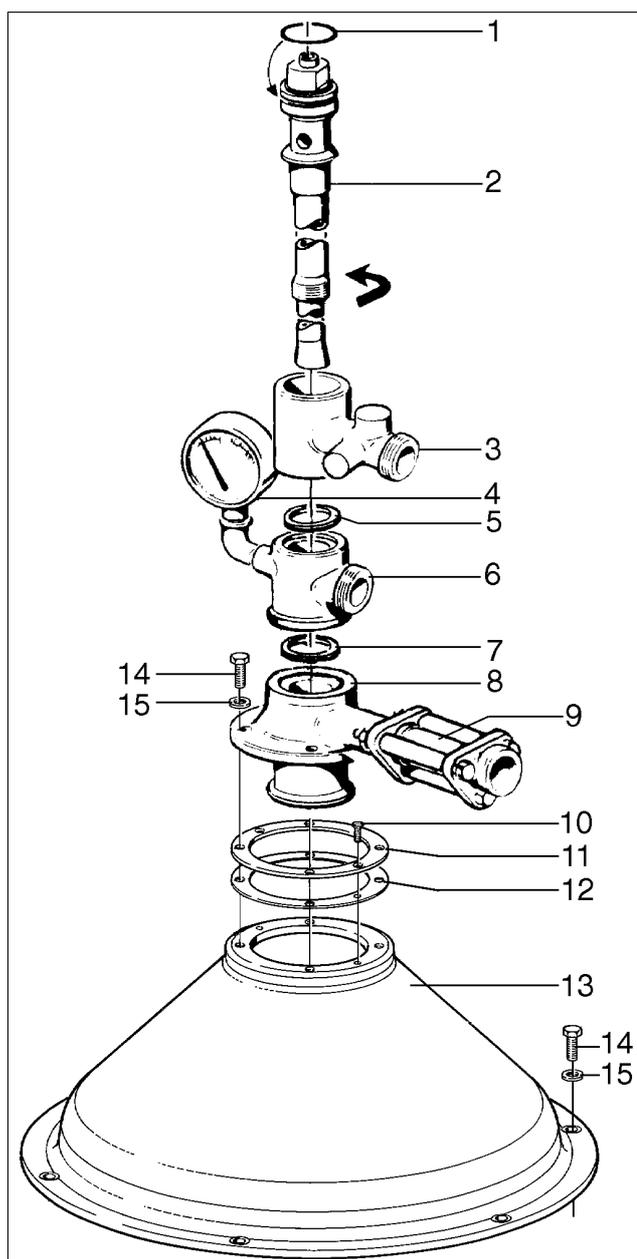

GC0691211

6.2.2 Dismantling




WARNING

Entrapment hazards


1. Make sure that rotating parts have come to a **complete standstill** before starting **any** dismantling work.

The revolution counter and the motor fan indicates if separator parts are rotating or not.

2. To avoid accidental start, switch off and lock power supply before starting **any** dismantling work.

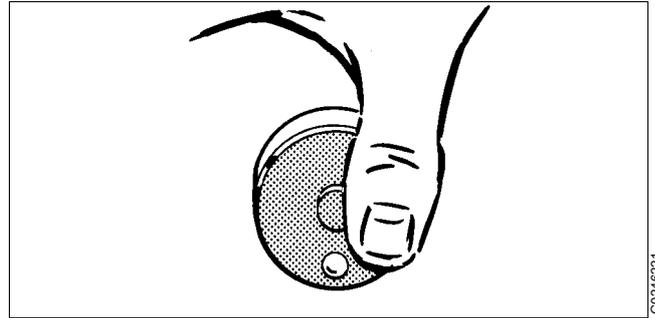

G0246221

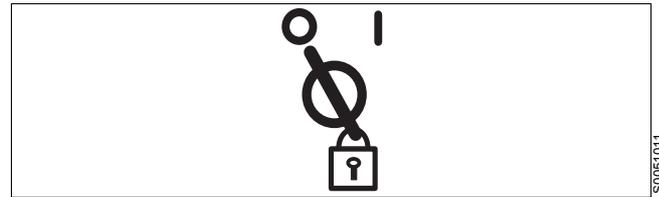


S0051011

The frame hood and the heavy bowl parts must be lifted by means of a hoist. Position the hoist exactly above the bowl centre. Use an endless sling and a lifting hook with catch.


The parts must be handled carefully. Don't place parts directly on the floor, but on a clean rubber mat, fibreboard or a suitable pallet.

1. Disconnect and remove the hose for liquid seal/displacement water.
2. Unscrew the inlet pipe and lift out carefully.
Left-hand thread!

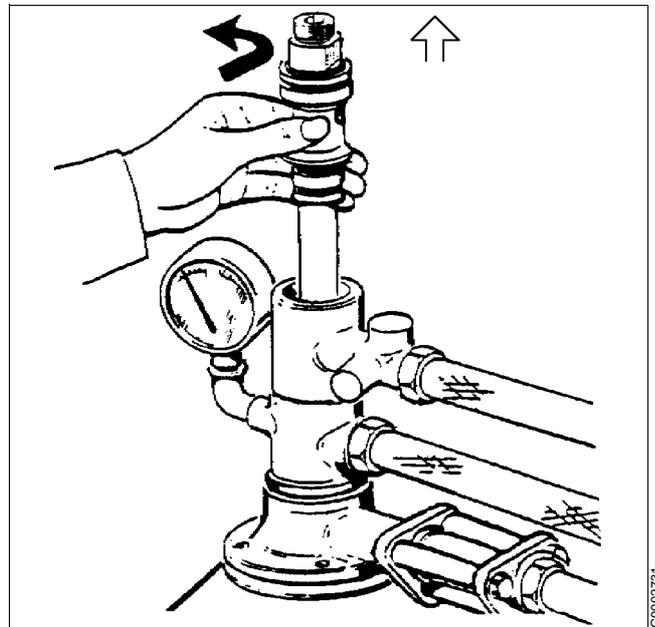


G0002731

3. Remove the inlet and outlet piping supports and the connecting housing. Take care of the rectangular rings.

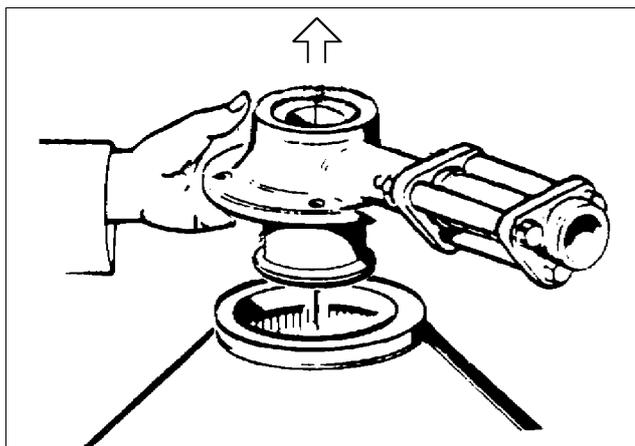


G0691321

4. Remove the six screws for the frame hood and lift it off by using the two lifting eyes.

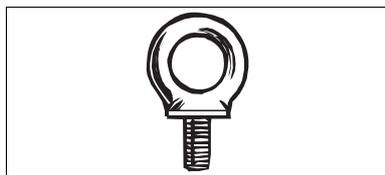

S0078111

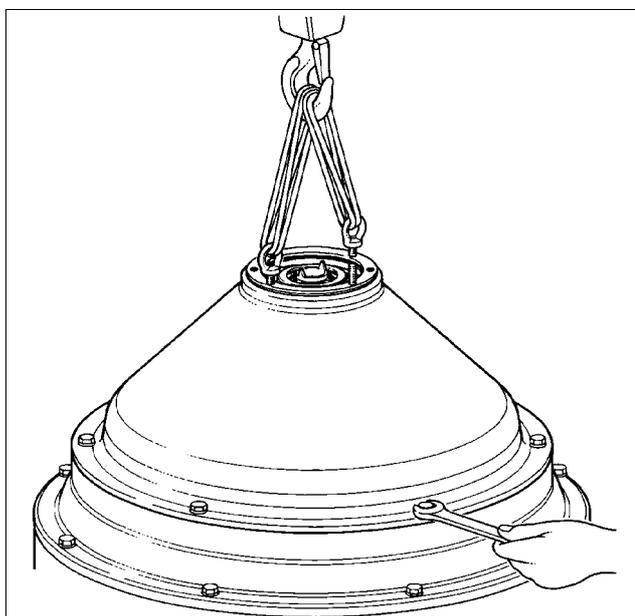

G0550921


6.2.3 Assembly

1. Put the frame hood in place and tighten it with the six screws.

4 Check point

“5.4.18 Oil paring disc; height position” on page 88 (only when Major Service).

2. Fit the connecting housing and the inlet and outlet piping supports. The rectangular rings situated in between should be lubricated.

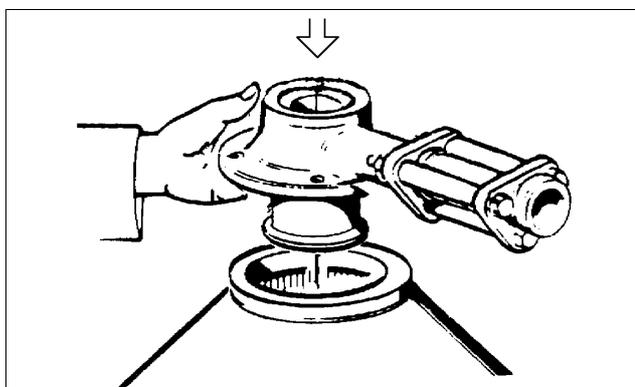


G0691311

3. Lubricate the O-ring of the inlet pipe.
Fit the inlet pipe and tighten it firmly.
Left-hand thread!
4. Connect the displacement/liquid seal water hose.

**WARNING****Disintegration hazards**


When power cables have been connected, always check direction of rotation, see [“4.1.3 Ready for start” on page 40](#). If incorrect, vital rotating parts could unscrew causing disintegration of the machine.

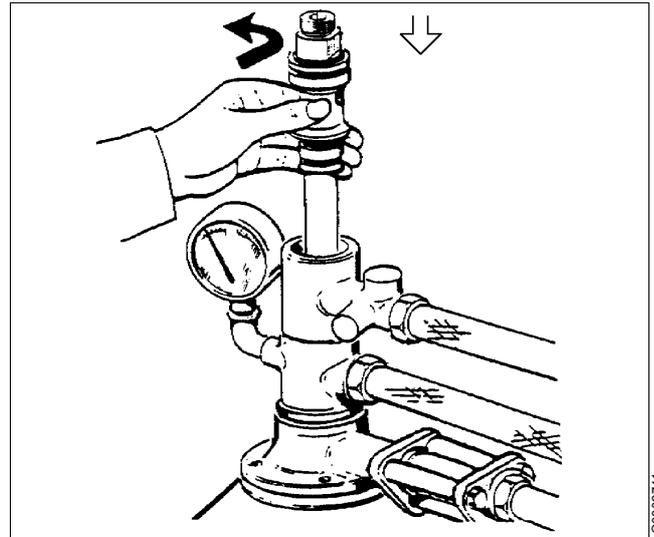

G0002741

6.3 Bowl hood and disc stack (IS)

6.3.1 Exploded view

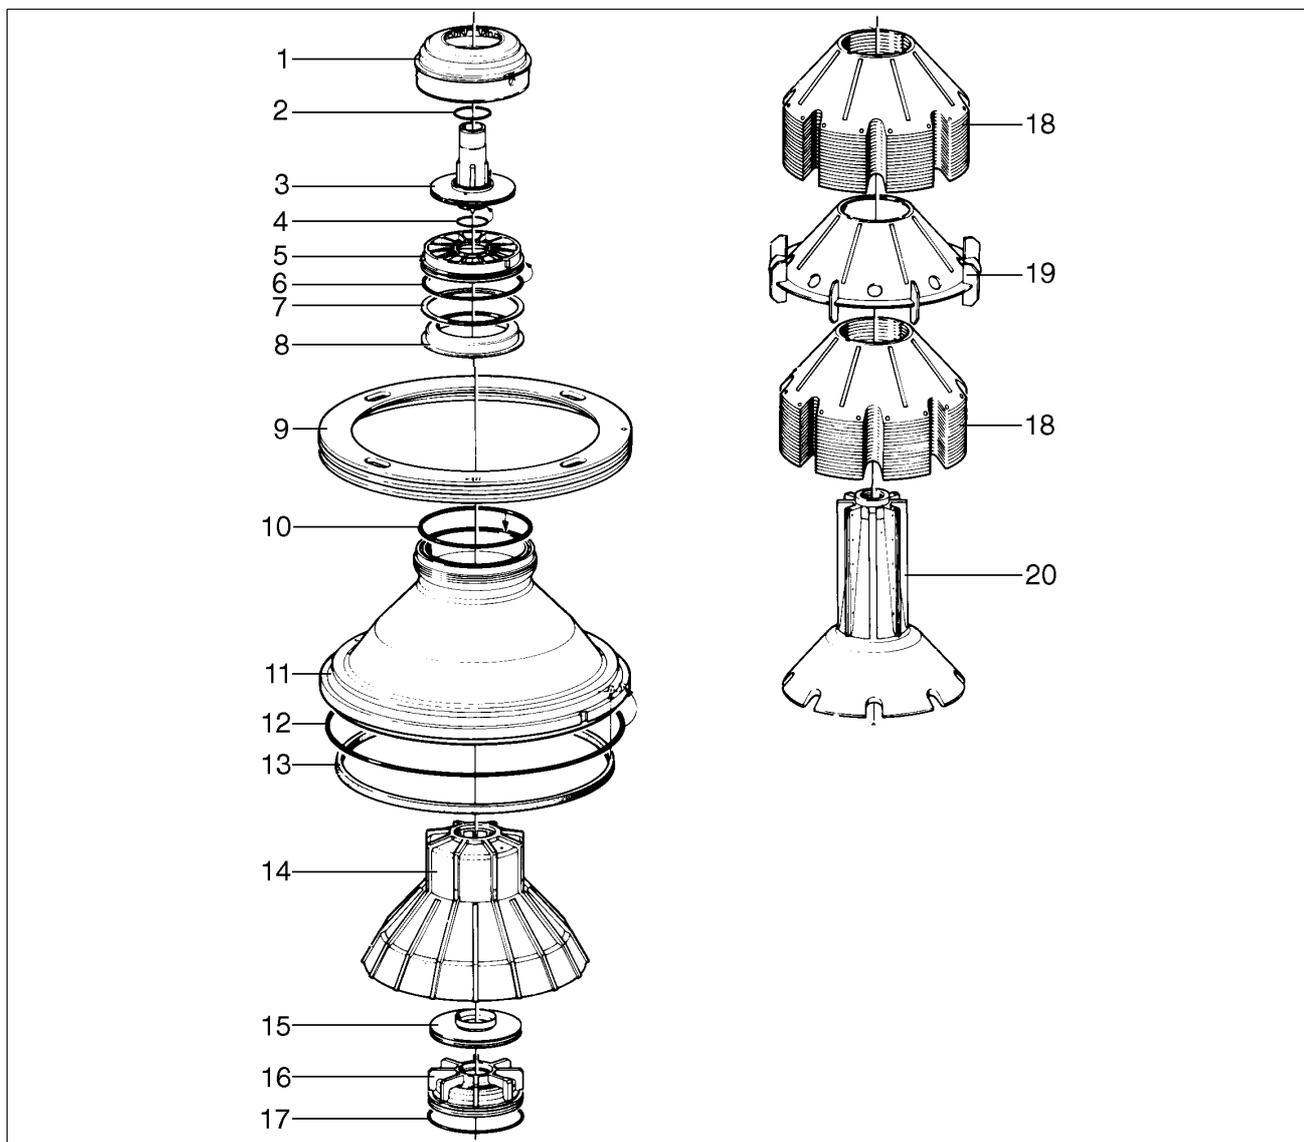

- 1. Paring chamber cover (small lock ring)
- 2. O-ring
- 3. Upper (water) paring disc
- 4. O-ring
- 5. Sleeve with wings
- 6. O-ring
- 7. Gasket
- 8. Gravity/clarifier disc
- 9. Lock ring
- 10. O-ring



- 11. Bowl hood
- 12. O-ring
- 13. Seal ring
- 14. Top disc
- 15. Oil paring disc
- 16. Level ring
- 17. O-ring
- 18. Bowl disc
- 19. Wing insert
- 20. Distributor

G0692111


6.3.2 Dismantling

1. Unscrew the paring chamber cover using the spanner.

Left-hand thread!

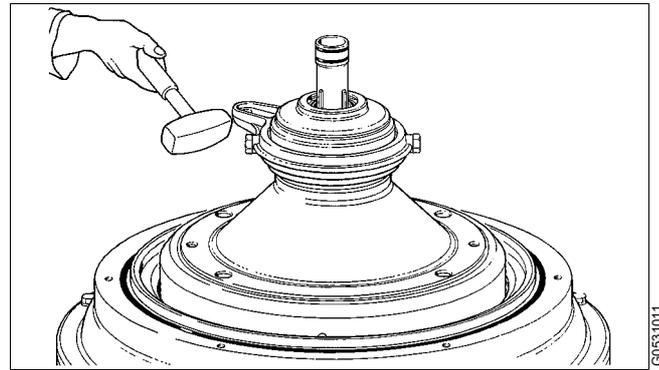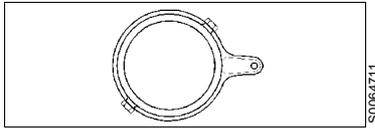

2. Remove the paring chamber cover, gasket and gravity/clarifier disc. Force out the sleeve with wings and the upper paring disc from the cover.

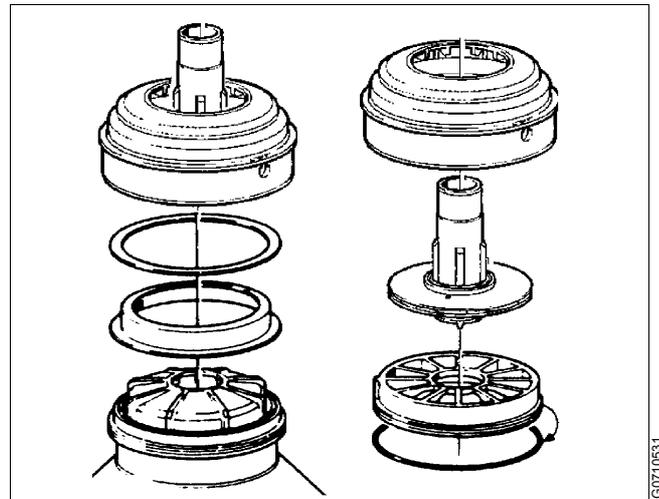

3. Apply the brake and unscrew the lock ring as described below.



NOTE

Use an Alfa Laval compressing tool (optional) to reduce shocks to bearings and thread wear minimized when unscrewing the large lock ring.

Unscrewing lock ring without using a compressing tool


- a. Unscrew the lock ring using the spanner.

Left-hand thread!

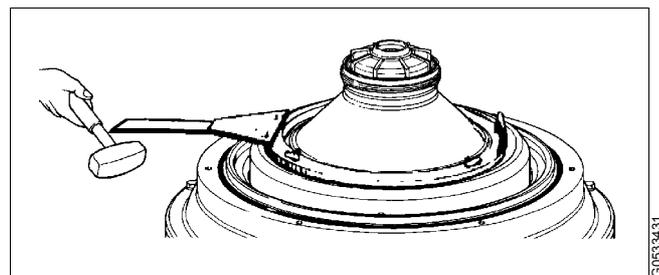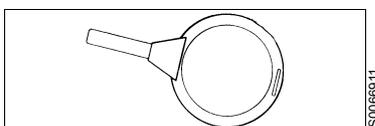



Unscrewing lock ring with a compressing tool

- a. Fit the lifting tool on the bowl hood.

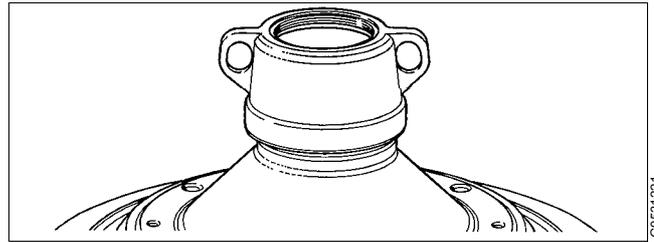


- b. Fit the compressing tool by screwing the pillar of the tool into the threads of the distributor using the lever.

The switch on the compressing tool should be in position 0.

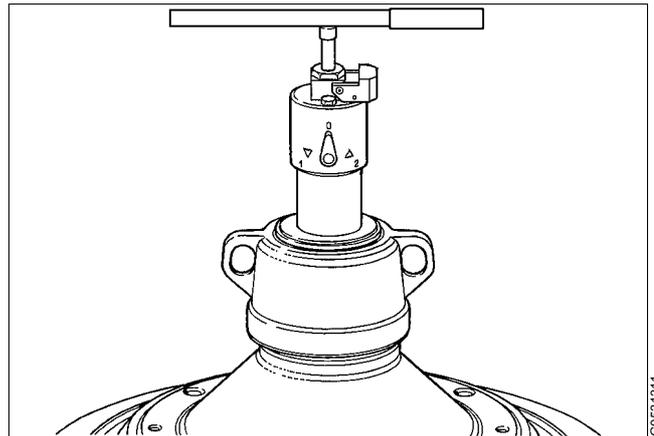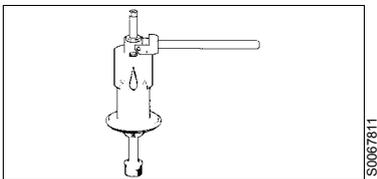



- c. Turn the switch to position 1 for compression.

Compress the disc stack by pumping the lever until the oil pressure is released through the relief valve.

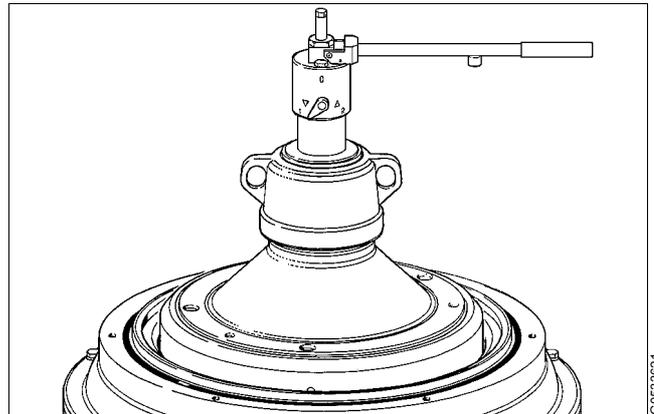


- d. Unscrew the large lock ring using the spanner.

Left-hand thread!

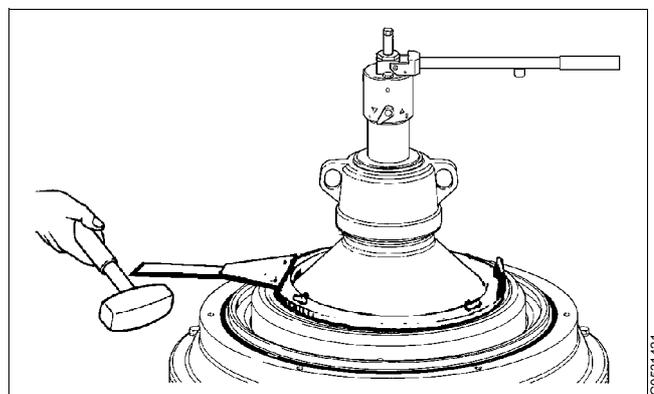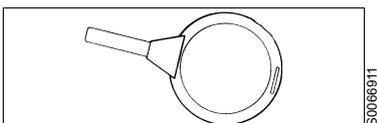

- e. Release the pressure in the compressing tool and remove it from the lifting tool.

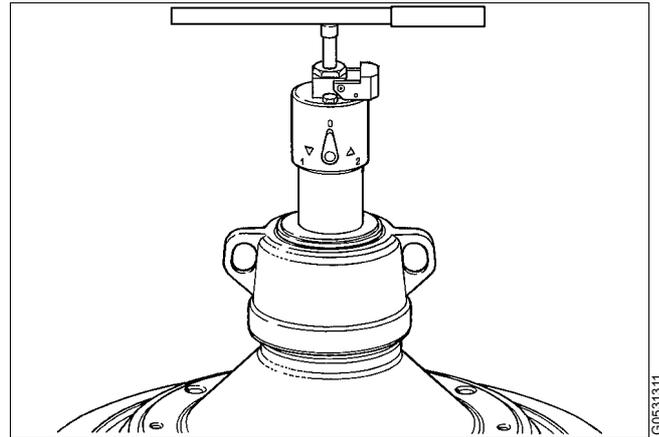

G0531311

4. Remove the lock ring.

NOTE

The lock ring must be kept lying horizontally or it may become distorted. Even slightest distortion could make it impossible to refit.


5. Separate the bowl hood from the bowl body as described below before lifting off the bowl hood.

Separating bowl hood without using a compressing tool

- a. Fit the lifting tool on the bowl hood.




S0065411

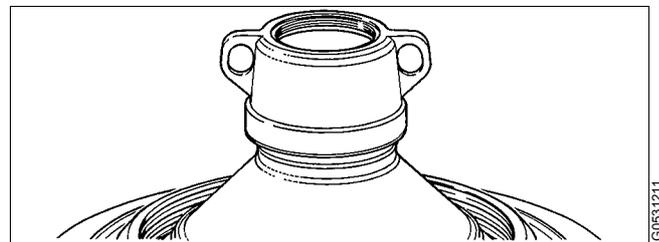


G0531211

- b. Screw the spindle plate into the lifting tool. Unscrew the spindle a few turns if the plate is not in contact with the lifting tool.

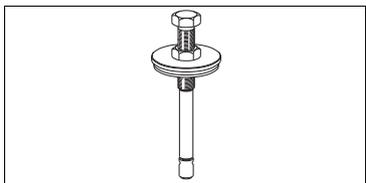

S0064511

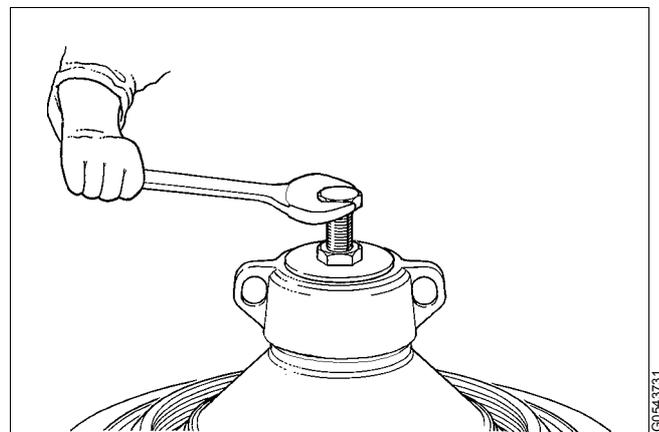

G0543731

- c. Screw home the spindle until the bowl hood loosens from the bowl body.
- d. Remove the spindle plate from the lifting tool.

Separating bowl hood with a compressing tool

- a. Remove the lifting tool from the bowl hood.
- b. Fit the compressing tool by screwing the pole of the tool into the threads of the distributor using the lever.


The switch on the compressing tool should be in position 0.

- c. Fit the lifting tool on the bowl hood.
- d. Turn the switch to position 2 for expansion.


Separate the bowl hood from the bowl body by pumping the lever.

- e. Remove the lifting tool and the compressing tool. Then refit the lifting tool.


6. Lift off the bowl hood using a hoist. Be careful not to scratch the bowl hood seal ring.

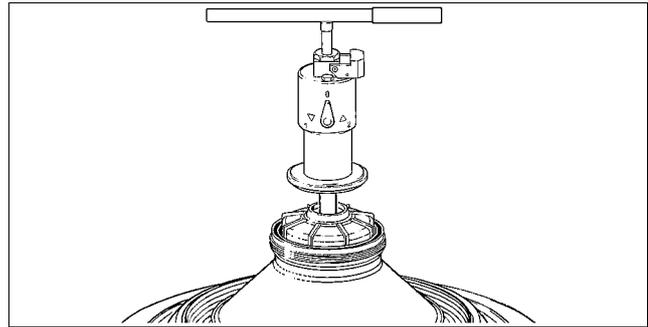

G0543911

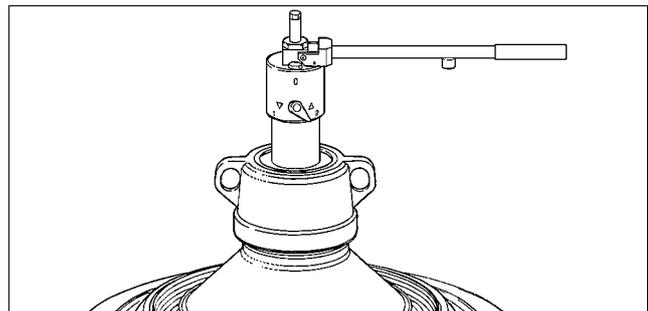

G0544011

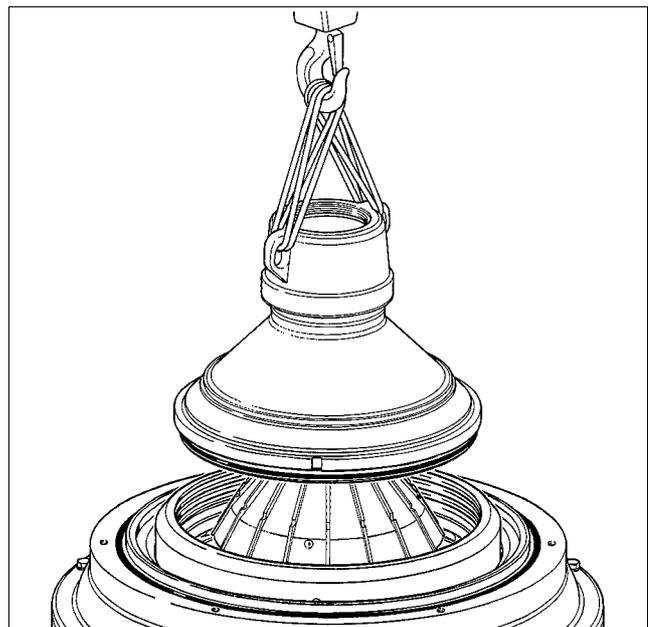

G0539911




CAUTION

Crush hazards

If the top disc is stuck into the bowl hood, remove it now before it accidentally falls out.


7. Remove the top disc.

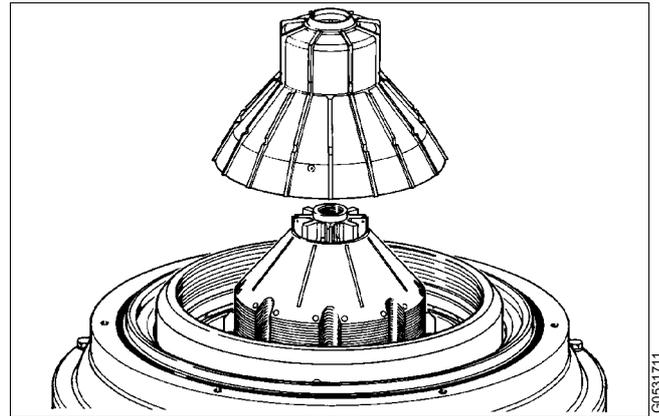


8. Screw the inlet pipe into the paring disc located above the level ring inside the top disc.

Left-hand thread!


Place the top disc onto wooden blocks to act as protection for the top disc edge and for falling level ring. Place a piece of wood between the tin hammer and the inlet pipe and then force out the level ring and the paring disc carefully from the top disc.

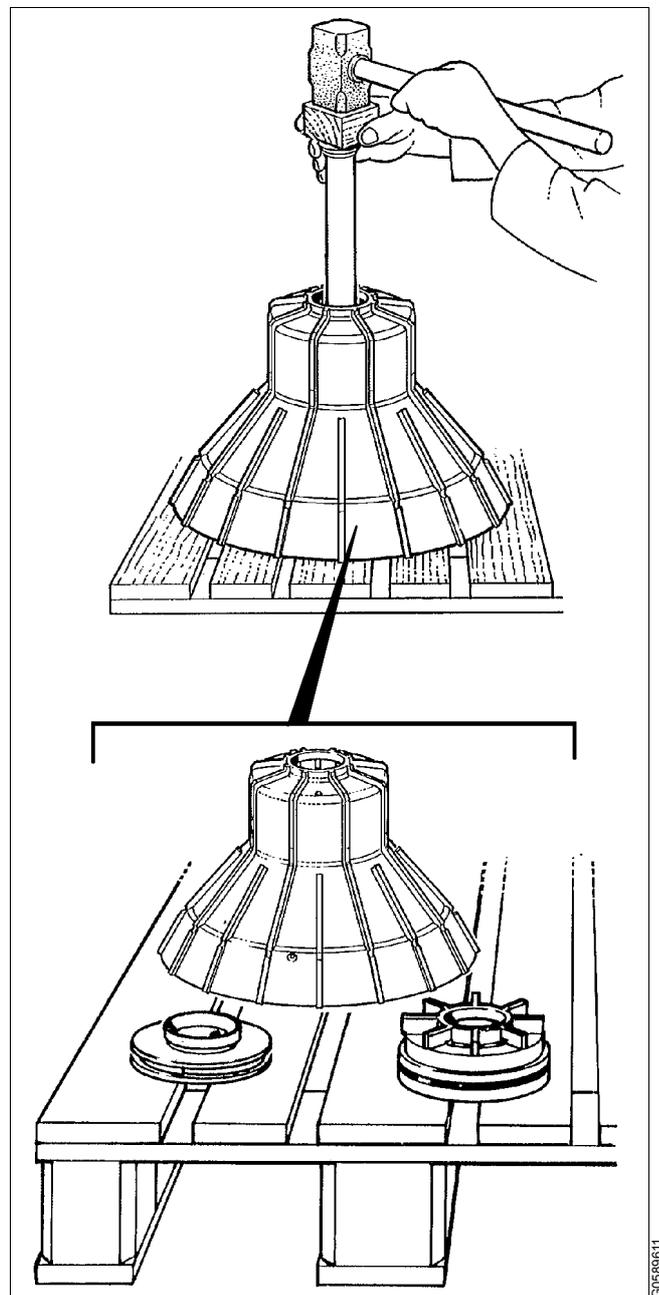

9. Fit the lifting tool into the distributor and lift the distributor with disc stack out of the bowl body using a hoist.

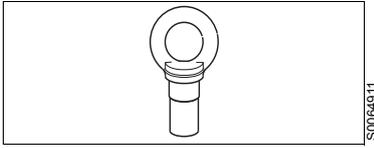

10. Remove deposits and clean all parts thoroughly in a suitable cleaning agent. See chapter "5.6 Cleaning" on page 93.

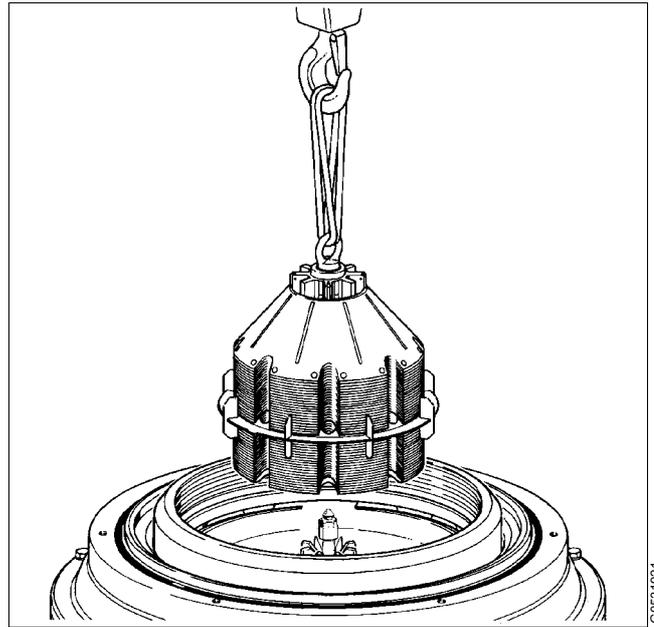

6.3.3 Assembly

4 Check point

“5.3.3 Corrosion” on page 59,
 “5.3.4 Cracks” on page 62,
 “5.3.6 Erosion” on page 65,
 “5.3.10 Lock ring; wear and damage” on page 70.


1. Assemble the discs one by one on the distributor. The distributor has one guide rib for the correct positioning of the discs.



CAUTION

Cut hazard

Sharp edges on the separator discs may cause cuts.

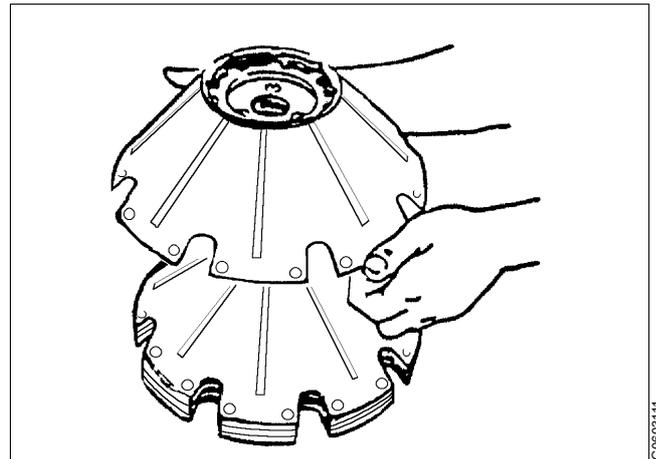


G0603111

For correct number of discs above and below the wing insert when the machine was new, see the *Spare Parts Catalogue*.


The number of bowl discs above the wing insert may be increased to adjust the disc stack pressure.

2. Fit the lifting tool to the distributor and lift the distributor with disc stack into the sliding bowl bottom using a hoist.

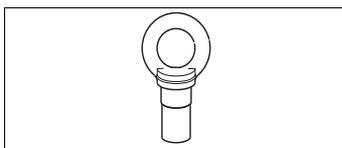

S0064911

Check that the guide pins in the distributing cone fit into the recesses on the underside of the distributor.

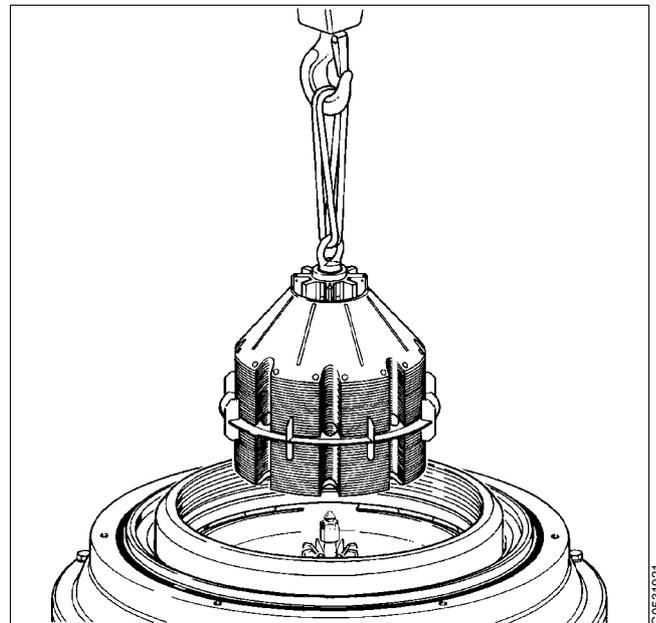


G0531921

4 **Check point**


“5.3.9 Level ring” on page 69.
 “5.3.8 Inlet pipe and oil paring disc” on page 69.

3. Fit the oil paring disc and level ring with the O-ring into the top disc.
 Make sure that the paring disc is positioned in the right direction.

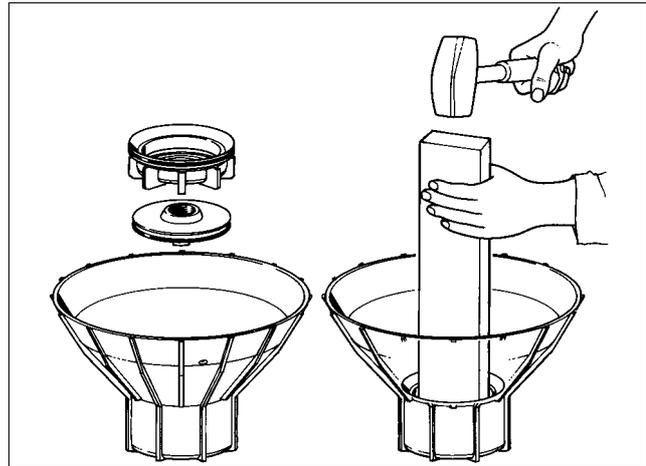

G0532111

4. Fit the top disc onto the distributor. The drilled assembly mark on the top disc must face the guide lug on the bowl body.

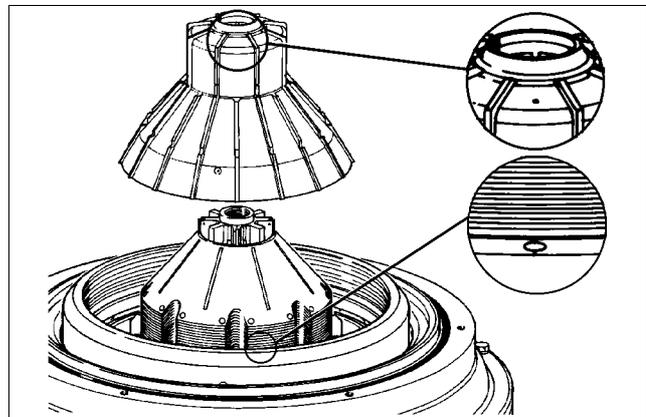


G0531721

4 **Check point**

“5.3.1 Bowl hood seal ring” on page 58.

 5. Fit the lifting tool to the bowl hood and lift it using a hoist. Check that the O-ring and the seal ring of the bowl hood are properly fitted and lubricated.
 Lower the bowl hood straight down onto the disc stack, otherwise it may get stuck. Be careful not to scratch the bowl hood seal ring.



S0065411


In set of tools **without** compressing tool.



S0067611


In set of tools **with** compressing tool.

For correct position of bowl hood, see next illustration.

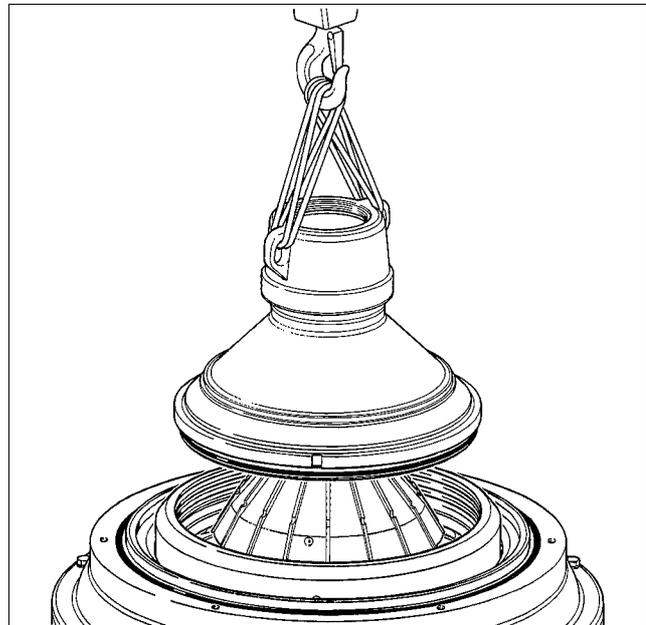

G0539911

6. Check that the guide recess on the bowl hood enters the guide lug in the bowl body.

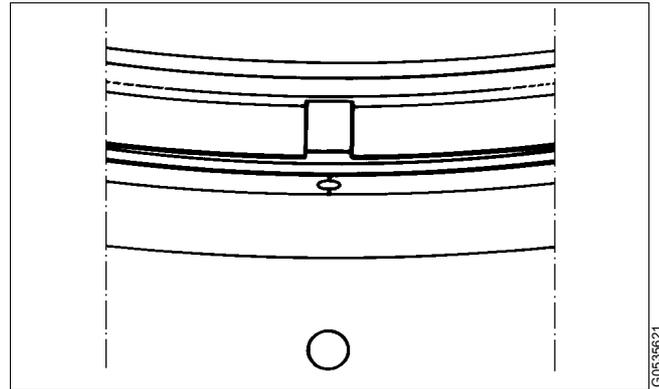


G0536621

7. Remove the lifting tool.
8. Lubricate the lock ring threads, contact and guide surfaces with lubricating paste.

4 **Check point**

“5.4.16 Lock ring; priming” on page 86 (only when Major Service).

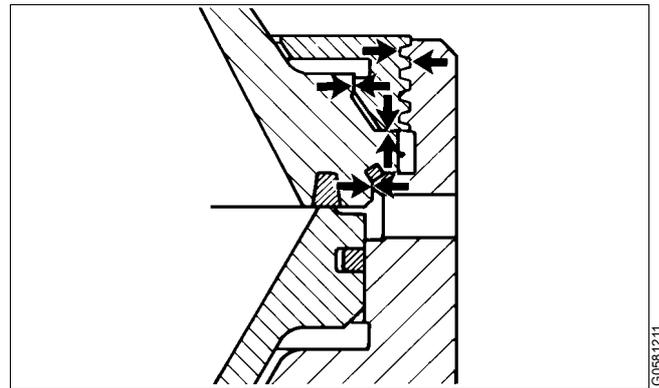

G0581211

9. Tighten the lock ring.


NOTE

Use an Alfa Laval compressing tool (optional) to reduce shocks to bearings and thread wear minimized when tightening the large lock ring


Tightening of lock ring without using a compressing tool

- a. Tighten the lock ring using the spanner for lock ring.

Left-hand thread!

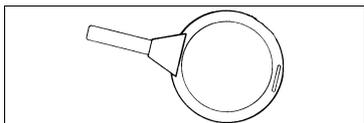

S0066911

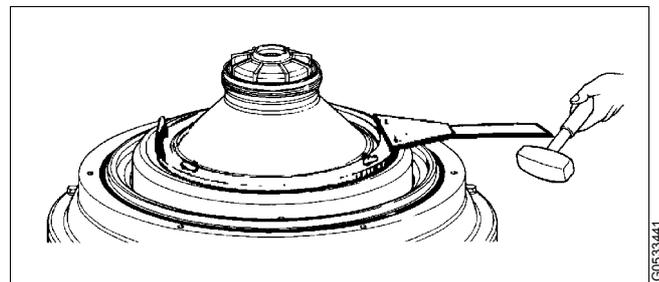

G0533441


- b. Tighten until the assembly marks are at least in line.

4 **Check point**

“5.3.5 Disc stack pressure” on page 63.

NOTE


The assembly marks must never pass each other more than 25° which corresponds to **A=100 mm**.

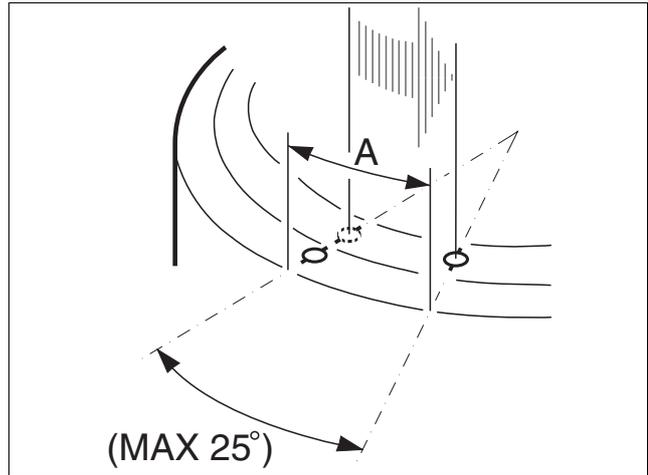


G0678131

Tightening of lock ring using a compressing tool

 - a. Fit the lifting tool onto the bowl hood.




S0067611

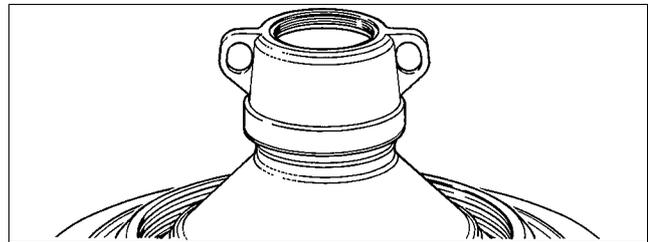


G0531211

- b. Fit the compressing tool by screwing the pole of the tool into the threads of the distributor by the lever arm.

The switch on the compressing tool, should be in position 0.

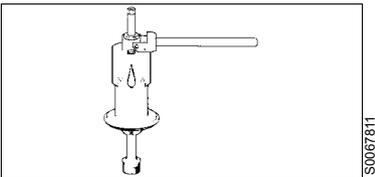


S0067811

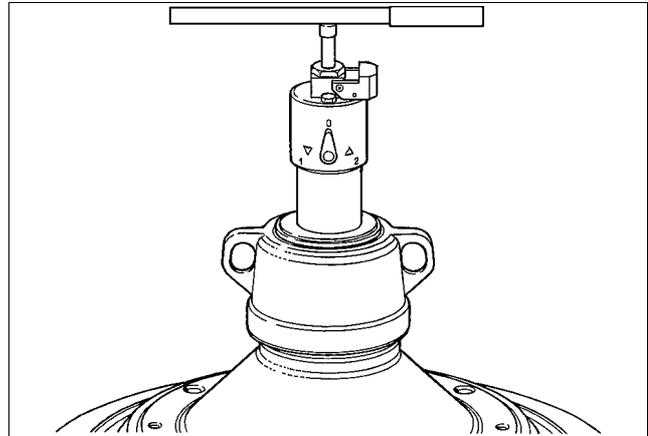

G0531311

- c. Turn the switch to position 1 for compression.



Compress the disc stack by pumping with the lever arm until the oil pressure is released through the relief valve.

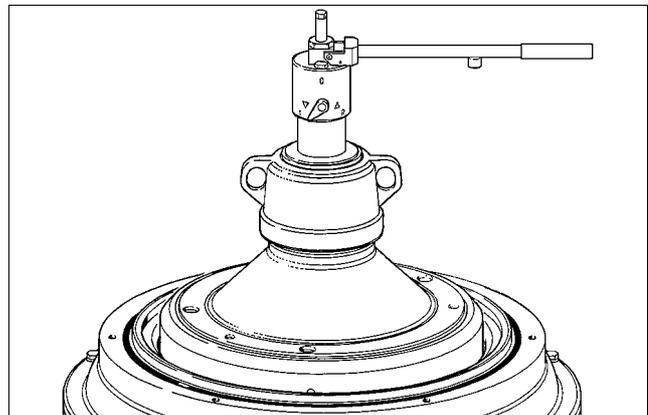

G0533621

- d. Tighten the lock ring using the spanner for lock ring.

Left-hand thread!

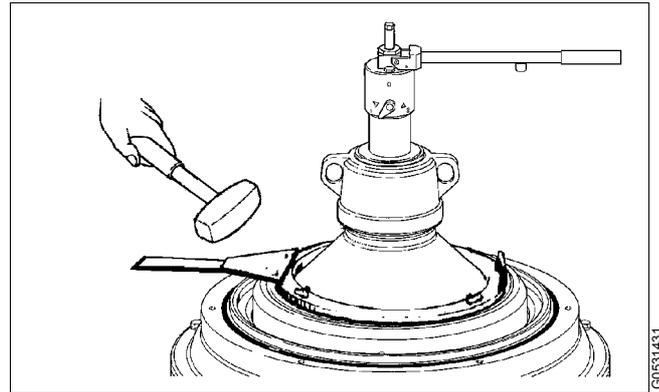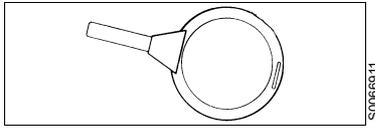


- e. Tighten until the assembly marks are in line.

Check point

“5.3.5 Disc stack pressure” on page 63.


NOTE

The assembly marks must never pass each other more than 25° which corresponds to **A=100 mm**.

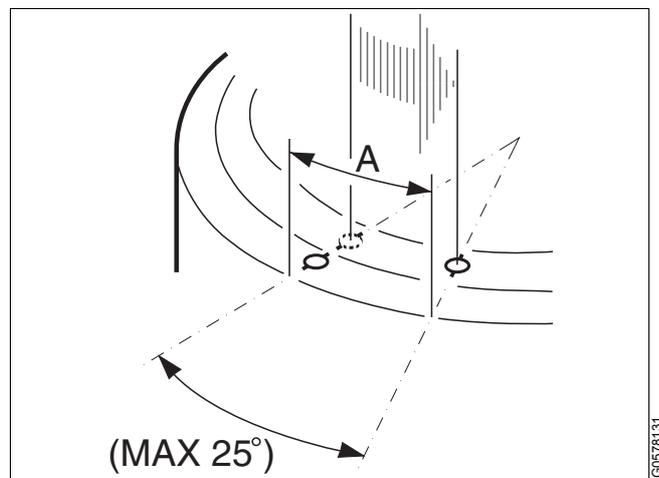



- f. Release the pressure in the compressing tool by turning the switch to position 0 and then remove the compressing and lifting tools.

10. Fit the gravity/clarifier disc and gasket.
If the gravity disc has two drilled holes, check that they are free from dirt.
11. Fit the upper (water) paring disc and the sleeve with wings in the paring chamber cover.

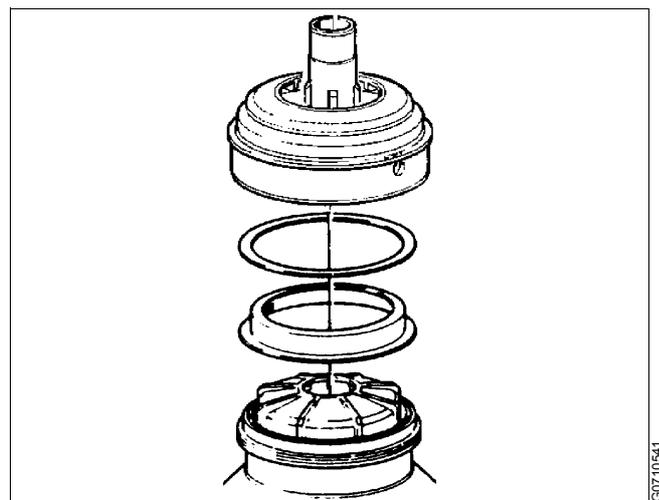

12. Fit and tighten the paring chamber cover using the spanner.


Left-hand thread!

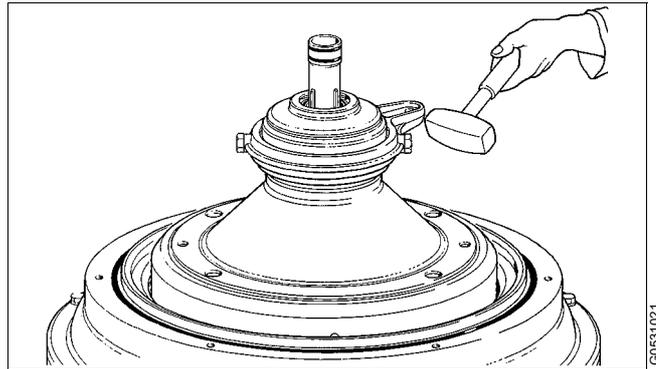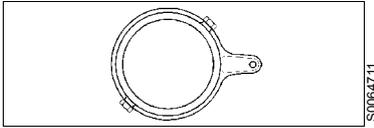

6.4 Bowl body and operating mechanism (IS)

6.4.1 Exploded view

1. Cap nut
2. Distributing cone
3. O-ring
4. Sliding bowl bottom
5. Rectangular ring
6. Screw
7. Nozzle, 2,5 mm
8. Bowl body
9. Plug
10. O-ring
11. Valve plug
12. Operating slide
13. Nozzle, 1,1 mm
14. O-ring
15. Spring
16. Spring holder
17. Screw

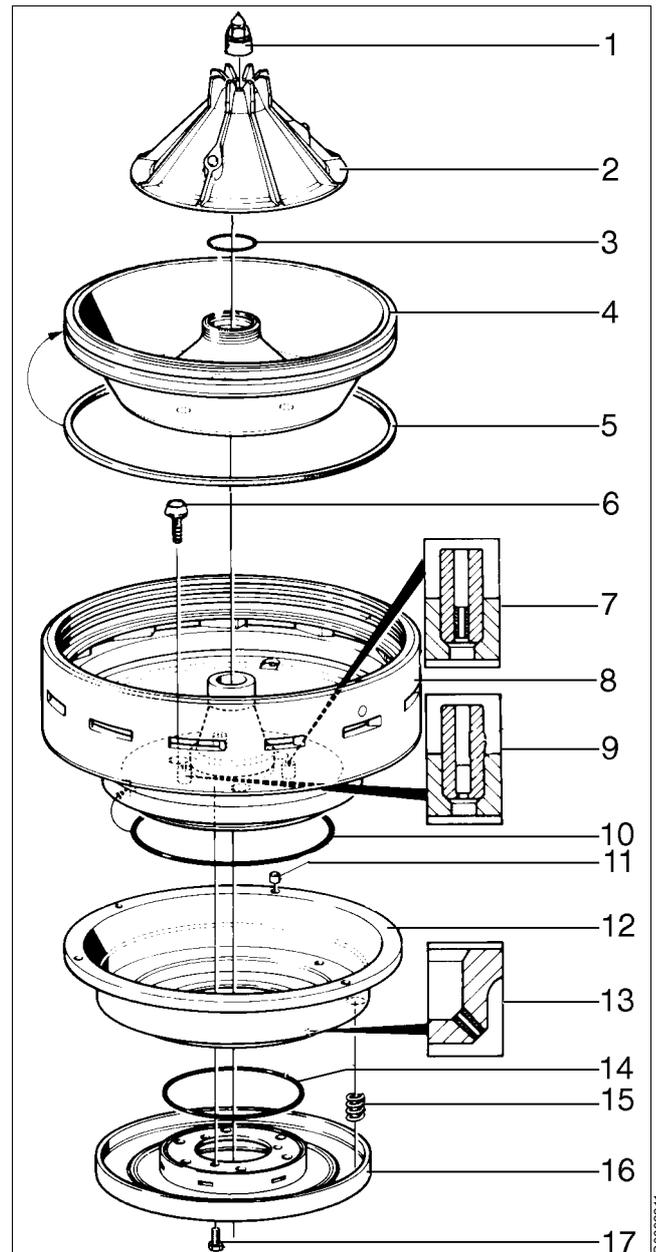


G0692211


6.4.2 Dismantling

1. Unscrew and remove the cap nut.

Left-hand thread!

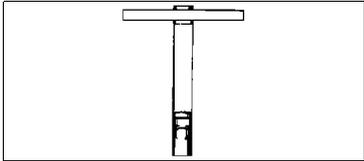


S0067011

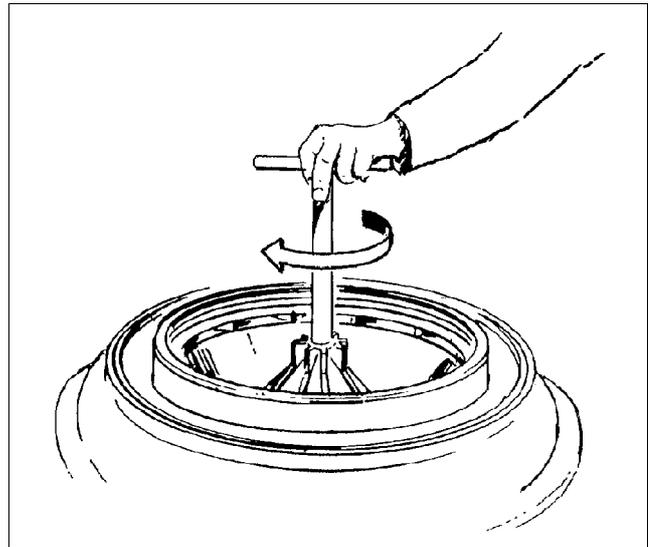


G0568711

2. Fit the lifting tool into the distributing cone and lift it out.

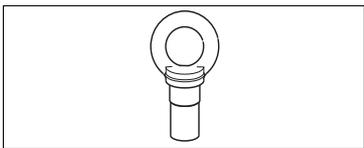


S0064911

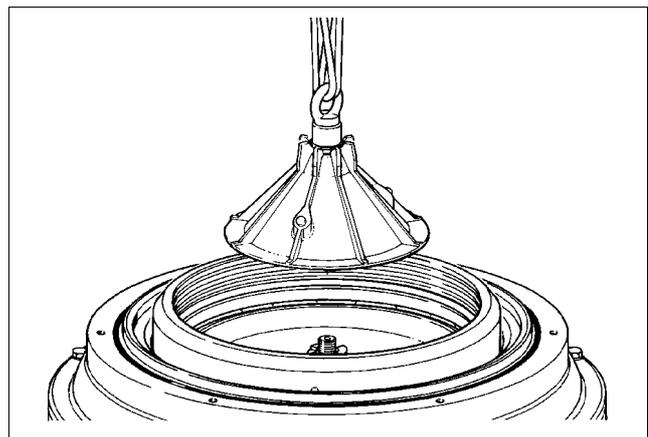


G0532721

3. Fit the lifting tool onto the sliding bowl bottom and lift it out by a hoist.

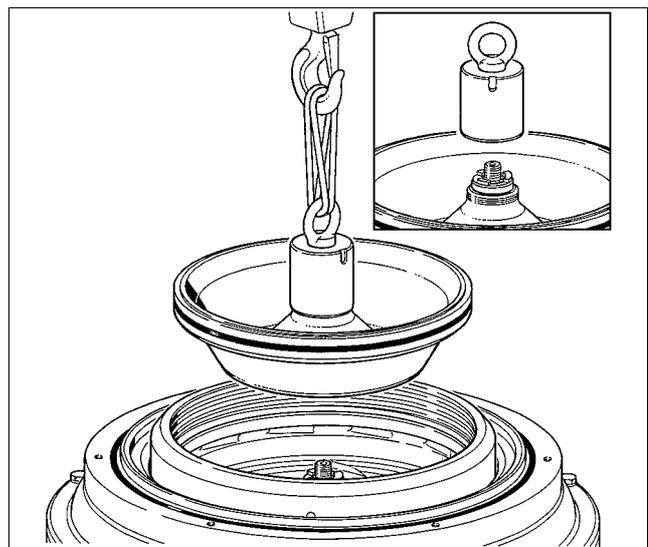


G0533211

4. Unscrew the three screws in the bottom of the bowl body.

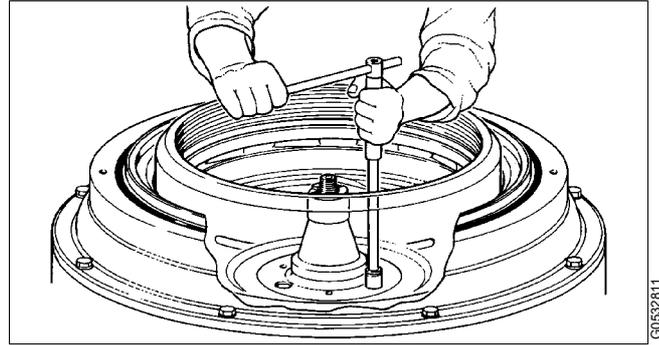


G0532811

5. Fit the lifting tool into the bowl body bottom with the three screws.
6. Release the bowl body from the spindle by using the lifting tool as a puller. Turn the handle at top of the lifting tool until the bowl body comes loose from the spindle taper. Turn the handle two more turns in order to avoid damaging the paring disc device.

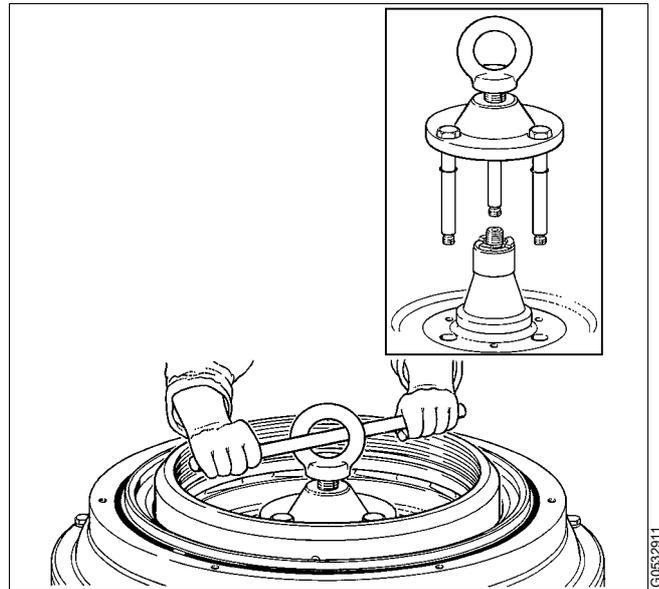

G0532811

7. Lift out the bowl body using a hoist.

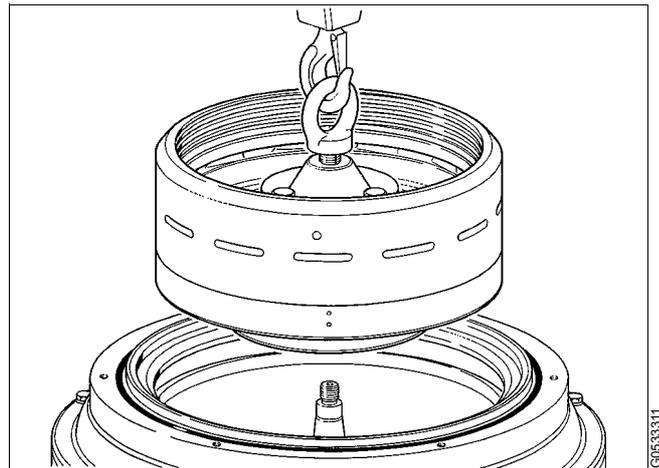

G0533311


8. Thread a strap through two sludge ports and turn the bowl body upside down using a hoist.




WARNING

Crush hazards


Support the bowl body when turning to prevent it from rolling.

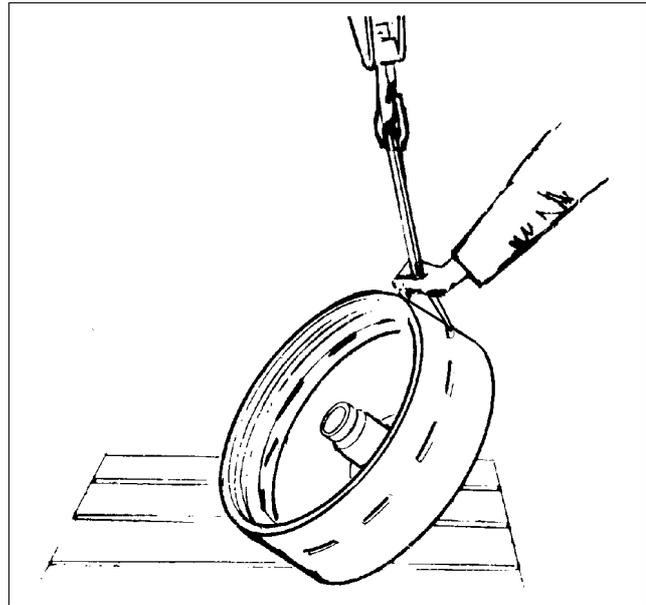



9. Loosen the screws for the spring holder successively a little at a time. Remove the screws.

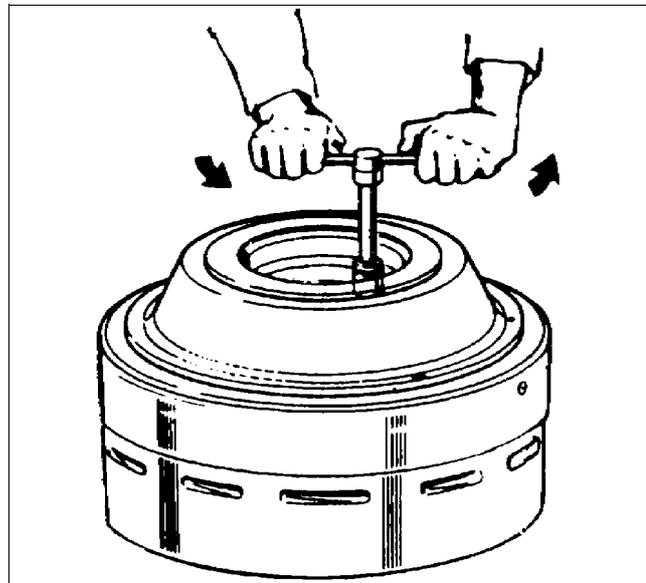


10. Remove the spring holder and the springs.

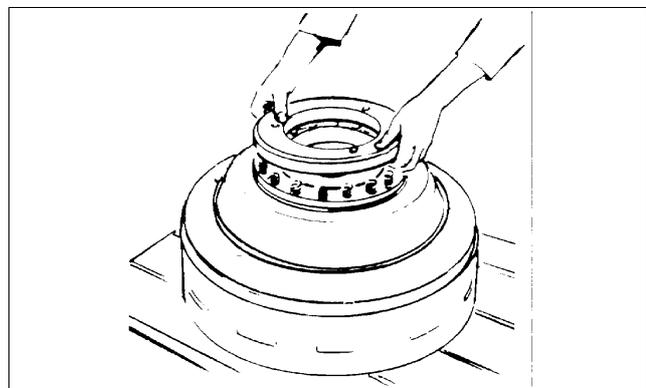

- Fit two lifting eyes ($\frac{1}{2}$ "-13 UNC) into the operating slide and lift it off from the bowl body.

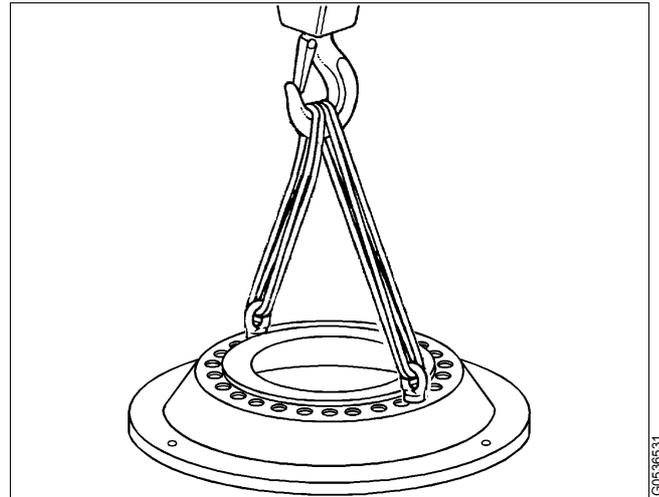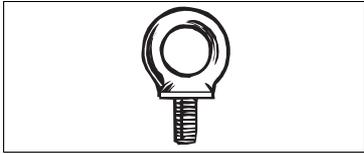


- Place the operating slide with the valve plugs facing upwards
- Remove any thick deposits in the frame hood and clean all other parts thoroughly in a suitable cleaning agent. See chapter "5.6 Cleaning" on page 93.

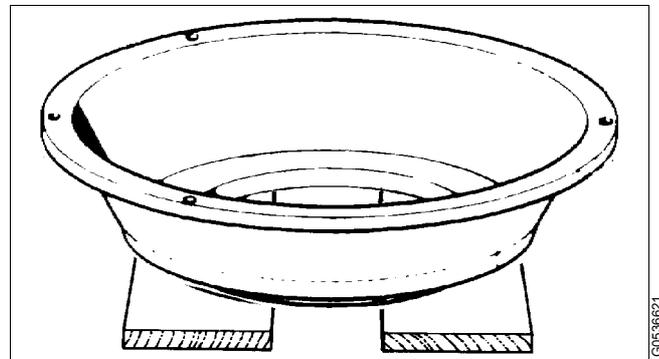


6.4.3 Assembly

4 Check point


- "5.3.3 Corrosion" on page 59,
 - "5.3.4 Cracks" on page 62,
 - "5.3.6 Erosion" on page 65,
 - "5.3.7 Guide surfaces" on page 67,
 - "5.3.11 Operating mechanism" on page 72,
 - "5.3.12 Operating slide" on page 72,
 - "5.3.13 Sliding bowl bottom" on page 73,
 - "5.3.14 Springs for operating mechanism" on page 74.
- Lubricate the guide surfaces of the bowl body and operating slide with lubricating paste. See chapter "8.9 Lubricants" on page 204.

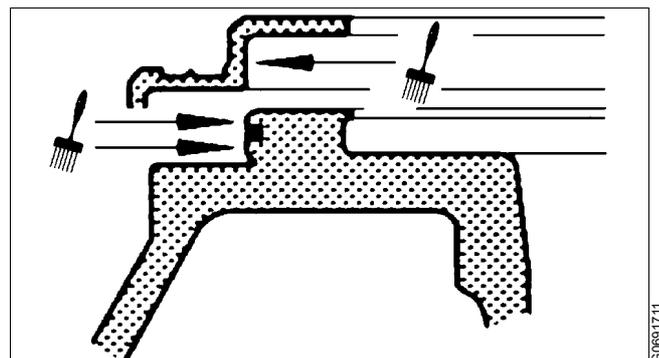


2. Fit the operating slide onto the bowl body.
Check that the guide pin in the bowl body enters the hole in the operating slide.

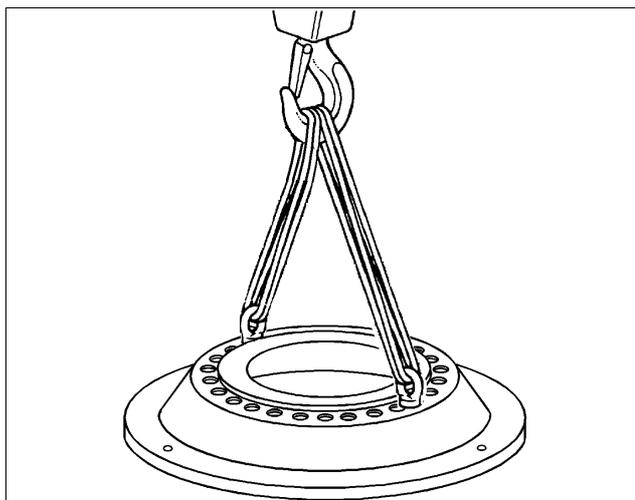

3. Lubricate the guide surfaces and O-ring of the spring holder. See chapter “8.9 Lubricants” on page 204.
Fit the springs and support.

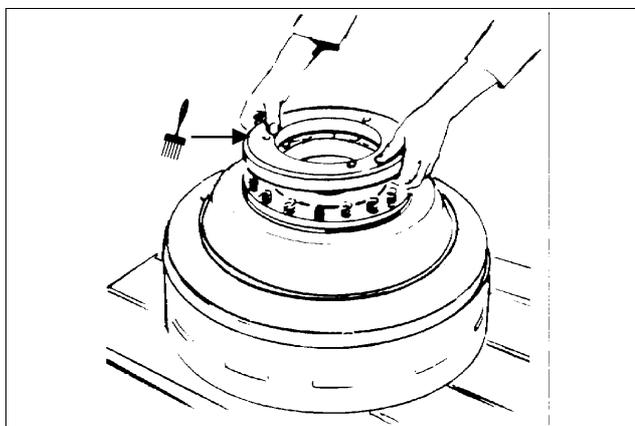


4. Lubricate and then tighten the three screws for the spring holder successively by hand a little at a time.

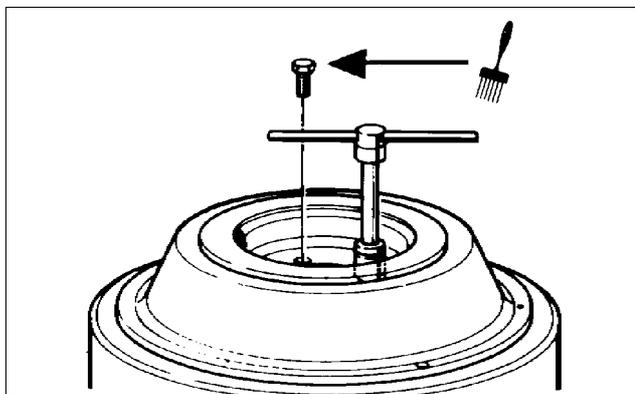

5. Wipe off the spindle top and nave bore in the bowl body. Lubricate the tapered end of the spindle and wipe it off with a clean cloth.


- 4 **Check point**
“5.3.2 Bowl spindle cone and bowl body nave” on page 59.

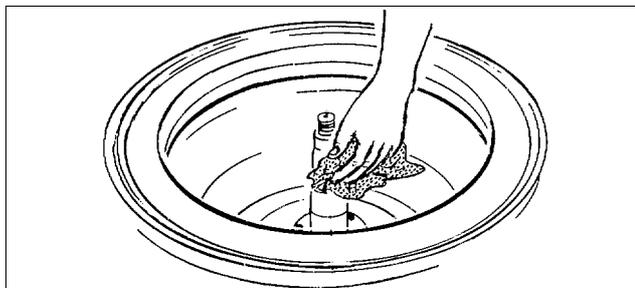

6. Turn the bowl body using a hoist to its up-right position with a strap threaded through two sludge ports.


**WARNING****Crush hazards**

Support bowl body when turning to prevent it from rolling.

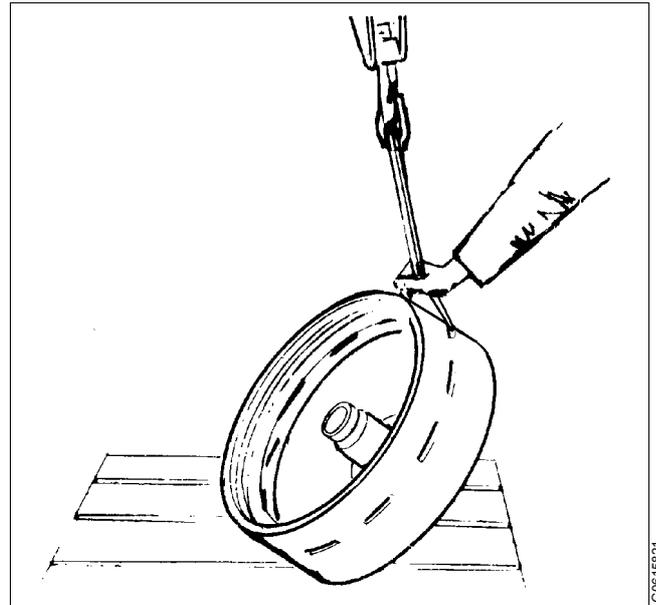


G0615821

7. Fit the lifting tool into the bowl body bottom with the three screws.
Turn the handle at the top of the lifting tool so that the central screw is home.

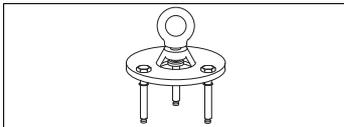


S0064611

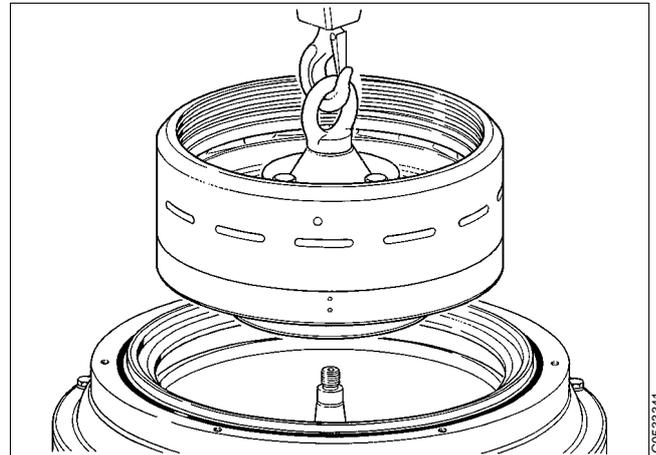

G0533341


8. Lower the bowl body using a hoist until the central screw rests on the spindle top. Then screw up the central screw so that the bowl body sinks down onto the spindle.
Remove the tool.

9. Rotate the bowl body and align it so that the three screw holes in the bowl body bottom are exactly above the three holes in the distributing ring.
Tighten the three screws firmly.

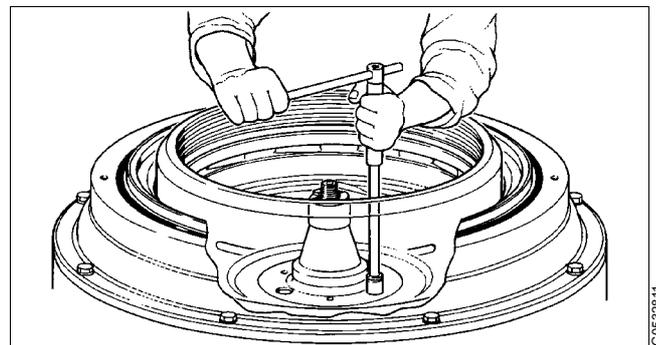


G0532811

10. Lubricate the guide surfaces of the bowl body and sliding bowl bottom with lubricating paste. See chapter “8.9 Lubricants” on page 204.
11. Fit the lifting tool to the sliding bowl bottom and lift it into the bowl body using a hoist.
For correct position of the sliding bowl bottom, see next illustration.

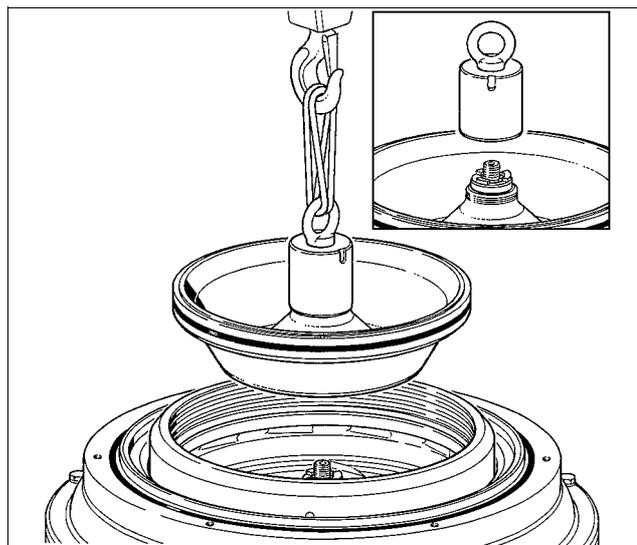


G0533211

12. Bring the assembly mark on the sliding bowl bottom in line with the guide lug on the bowl body to ensure that the sliding bowl bottom enters into the correct position.

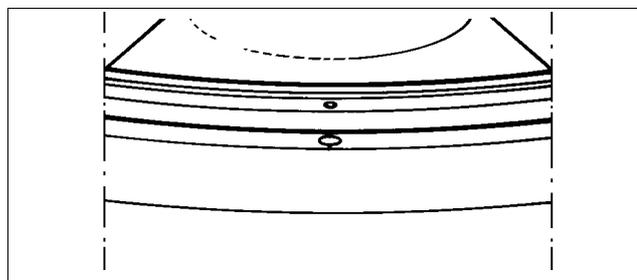


G0535711

13. Fit the distributing cone into the bowl body.
Check that the guide pins on the underside of the distributing cone enter the recesses in the sliding bowl bottom.

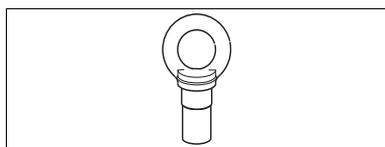


S0064911

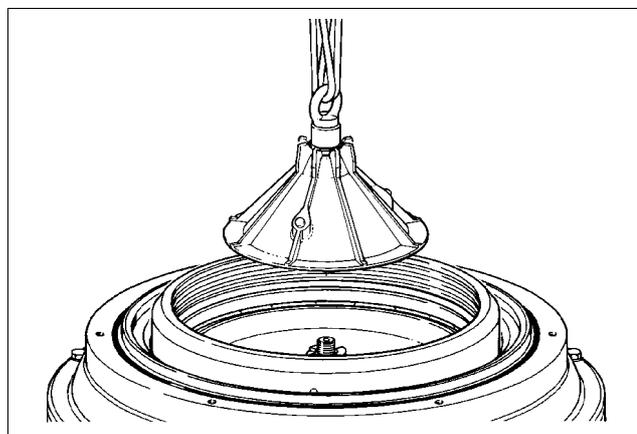

G0532721

14. Screw on the cap nut and tighten firmly.
Left-hand thread!

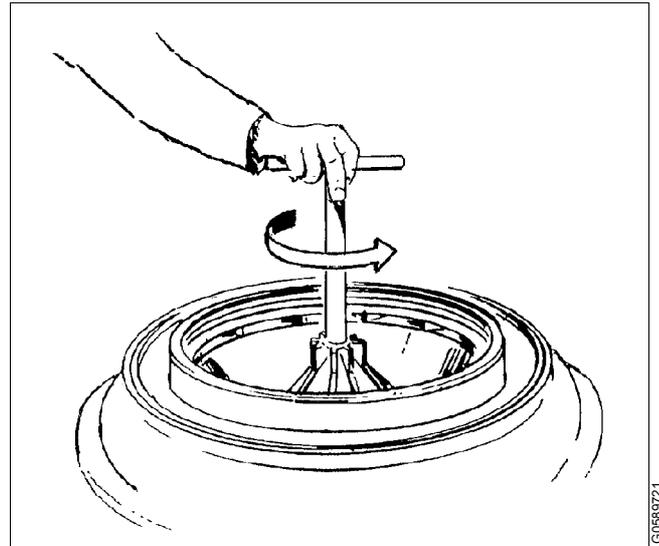


G0589721

6.5 Operating water device (IS)


6.5.1 Exploded view

1. Ring nut
2. Operating paring disc
3. O-ring
4. Distributing ring
5. Gasket
6. Distributing cover
7. Gasket
8. Sleeve
9. Height adjusting ring
10. Operating device

 Guide

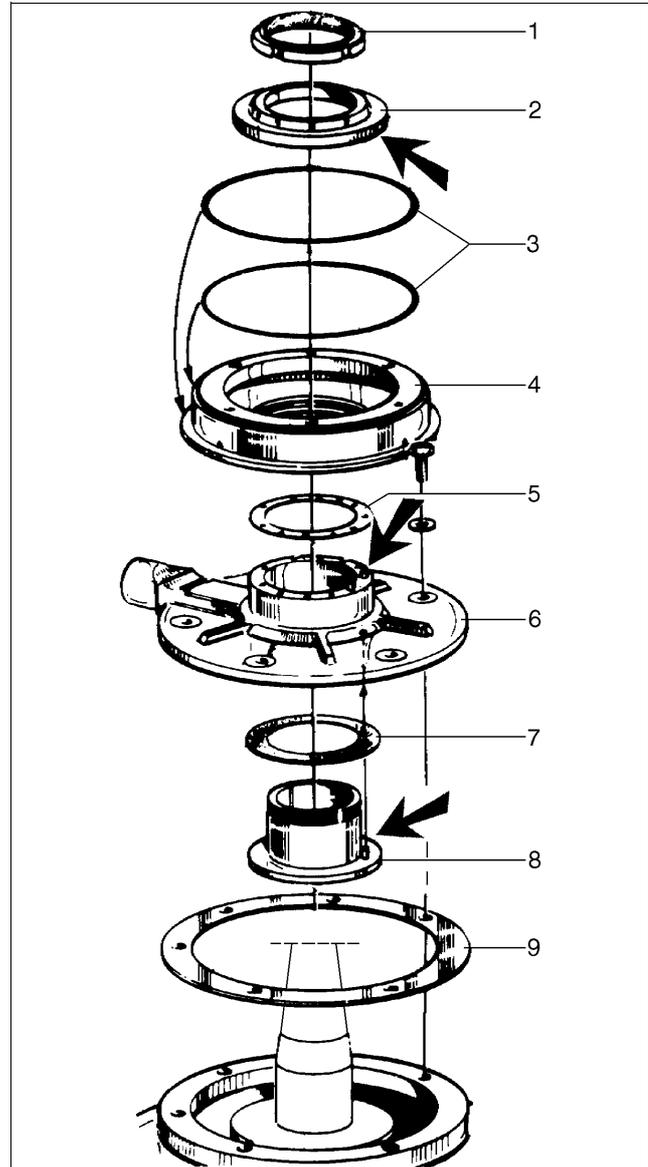


G0691811

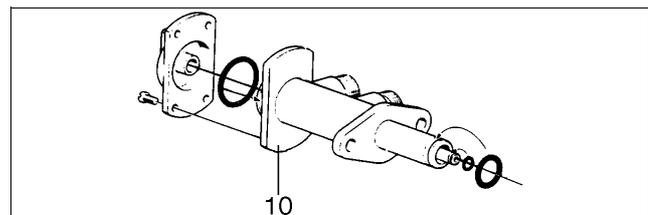


G0691811

6.5.2 Dismantling

1. Disconnect the water hoses to the operating water inlet device.
2. Loosen and pull out the device from the distributing cover.

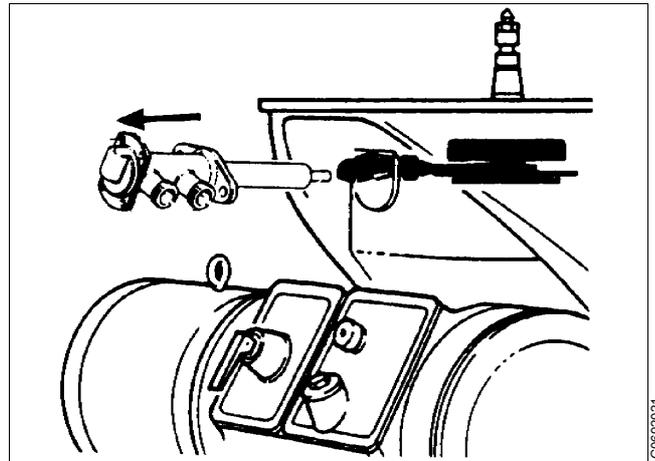

3. Ease off the ring nut (1).
4. Lift out the paring disc assembly (2).
5. Unscrew the screws fixing the distributing cover (3) and lift it out.
6. Dismantle the parts in the sequence appearing from the illustration on previous page.
7. Remove deposits and clean all parts thoroughly in a suitable cleaning agent. Pay special attention to the channels. See chapter ["5.6 Cleaning" on page 93](#).
8. Check the parts for damage and corrosion.

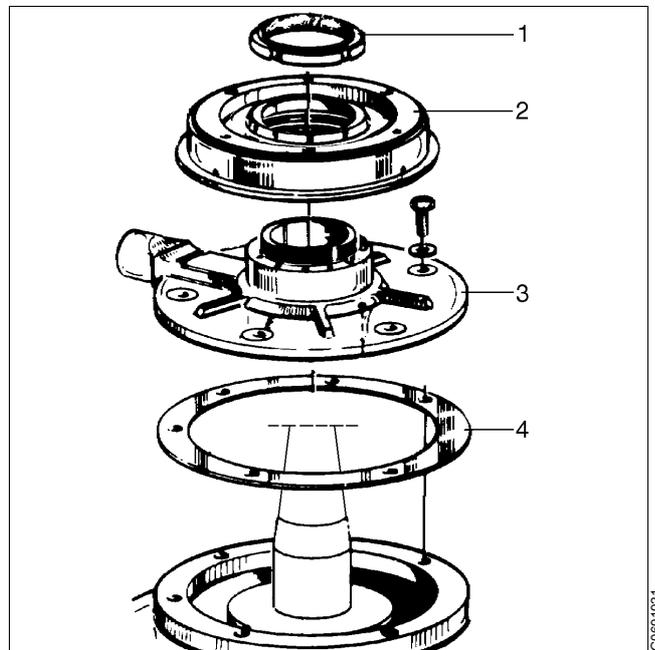

1. Ring nut
2. Paring disc assembly
3. Distributing cover
4. Height adjusting ring

6.5.3 Assembly

1. Assemble the parts in the sequence appearing from the illustration on page 136. See also following text.

Ensure the parts are placed in the positions defined by the guides.

2. Fit the height adjusting ring(s) (4) and distributing cover (3) including the sleeve.
3. Fasten the distributing cover with the six screws.
4. Fit the paring disc assembly (2) and tighten the ring nut (1).


4 Check point

“5.4.20 Operating paring disc; height position” on page 89. Only at Major Service (MS).

5. Fit the operating water inlet device into the distributing cover.
6. Connect the water hoses to the device.

372. Opening water inlet


376. Closing and make-up water inlet

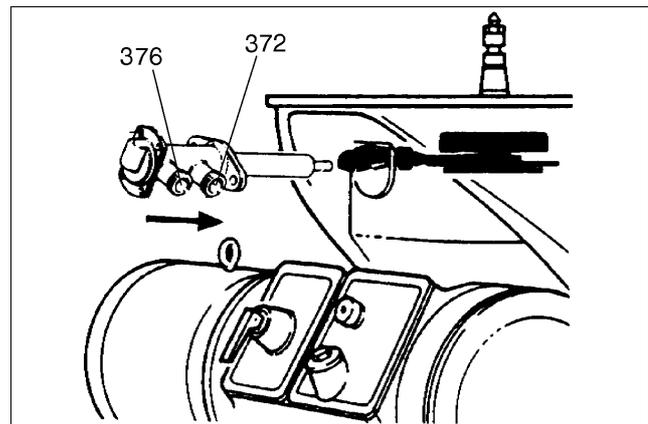

140262041

6.6 Vertical driving device (MS)

6.6.1 Exploded view

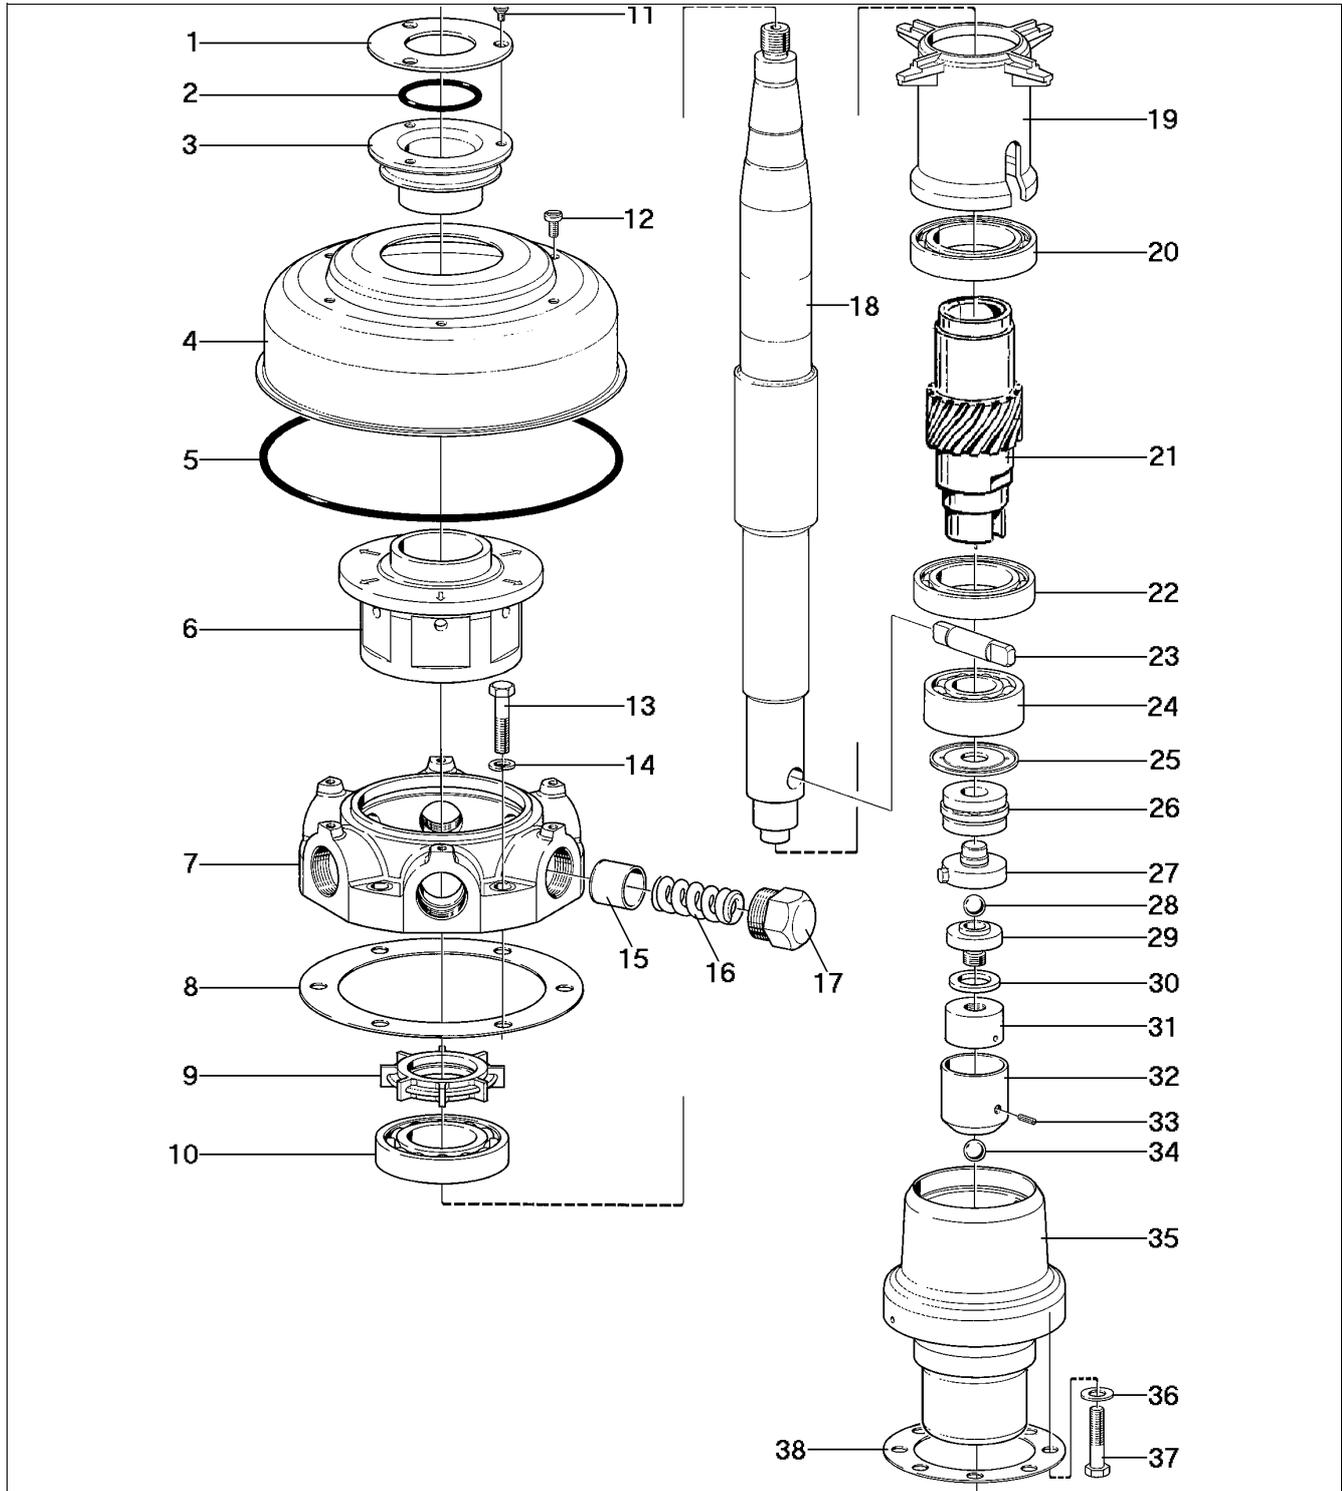

G30546421


1. *Protecting plate*
2. *O-ring*
3. *Protecting collar*
4. *Guard*
5. *O-ring*
6. *Ball bearing housing*
7. *Spring casing*
8. *Gasket*
9. *Oil fan*
10. *Ball bearing*
11. *Screw*
12. *Screw*
13. *Screw*
14. *Spring washer*
15. *Buffer*
16. *Spring*
17. *Buffer plug*
18. *Bowl spindle*
19. *Stop sleeve*
20. *Ball bearing*
21. *Worm*
22. *Ball bearing*
23. *Conveyor*
24. *Ball bearing*
25. *Spacing washer*
26. *Ball bearing*
27. *Washer*
28. *Ball*
29. *Support ring*
30. *Height adjusting ring*
31. *Spacing sleeve*
32. *Bottom sleeve*
33. *Slotted pin*
34. *Ball*
35. *Bottom bearing housing*
36. *Washer*
37. *Screw*
38. *Gasket*

6.6.2 Dismantling


NOTE

Clean the space in the bowl casing thoroughly before starting to dismantle the bowl spindle to prevent contaminations falling down into the oil gear housing.


1. Unscrew the six screws and remove the hood and O-ring.

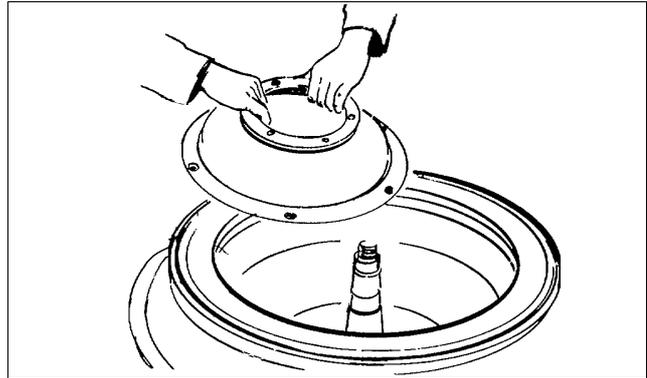


2. Unscrew the three screws and remove the protecting plate, O-ring and protecting collar.

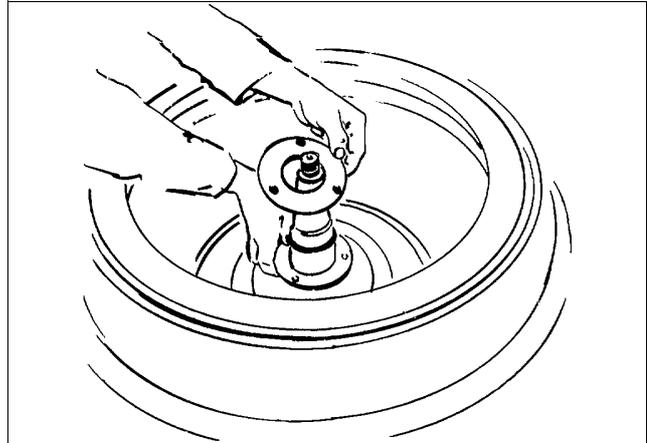


3. Unscrew the six screws and remove the guard and O-ring.

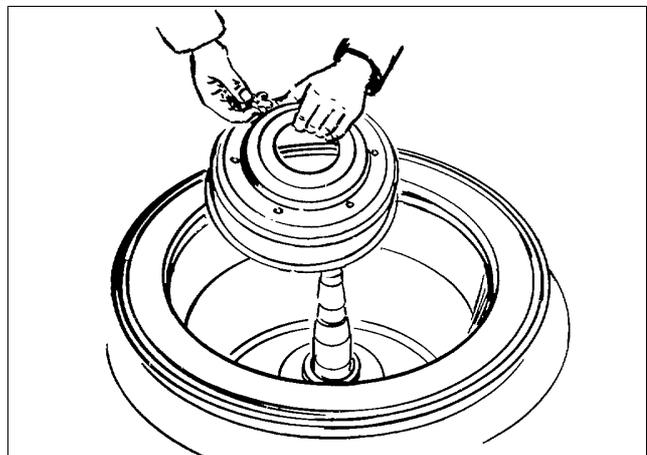


4. Loosen (but do not remove) the six screw plugs for the buffers with a spanner and a hammer.

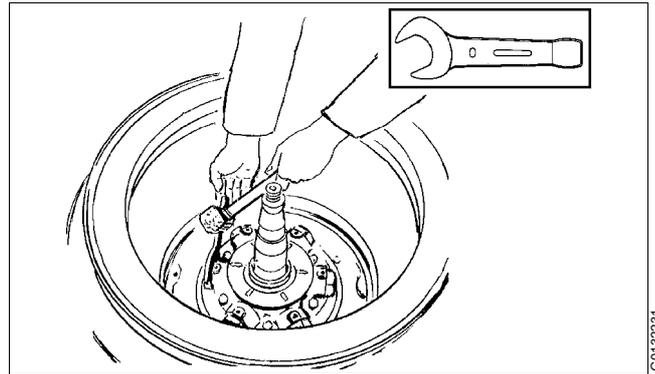


5. Unscrew the six screw plugs and remove the springs. Move the spindle top a few turns in a circle while pressing outwards. This will disengage buffers from the ball bearing housing.

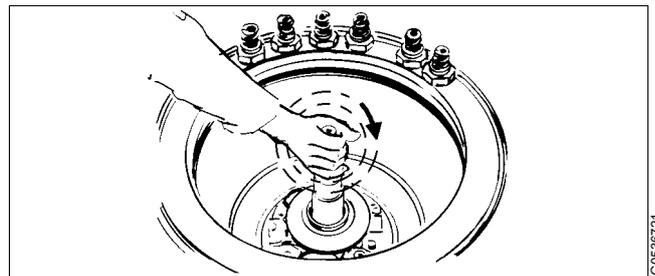


6. Remove the six buffers from the spring casing.

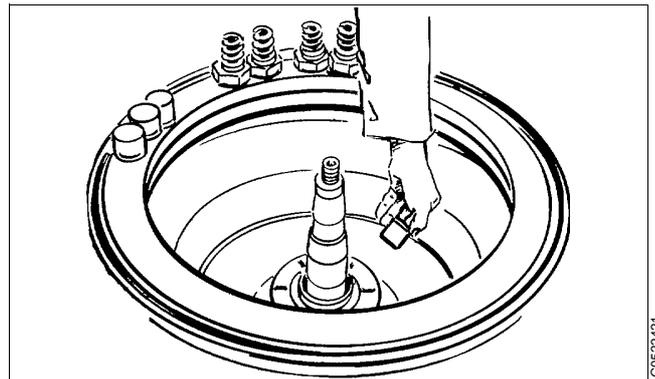

7. Unscrew the six screws holding the spring casing.

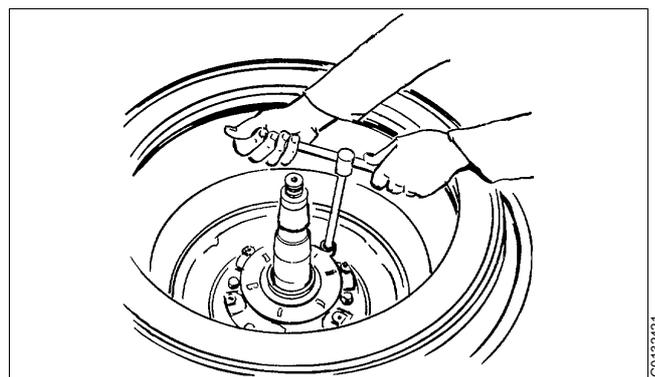

- 8. Prize out the ball bearing housing from the spring casing with a screw driver.
- 9. Remove the spring casing and gasket.

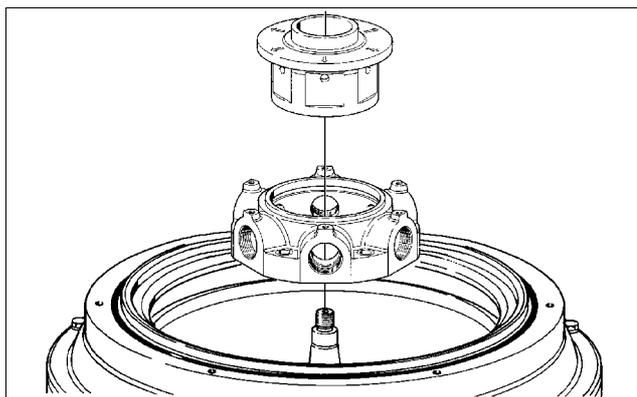

G0045011


- 10. Drain the oil from the worm gear housing.



CAUTION


Burn hazards

Lubricating oil and various machine surfaces can be hot and cause burns.

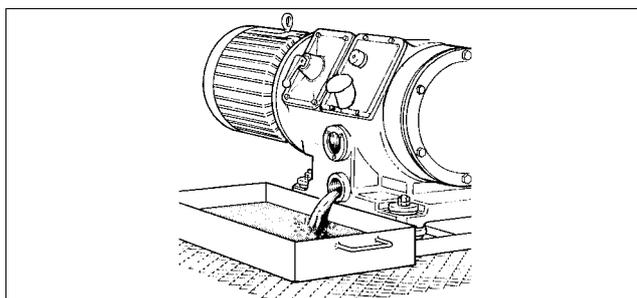


G0036921

- 11. Remove the brake cover and revolution counter cap and their gaskets.

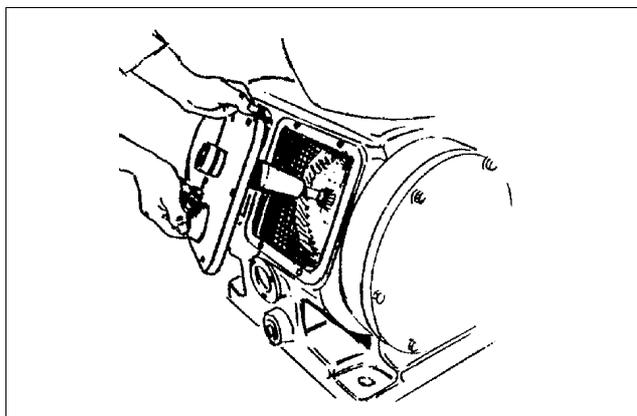


G0127911

- 12. Knock out the taper pin from the worm wheel stop ring.

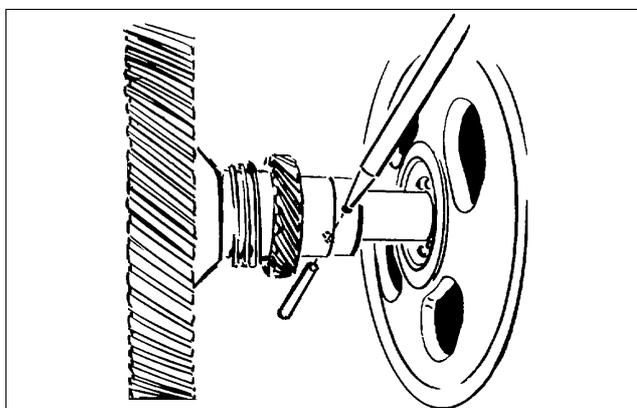


G0024511

13. Push the worm wheel to one side before removing the spindle. If worm wheel is stuck use a piece of wood to loosen it.

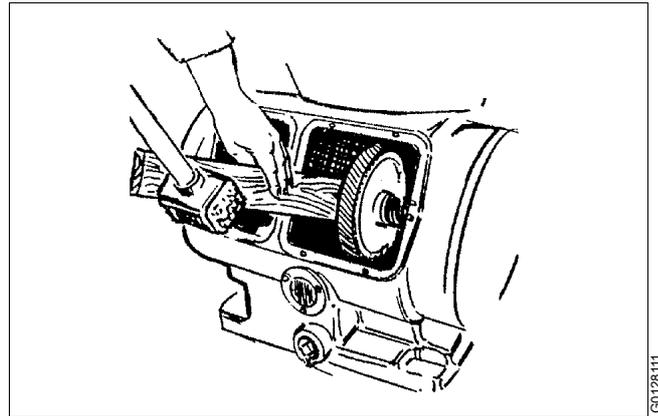


G0128111

14. Fit the lifting tool onto the spindle and lift out using the hoist.

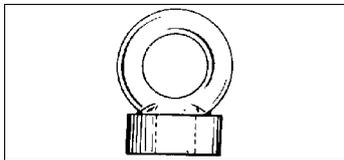

S0066811

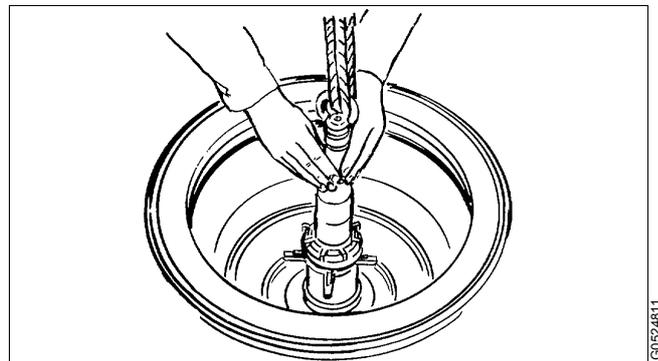


G0524811

15. Pull off the ball bearing (1) together with the spacing washer (2) and upper ball race (3) for the axial bottom ball bearing.


16. Remove the conveyor (4) for worm.

17. Remove the oil fan (5).

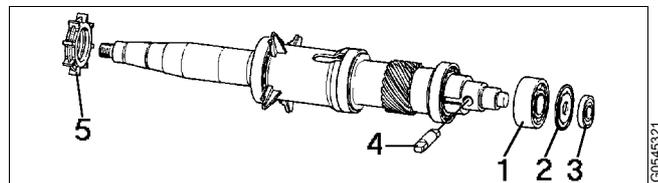

G0546321

18. Remove the worm and stop sleeve from the spindle. Pull off ball bearings from the worm. Use a washer (a) as a support for the puller.

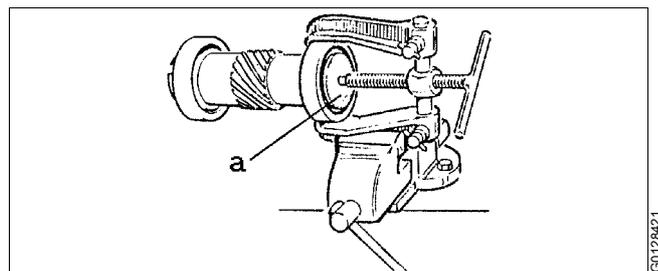


G0128421

19. Drive off the top ball bearing from the sleeve spindle with the driving-off sleeve. Use a wooden plank or similar as a soft base for the spindle top.




S0066611

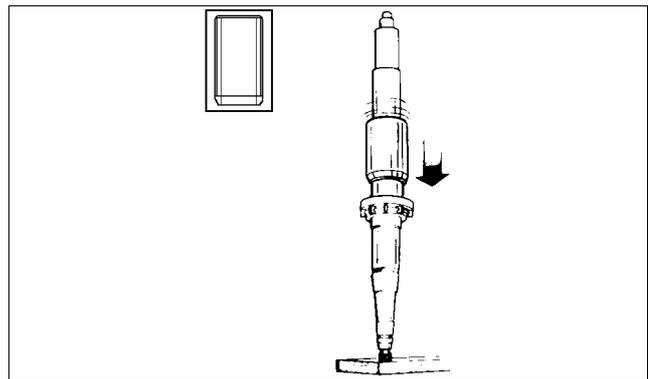


G037511

 20. Lift out the axial bottom ball bearing and the washer beneath using the lifting pin.




S0066711

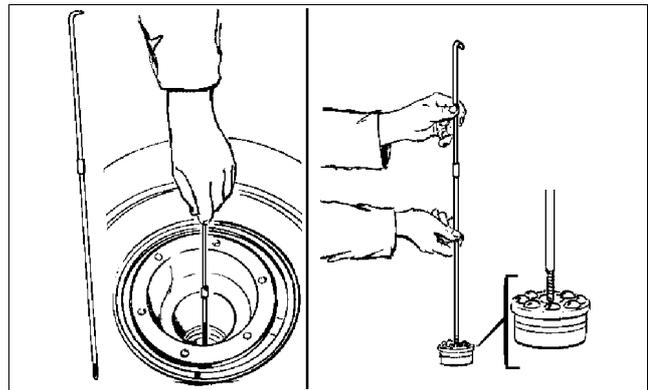


G0136641

21. Lift out the bottom sleeve using the lifting pin.

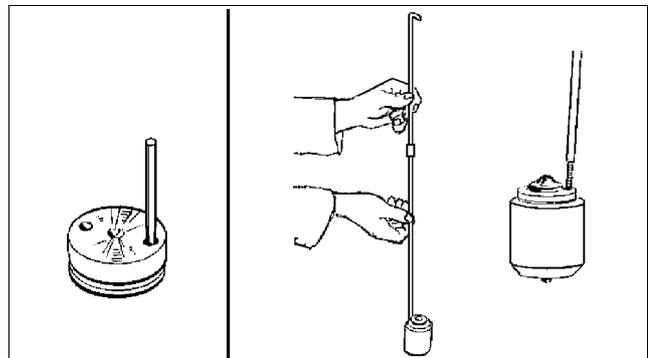

G0136631

22. Knock the slotted pin (1) out of the spacing sleeve (2) and remove it. Unscrew support plug (3) using two screws (4) with threads 1/4"-20 UNC to make height adjusting ring (5) accessible.

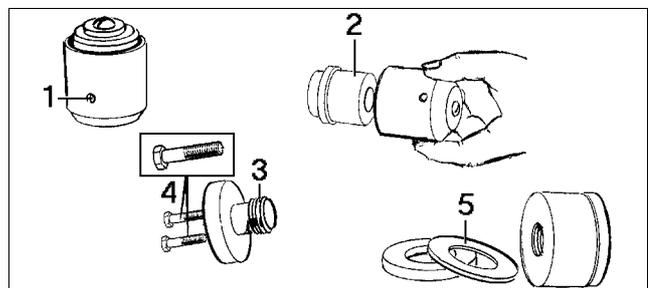


G0136631


23. Remove deposits and clean all parts thoroughly in a suitable cleaning agent. See chapter "5.6 Cleaning" on page 93.

6.6.3 Assembly

 1. Fit the bottom sleeve with mounted parts (rings and sleeve) into the bottom bearing housing. Use the lifting pin.




Check that one ball is fitted both on top and bottom of the bottom sleeve.

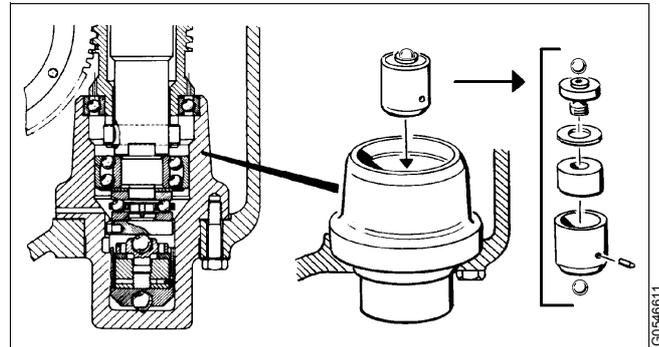

2. Fit the washer and the ball bearing onto the bottom sleeve.

When mounting ball bearings on the spindle and worm as described below, the bearings must be heated in oil to **max. 125 °C**.

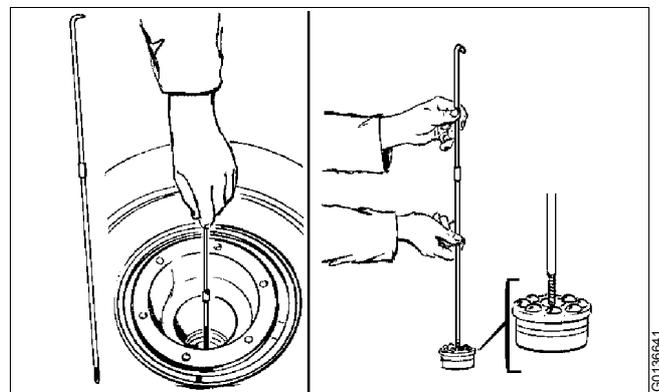

WARNING

 
Burn hazards

Use protective gloves when handling the heated bearings.

NOTE

If any doubt how to mount roller bearings in a correct way, see the detailed description in chapter [“5.9.1 Ball and roller bearings”](#) on [page 103](#).


3. Heat the ball bearing and fit it on the spindle.



4 **Check point**


“5.4.24 Worm; wear of groove” on page 90.

- 4. Heat the two ball bearings and fit them on the worm.

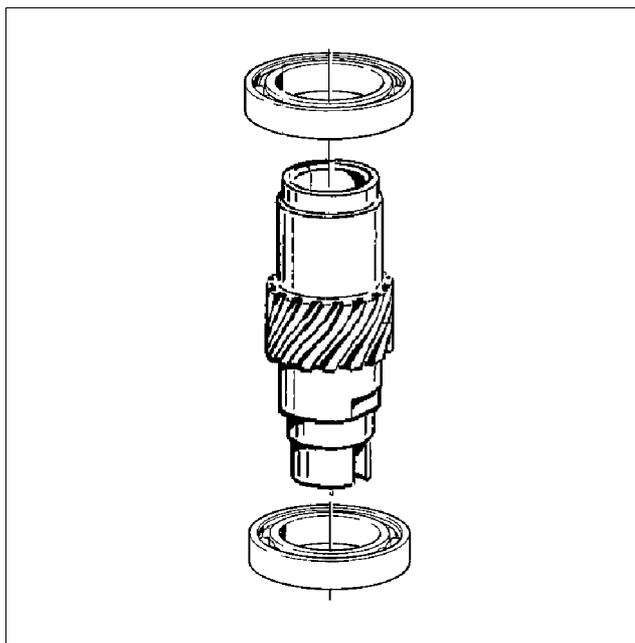


G0602011

- 5. Fit the stop sleeve (1) and the worm (2) on the spindle.

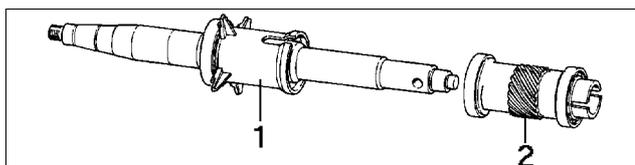

G0545221


- 6. Fit the ball bearing (1) on the spindle. Then fit the spacing washer (2) and upper ball race (3) for the axial bottom bearing. The ball race must be heated.

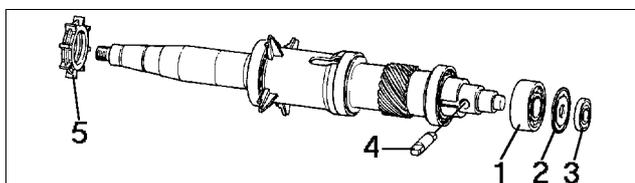


G0545321

- 7. Fit the conveyor (4) and the oil fan (5).

- 8. Fit the lifting tool to the spindle and lift it using a hoist.

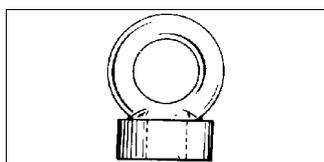


S0066811

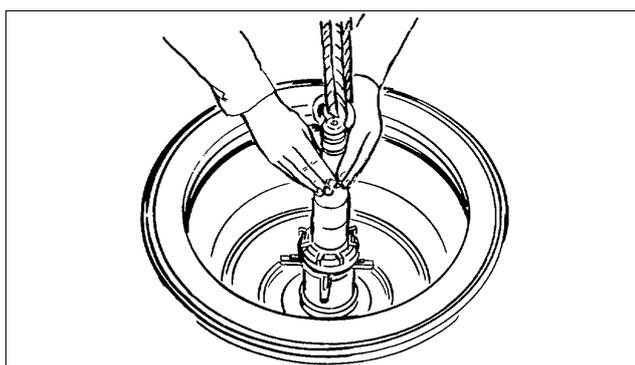

G0524811

9. Carefully lower the spindle into the frame and guide the spindle into the right position in the bottom bearing housing so the ball bearings enter their seats. If the ball bearings do not completely enter their seats, tap the spindle top gently with a tin hammer.

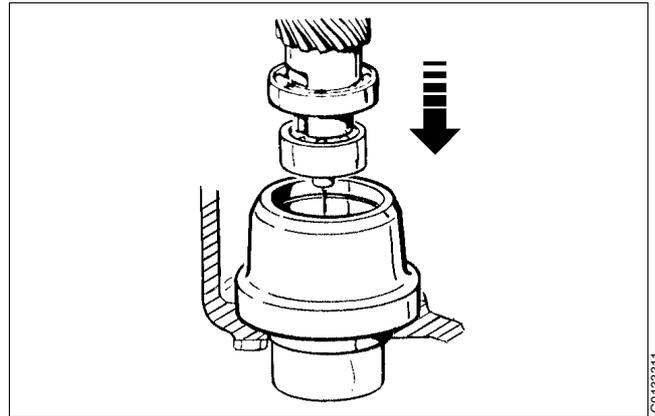


G0133311

4 Check point


“5.4.6 Buffer springs and ball bearing housing” on page 79.

10. Fit the spring casing with gasket and ball bearing housing. Position the flat surfaces of the ball bearing housing in front of the buffer holes in the spring casing.

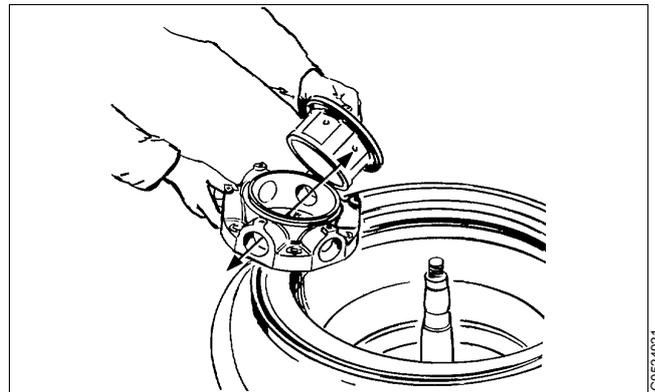


G0524921

11. Tighten the six screws for the spring casing.

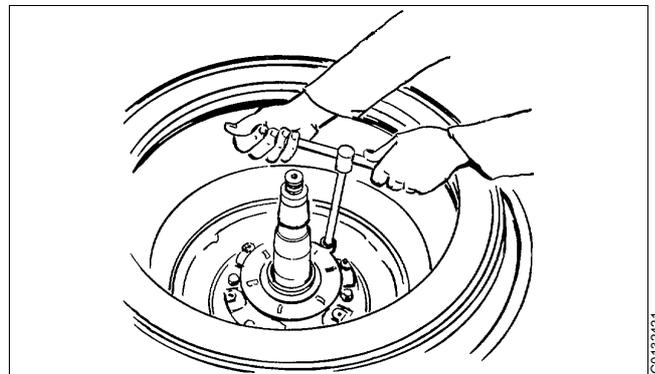


G0132421

12. Fit the buffers, springs and screw plugs.

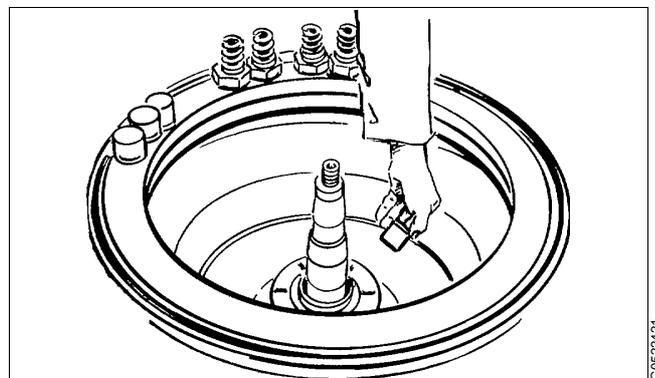


G0522421

13. Tighten the six screw plugs.

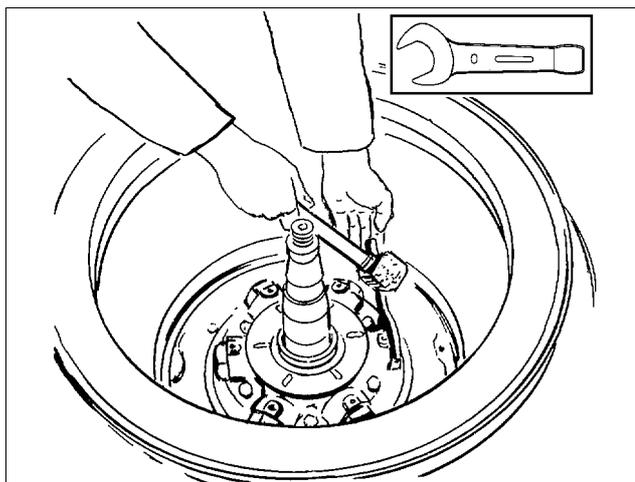

14. Fit the guard with O-ring and tighten the six screws.

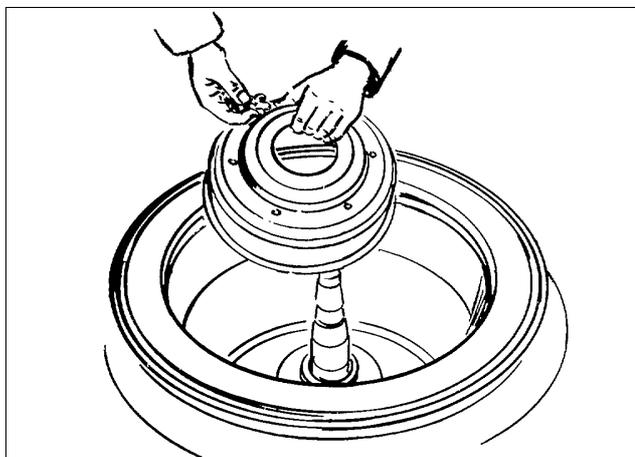


15. Fit the protecting collar with O-ring and protecting plate.

NOTE

Check that the protecting collar is in the bottom position before tightening the protecting plate.


Tighten the three screws for the protecting plate.

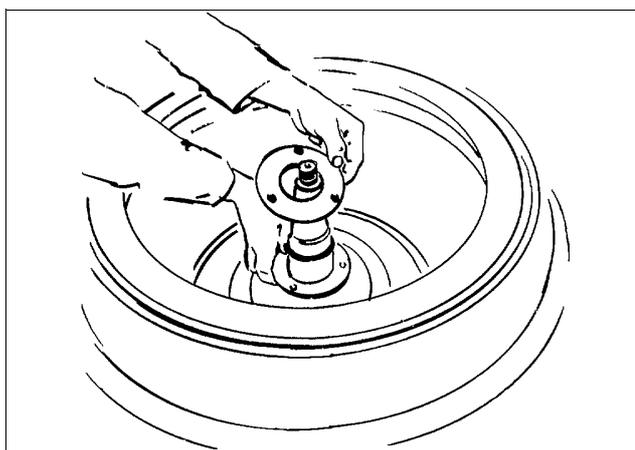

16. Fit the hood with O-ring and tighten the six screws.

4 **Check point**

“5.4.3 Bowl spindle; height position” on page 76.

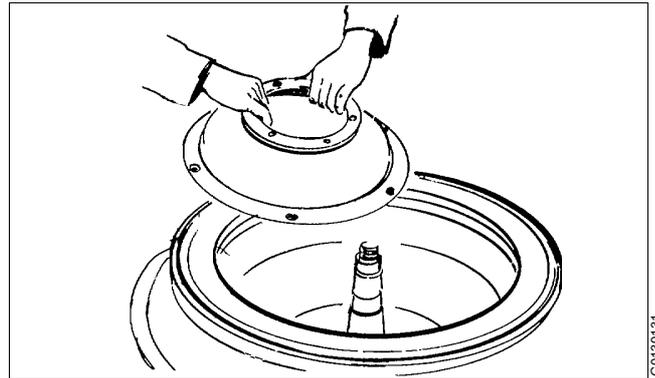


G0139131

17. Match the worm wheel with the teeth in the worm of the bowl spindle. Knock the taper pin into the worm wheel stop ring.

4 **Check points**

“5.4.26 Worm wheel shaft; radial wobble” on page 91,


“5.4.4 Bowl spindle; radial wobble” on page 77.

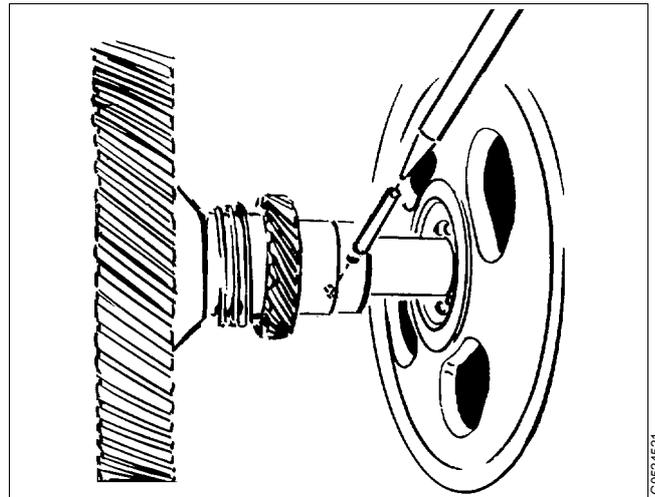

G0524521

18. Pour oil into worm gear housing. The oil level should be exactly in the middle of the sight glass.

For correct oil volume and recommended oil brands, see chapter “8.9 Lubricants” on page 204.

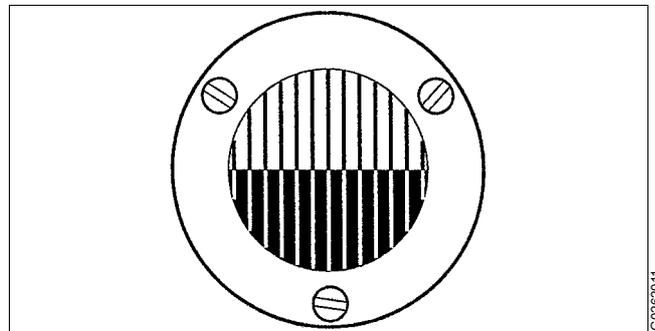


G0262011

4 **Check point**

“5.4.5 Brake” on page 78.

19. Fit the brake cover and revolution counter cap and their gaskets.

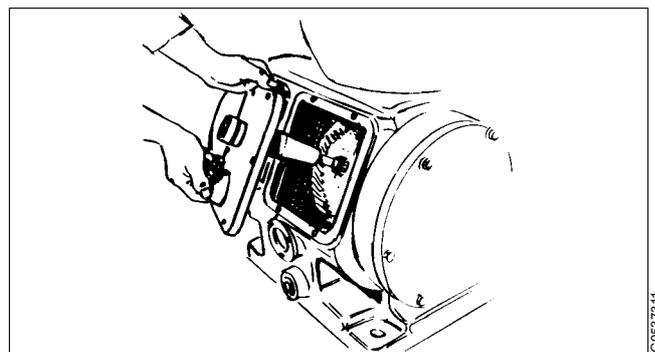

G0537311

1. *Ball bearing*
2. *Screw*
3. *Spring washer*
4. *Round nut*
5. *Lock washer*
6. *Bearing shield*
7. *Spring washer*
8. *Nut*
9. *Oil shield*
10. *Taper pin*
11. *Stop ring*
12. *Worm wheel*
13. *Ball bearing*
14. *Sealing ring*
15. *Sealing washer*
16. *O-ring*
17. *Worm-wheel shaft with coupling drum*
18. *Nave*
19. *Friction block*
20. *Friction pad*
21. *Holding bracket*
22. *Ball bearing*
23. *Spacing sleeve*
24. *Ball bearing*
25. *Lock washer*
26. *Round nut*
27. *Gasket*
28. *Coupling disc*
29. *Elastic plate*

6.7.2 Dismantling




WARNING


Entrapment hazards

1. Make sure that rotating parts have come to a **complete standstill** before starting **any** dismantling work.

The revolution counter and the motor fan indicates if separator parts are rotating or not.
2. To avoid accidental start, switch off and lock power supply before starting **any** dismantling work.

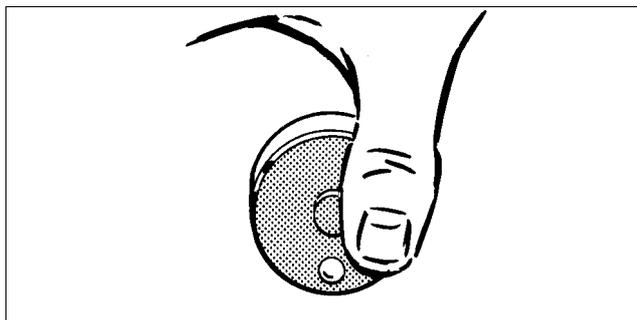

G0246221

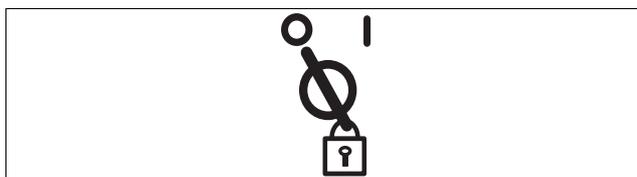

S0051011

The parts must be handled carefully. Don't place parts directly on the floor, but on a clean rubber mat, fibreboard or a suitable pallet.

If the bowl spindle has been removed according to earlier description, points 1-3 below are already done. Proceed then with point 4.


1. Drain the oil from the worm gear housing.



CAUTION


Burn hazards

Lubricating oil and various machine surfaces can be hot and cause burns.

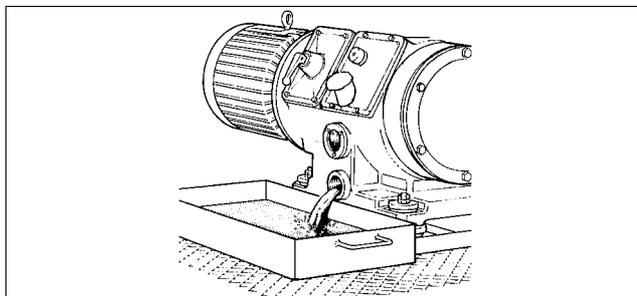


G0035921

2. Remove the brake cover and revolution counter cap and their gaskets.

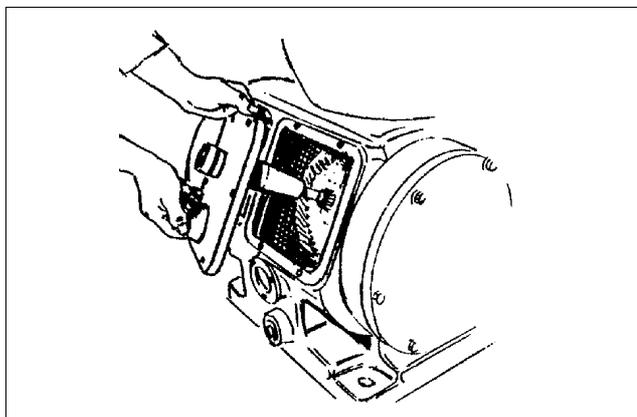

G0127911

3. Knock out the taper pin from the worm wheel stop ring.

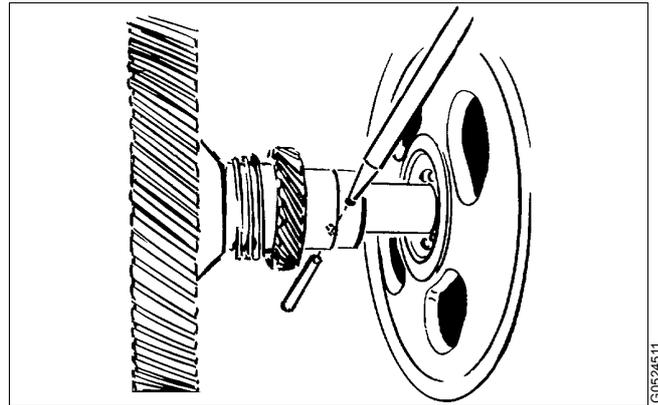


G0524511

4. Remove the bearing shield/built-on pump.

Separator with no built-on pump


- a. Remove the bearing shield and gasket.

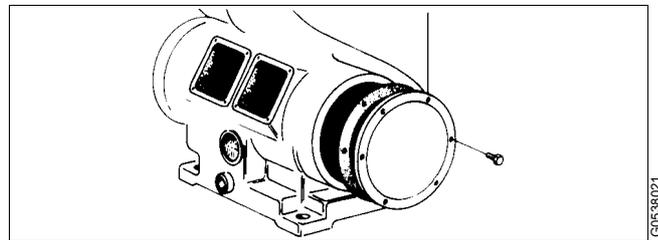

G0538021


Separator with built-on pump

- a. Remove the pipe connections from the pump.
- b. Remove the sleeve halves over the coupling.

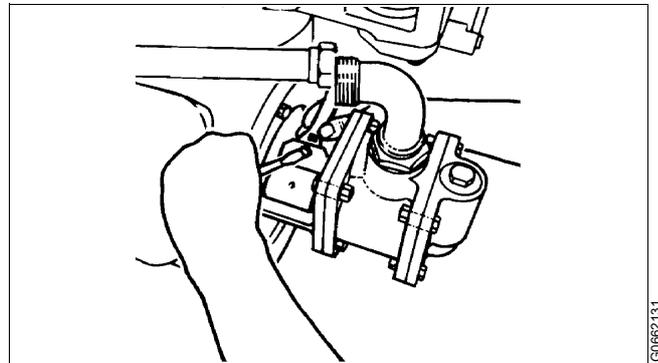


G0662131

- c. Slacken (do not remove) the stop screw positioned in the coupling half nearest the separator frame. Use a hexagon wrench. Turn the coupling drum by hand until the stop screw is in a convenient position.

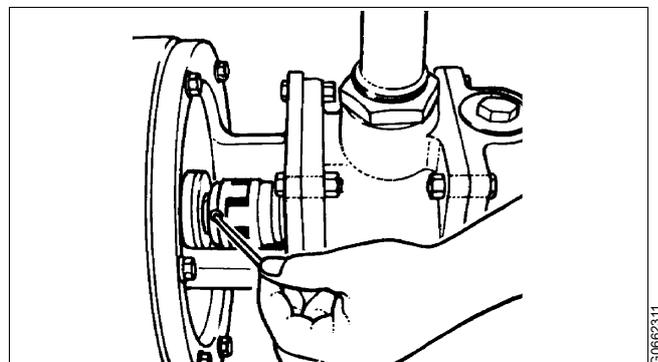


G0662311

d. Remove the pump assembly and gasket.

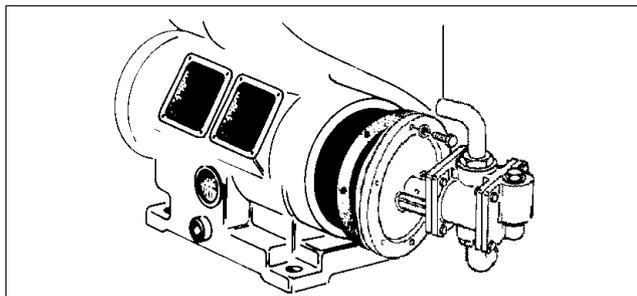


G0538031

5. Unscrew the two nuts holding the oil shield. The shield can not be removed from the housing before the bearing shield is moved.

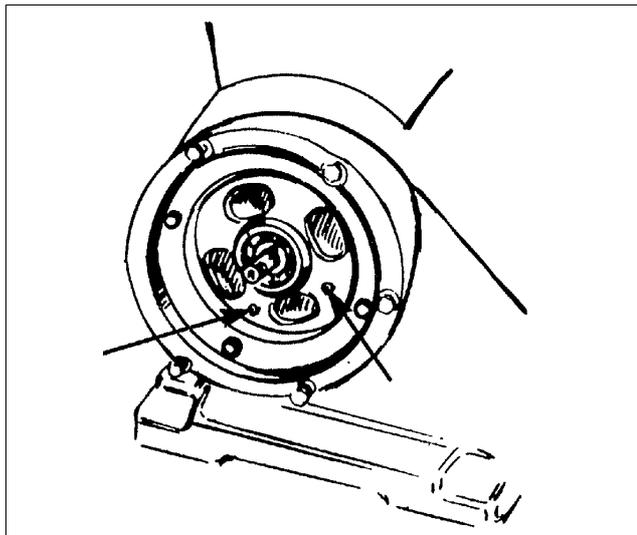

G0602911

6. Unscrew the four screws for the bearing shield and remove it together with the oil shield.

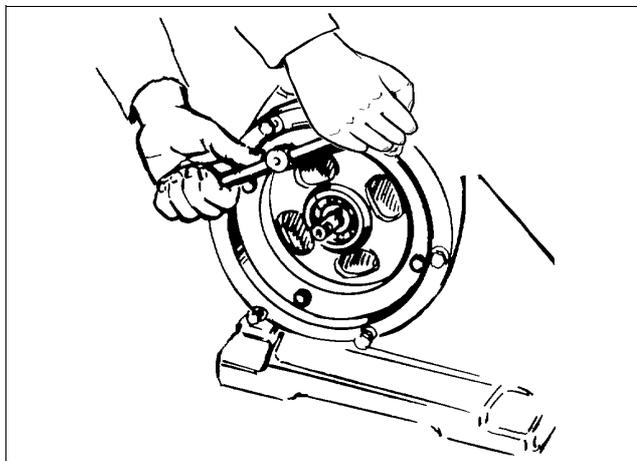


G052521

7. Unscrew and remove the round nut and lock washer.




S0066411

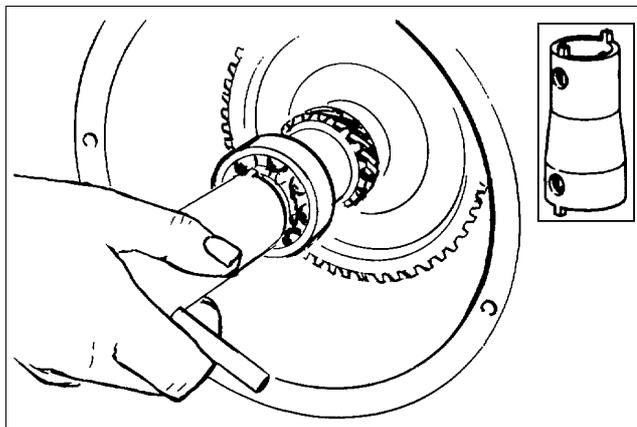


G0529421


8. Remove the ball bearing.

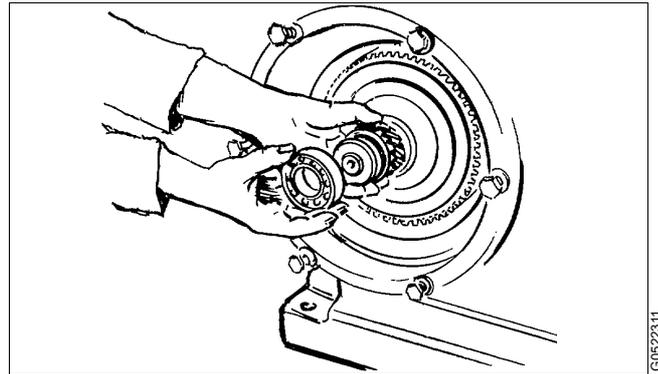

9. Remove the stop ring and worm wheel with ball bearing.

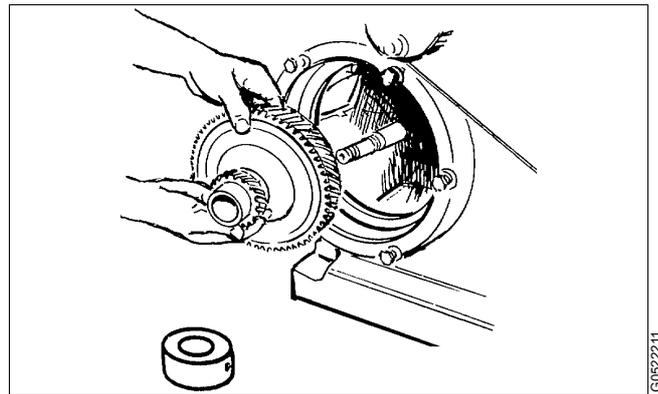


10. Pull off the ball bearing from the worm wheel.
Use a washer as a support for the puller.

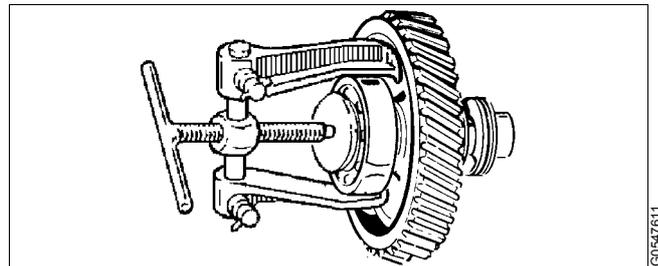


11. Disconnect the motor cables. Note the positions of cables in the terminal box to re-connect correctly (for correct direction of rotation).

12. Remove the electric motor using a hoist.

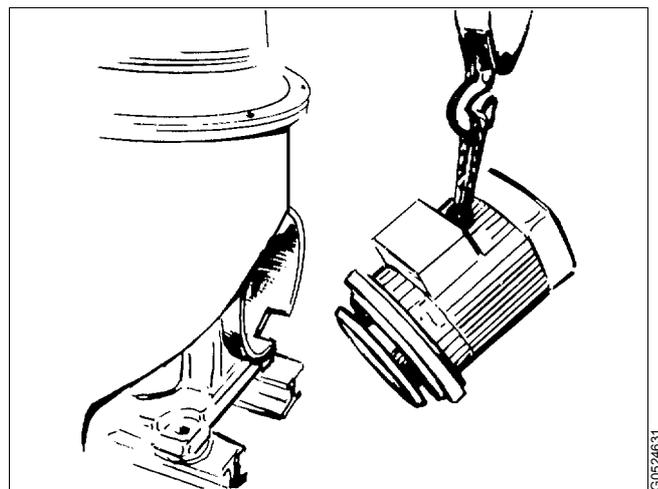


13. Remove the flexible plate and unscrew the six screws for the coupling disc and remove it.

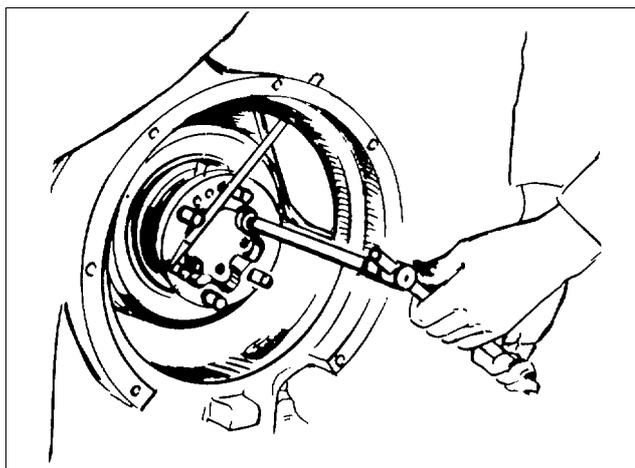


G0524711

14. Remove the worm wheel shaft with friction clutch pulley.

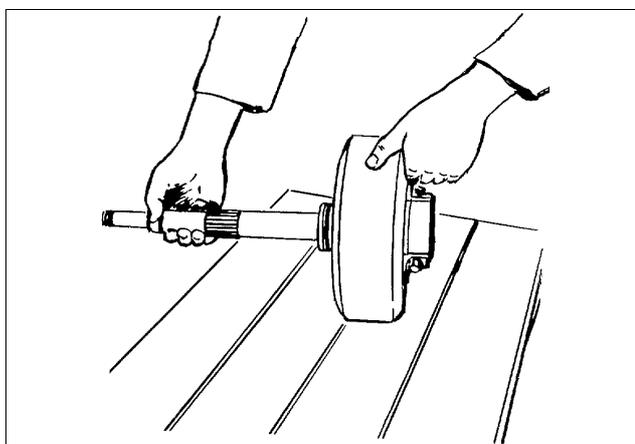


G0522111

 15. To dismantle the nave, unscrew the round nut with the pin spanner and remove the lock washer.




S0066411

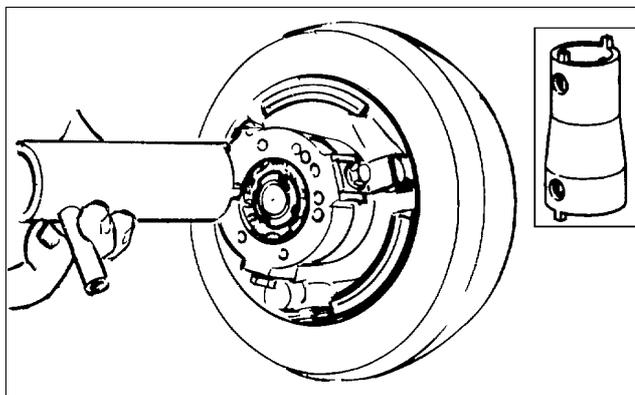


G0522021

16. Pull off the nave with the puller and remove the friction blocks.

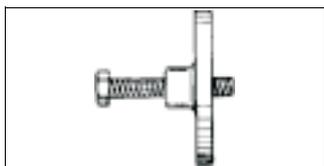


S0065511

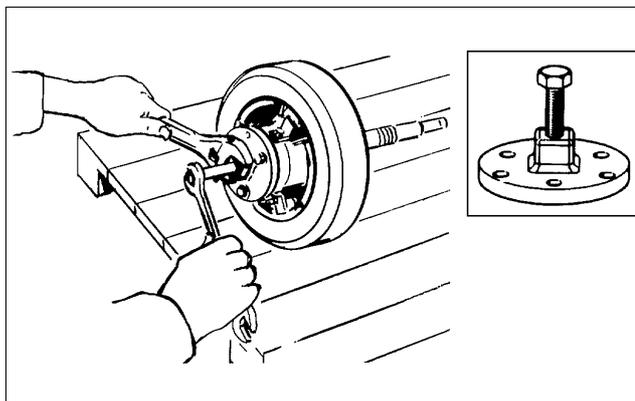


G0528021

17. Remove the sealing washer using two screws with 1/4"-20 UNC threads.

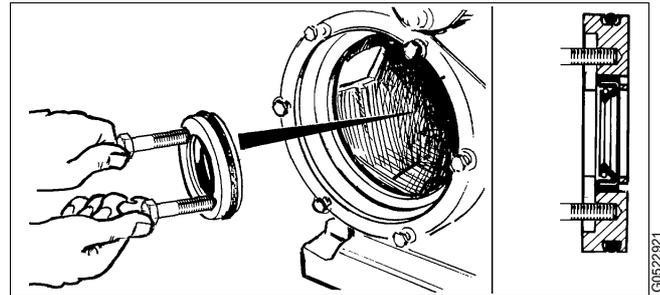


18. Remove the sealing ring from the sealing washer.
19. Remove deposits and clean all parts thoroughly in a suitable cleaning agent. See chapter "5.6 Cleaning" on page 93.

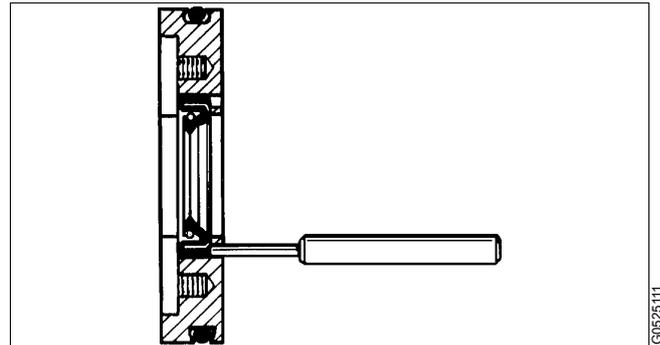

6.7.3 Assembly

1. Lubricate the O-ring on the sealing washer periphery and the sealing ring with silicone grease. Fit the sealing washer in frame and check that the sealing ring is fitted in the correct direction, as illustrated.

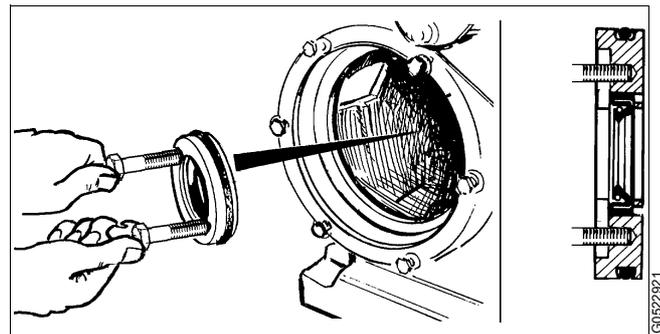



4 Check point

"5.4.7 Coupling friction pads" on page 81.



2. Fit the friction blocks (3) with pads (2) on the nave and lock them with holding brackets (4). Slip the nave and the ball bearing (1) with the largest inner diameter onto the shaft. Knock the ball bearing into its seat with the driving-on sleeve and fill the space between the ball bearings to one third with ball bearing grease - take care not to leave grease on pads.

For recommended lubricants, see chapter "8.9 Lubricants" on page 204.

 
3. Fit the ball bearings (1) and spacing sleeve (5) with the driving on sleeve tool to force the ball bearings into their correct positions.

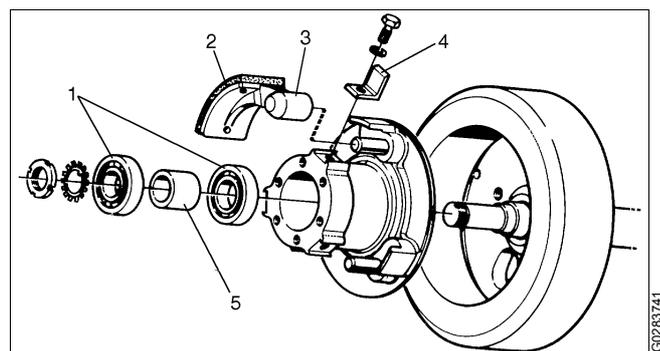

 4. Tighten the round nut with the pin spanner and secure it with the lock washer.

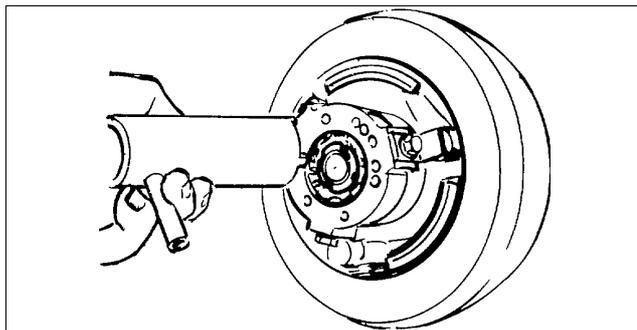

5. Fit the worm wheel shaft.

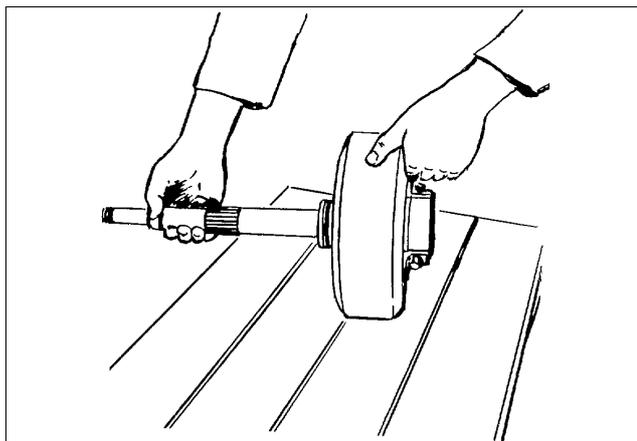


4 **Check point**

“5.7.1 Worm wheel and worm; wear of teeth” on page 97.

6. Heat the ball bearing and fit it on the worm wheel.

When mounting the ball bearings on the worm wheel and shaft, the bearings must be heated in oil to **max. 125 °C**.

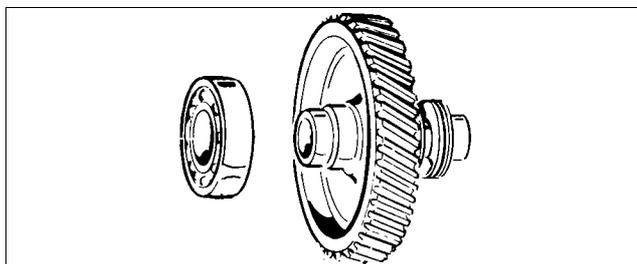



WARNING


Burn hazards

Use protective gloves when handling the heated bearings.


NOTE

If any doubt how to mount roller bearings in a correct way, see the detailed description in chapter “5.9.1 Ball and roller bearings” on page 103.


- 7. Fit the worm wheel with the ball bearing and fit the stop ring.

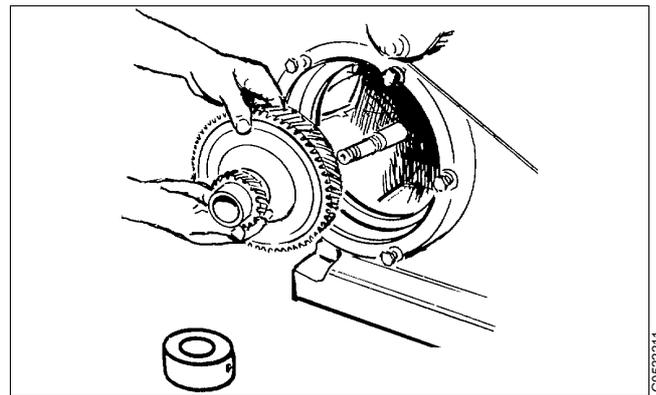



- 8. Fit the ball bearing.

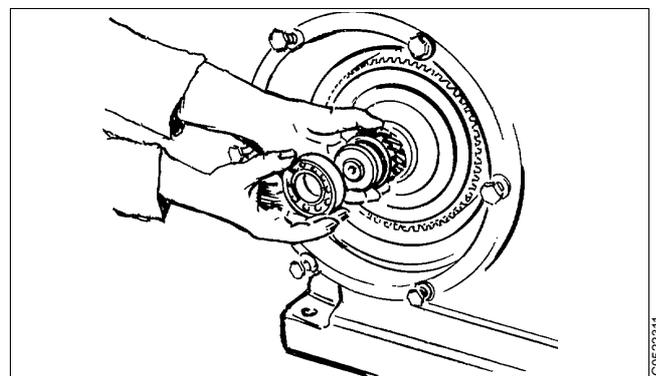


- 9. Knock the ball bearing into its seat with the driving-on sleeve tool.

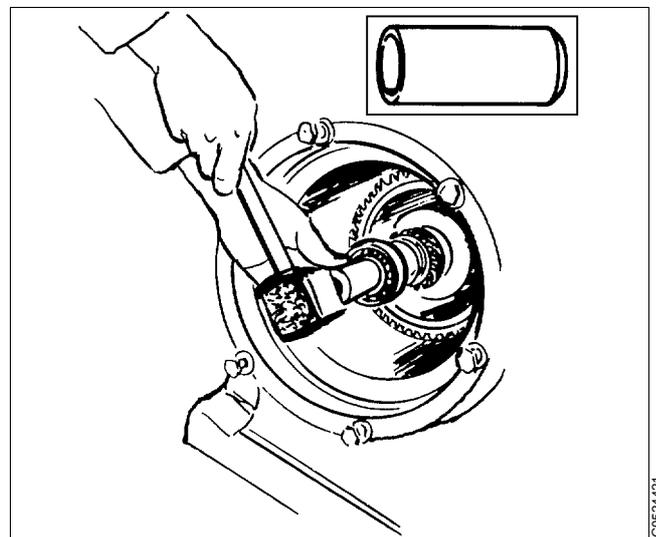

 
10. Tighten the round nut with the pin spanner and secure it with the lock washer.

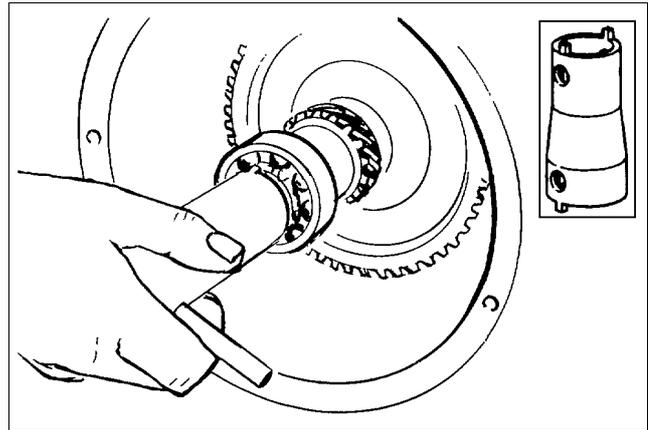

11. Fit the bearing shield together with the oil shield. Tighten the four screws for the bearing shield.

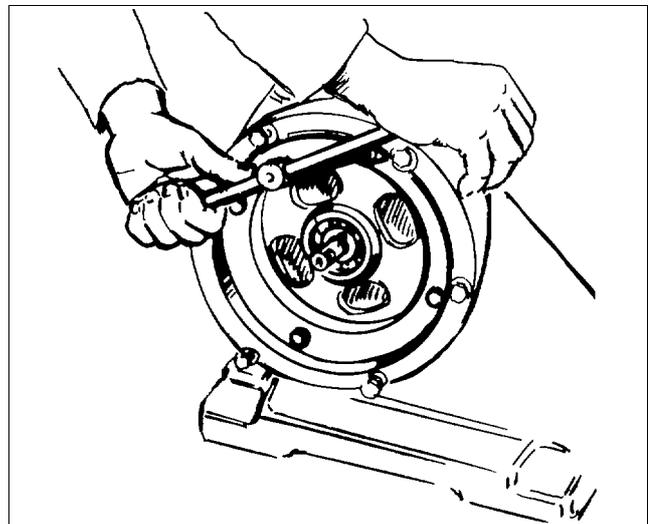

12. Tighten the two nuts holding the oil shield in the bearing shield.

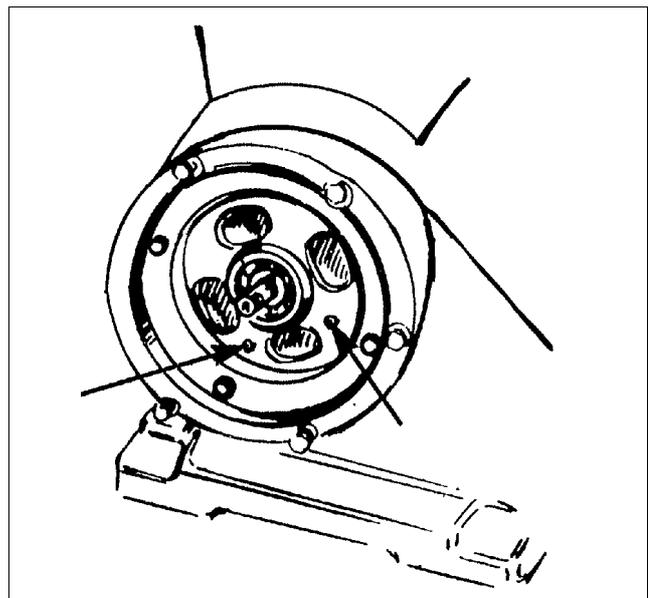


13. Fit the coupling disc with gasket and tighten the six screws. If necessary, use the driving-on sleeve.

14. Fit the flexible plate.

4 **Check point**


[“5.4.12 Flexible plate in coupling” on page 84.](#)

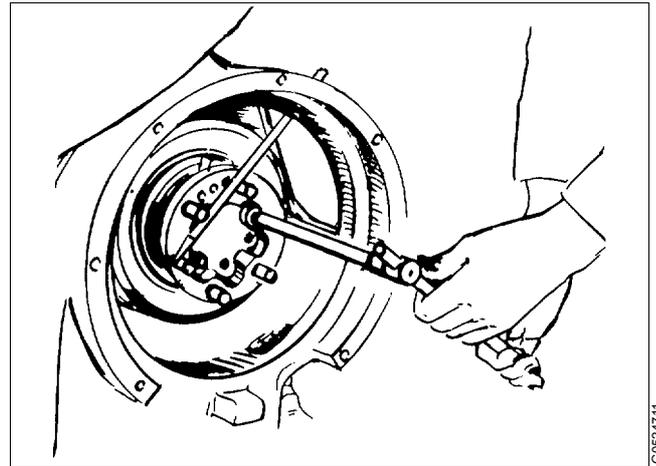

G0524711

15. Fit the electric motor.

	<p>WARNING</p> <p>Disintegration hazards</p>
<p>When power cables have been connected, always check direction of rotation, see “4.1.3 Ready for start” on page 40. If incorrect, vital rotating parts could unscrew causing disintegration of the machine.</p>	

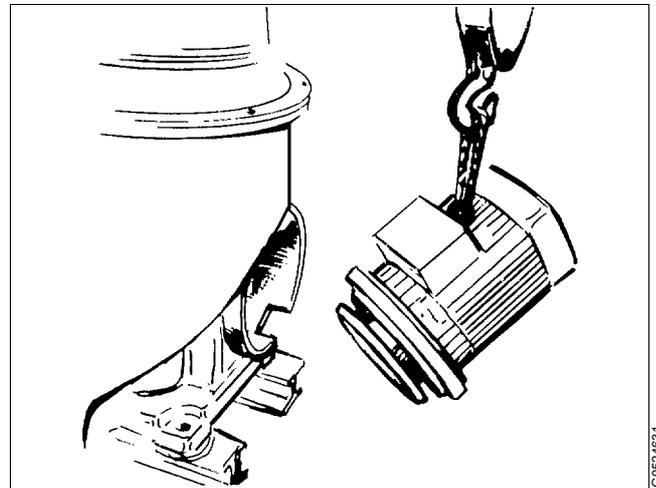


G0524631

The remaining description in this section implies that the bowl spindle is mounted in the frame. If not, proceed with the assembly instruction for the vertical driving device in chapter [“6.6.3 Assembly” on page 147](#).

16. Match the worm wheel with the teeth in the worm of the bowl spindle. Knock the taper pin into the worm wheel stop ring.

4 **Check point**

[“5.4.26 Worm wheel shaft; radial wobble” on page 91.](#)

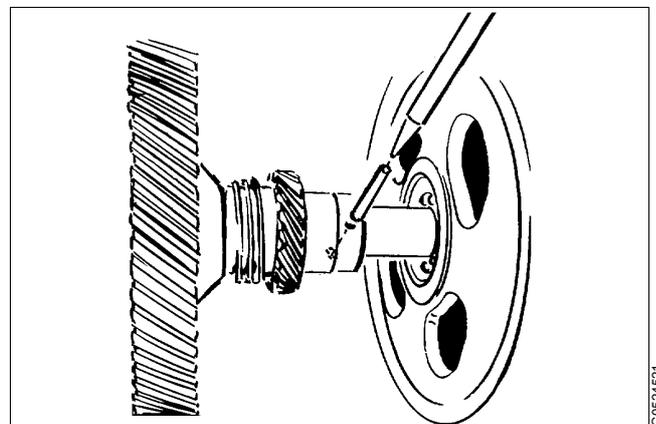


G0524521

17. Fit the bearing shield/built-on pump.

Separator with no built-on pump


- a. Fit the gasket and bearing shield. The parts can be fitted only in one position because of the asymmetrical positioned screw holes.

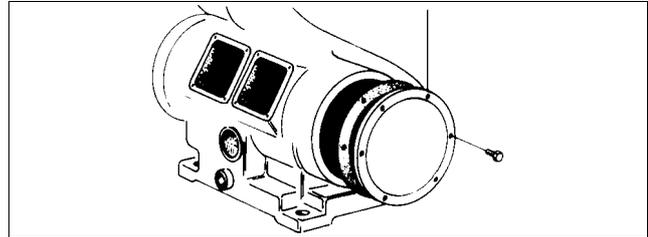

G0538021


Separator with built-on pump

- a. Check that the key for the pump coupling half is fitted in the keyway in the worm wheel shaft.
 b. Fit the gasket and pump assembly. Be careful that the lipseal ring is not damaged by the shaft end and by the key in shaft.

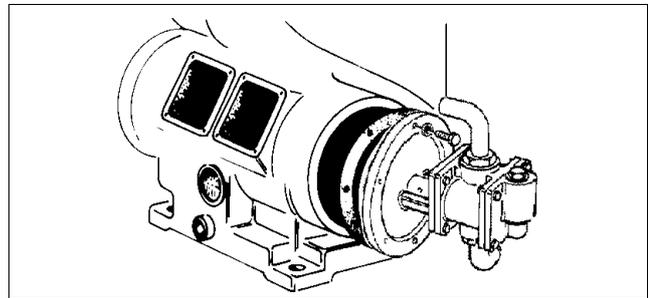


G0538031

- Check that the key is facing the keyway in the coupling half.
 c. Check that the clearance on each side of the coupling flexible element is **2 mm**.
 Tighten the stop screw in the coupling half with a hexagon wrench. Check that the holders for the lipseal rings are located so that the sleeve halves can easily be fitted.

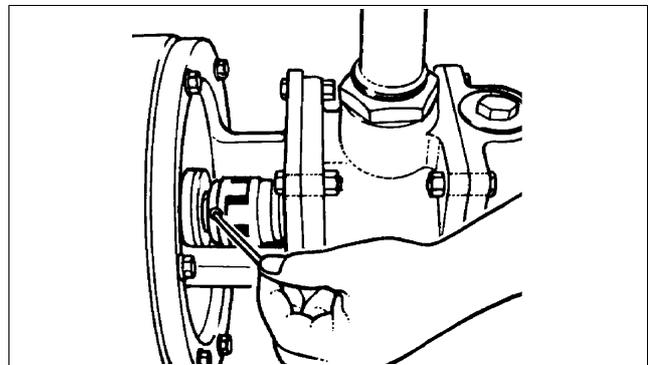

G0662311

- d. Mount the sleeve halves over the coupling.
 e. Refit the pump connections.

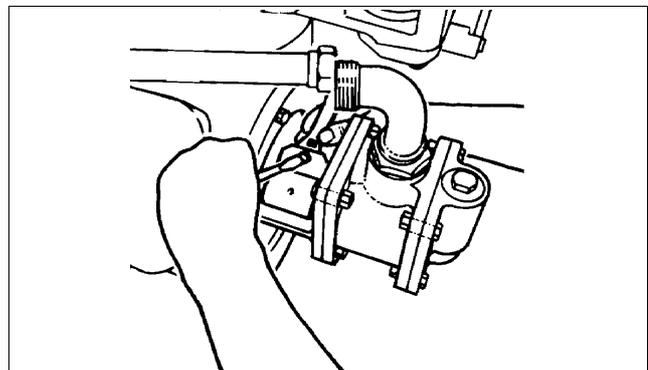


G0662131

18. Pour oil into worm gear housing. The oil level should be exactly in the middle of the sight glass.

Oil volume: Approx. **12 litres**.

For recommended oil brands, see chapter [“8.9 Lubricants”](#) on page 204.

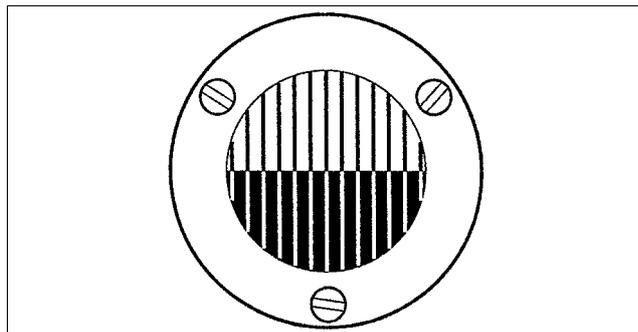


G0262011

4 Check point

[“5.4.5 Brake”](#) on page 78.


19. Fit the brake cover and revolution counter cap and their gaskets.

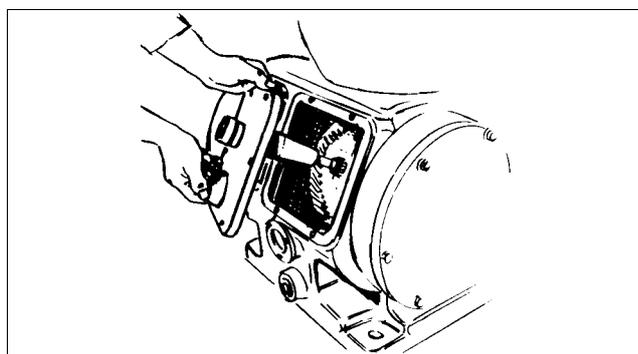

G0537311

6.8 Feed pump (MS) (option)

6.8.1 Exploded view

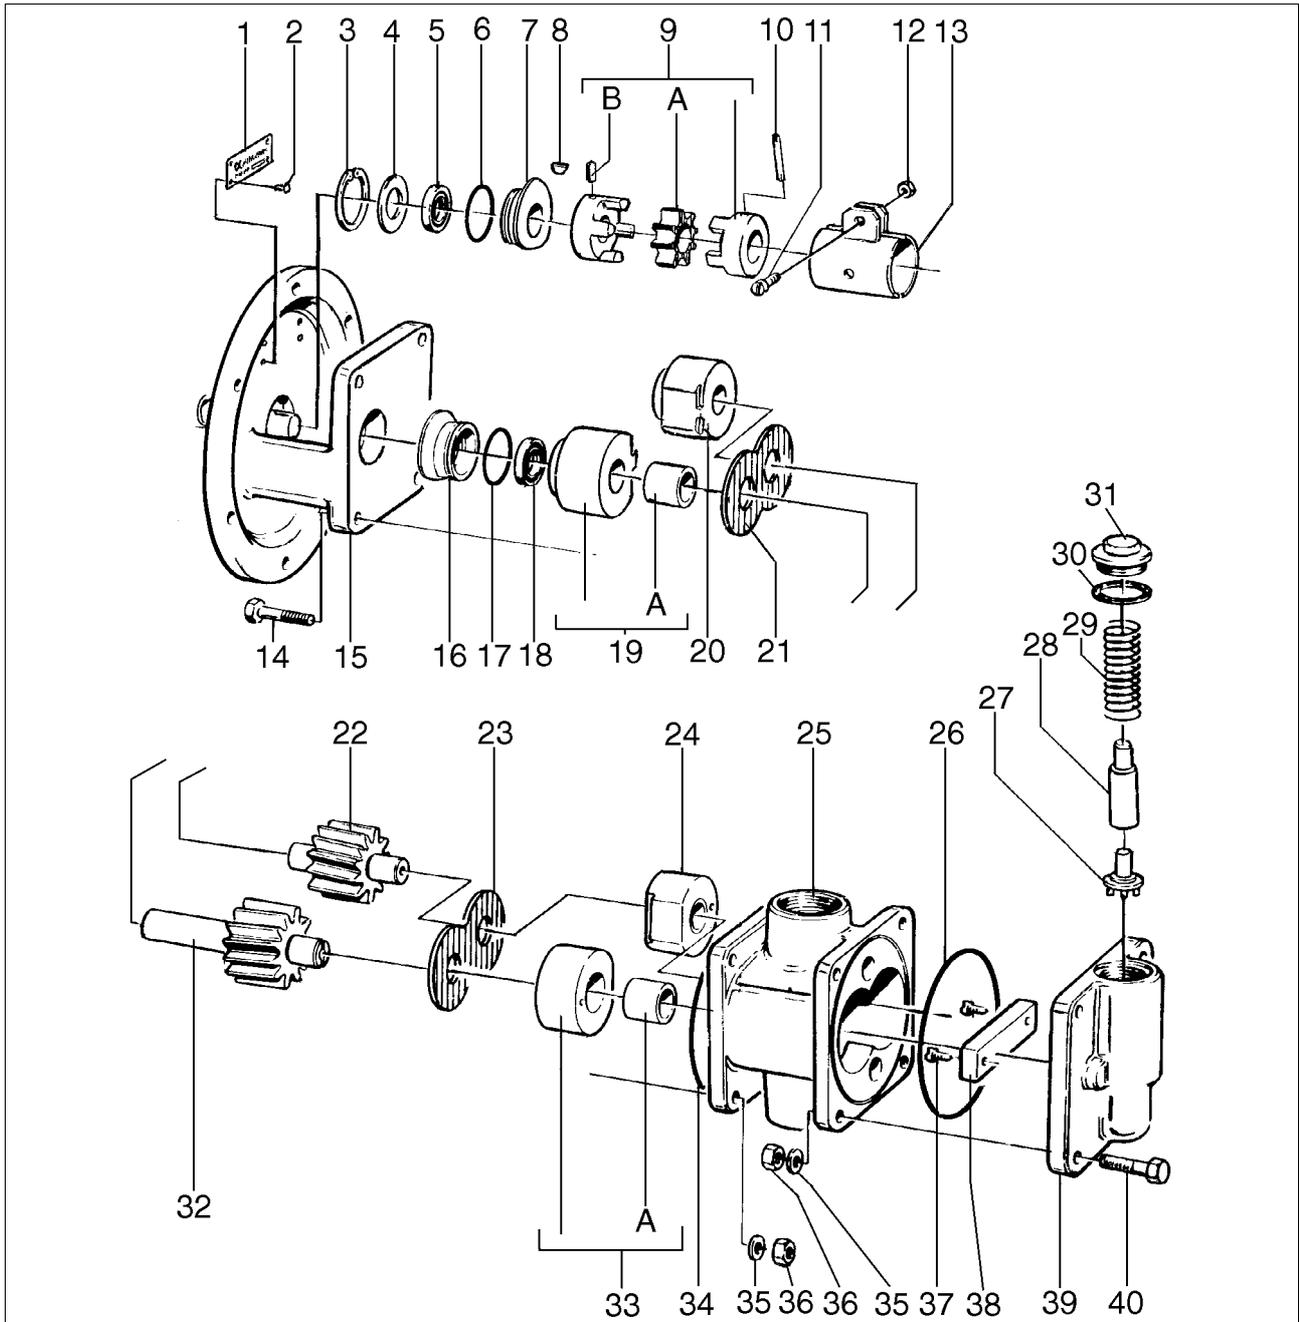

G0662721

- | | |
|----------------------------------|------------------|
| 1. Plate | 20. Bearing |
| 2. Drive screw | 21. Wear gasket |
| 3. Snap ring | 22. Impeller |
| 4. Washer | 23. Wear gasket |
| 5. Lipseal ring | 24. Bearing |
| 6. O-ring | 25. Pump housing |
| 7. Sleeve | 26. O-ring |
| 8. Key | 27. Valve cone |
| 9. Flexible coupling | 28. Guide pole |
| 9A. Tooth rim (flexible element) | 29. Spring |
| 9B. Stop screw | 30. Gasket |
| 10. Tubular spring pin | 31. Cover |
| 11. Screw | 32. Impeller |
| 12. Nut | 33. Bearing |
| 13. Sleeve half | 33A. Bushing |
| 14. Screw | 34. O-ring |
| 15. Bearing shield | 35. Washer |
| 16. Sleeve | 36. Nut |
| 17. O-ring | 37. Screw |
| 18. Lipseal ring | 38.* Spacer |
| 19. Bearing | 39. Shield |
| 19A. Bushing | 40. Screw |

* Not included in all pumps

6.8.2 Dismantling


1. Drain the oil from the worm gear housing.



CAUTION


Burn hazards

Lubricating oil and various machine surfaces can be hot and cause burns.

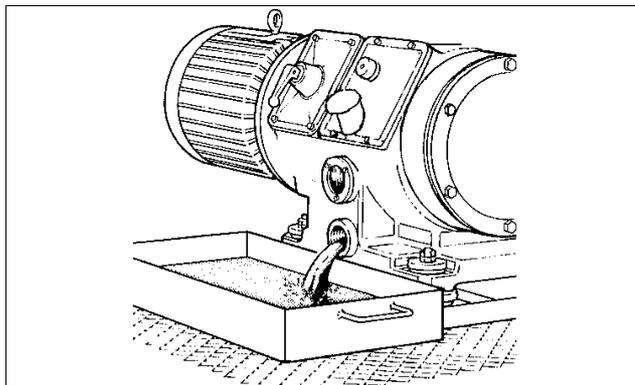


G0036921

2. Remove the pipe connections from the pump.
3. Remove the sleeve halves over the coupling.

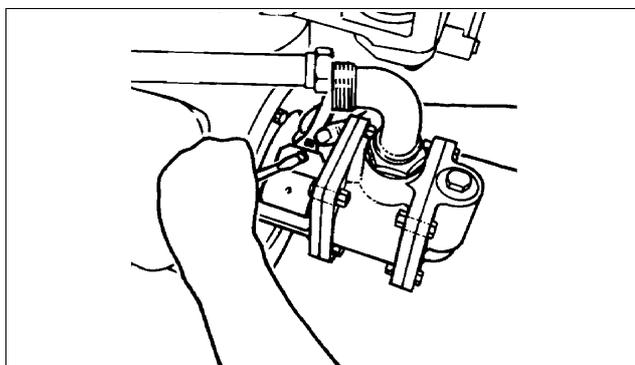


G0662181

4. Drive out the tubular spring pin, positioned in the coupling half nearest the pump.
Turn the coupling drum by hand until the pin is in a convenient position.

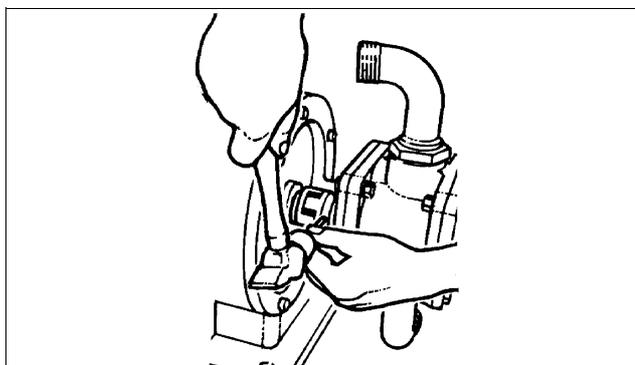


G0662221

5. Slacken (do not remove) the stop screw positioned in the other coupling half with a hexagon wrench.

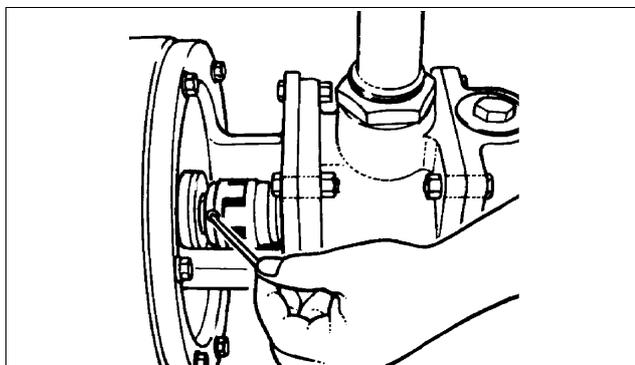


G0662311


- Undo the four screws holding the pump shield and remove the shield.

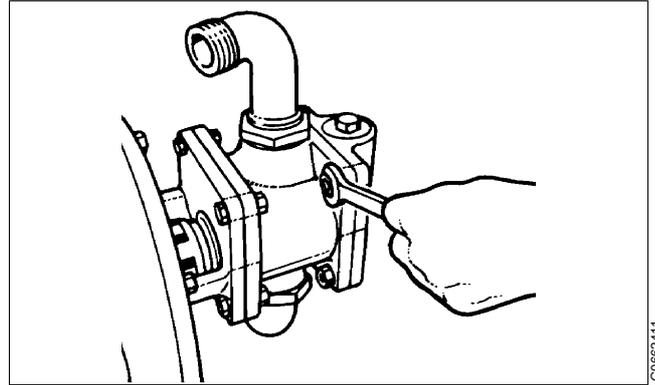

- Insert two screws (3/8"-16 UNC) into the centre hole of the impeller shafts. Use the screws as a handle to withdraw the impellers.

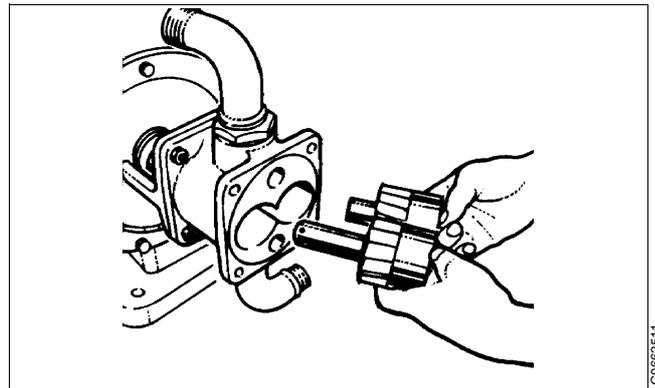

- Slacken the screws for the bearing shield, but do not remove them.
- Remove the coupling by pulling the complete pump outwards a short distance until the coupling can be loosened from the worm wheel shaft. Take care not to damage the lipseal ring.

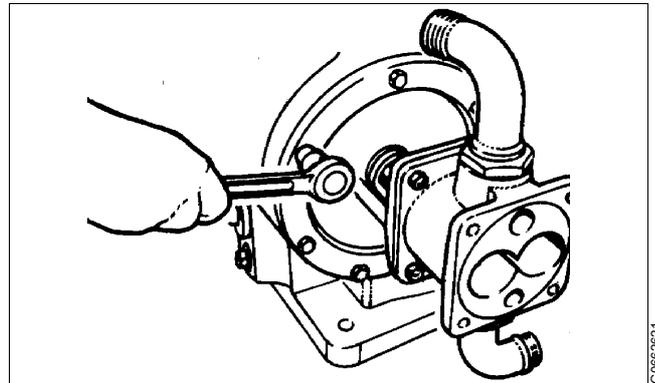

6.8.3 Cleaning and inspection

1. Remove deposits and clean all parts thoroughly in a suitable cleaning agent. See chapter "5.6.2 Cleaning agents" on page 93.
2. Examine following parts:

Bushings (2)

Renew the bushings if they are scratched or there is a play between any impeller shaft and a bushing.

Impeller shafts (5)

Check the impeller shafts for grooves. Polish or renew if necessary.

Wear gaskets (3)


Renew the wear gaskets if any surface is rough, cracked or dented by the impellers.

Relief/safety valve (6)


Examine the sealing surfaces on the valve cone and valve seat in the shield. Grind or renew if necessary.

Flexible coupling (1)

Dismantle and examine the coupling parts. If necessary, renew the flexible element or the complete coupling.

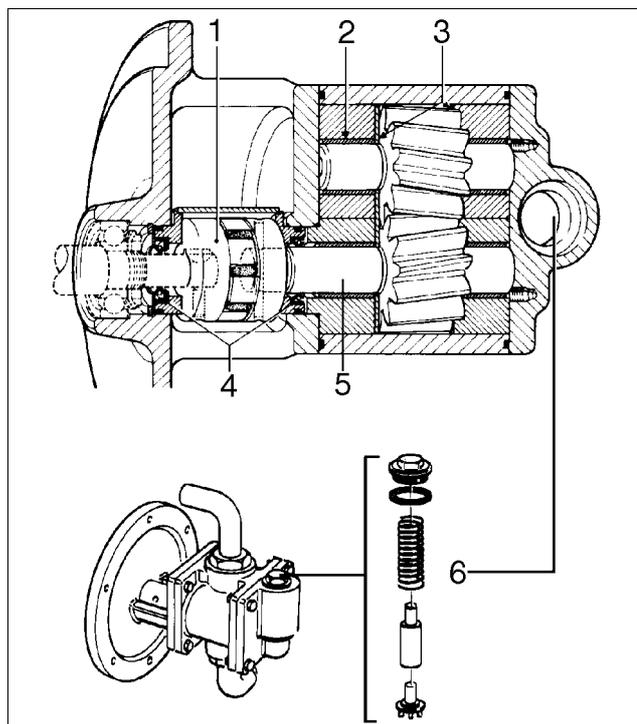


1. Flexible coupling
2. Bushing
3. Wear gasket
4. Lipseal ring
5. Impeller shaft
6. Relief/safety valve

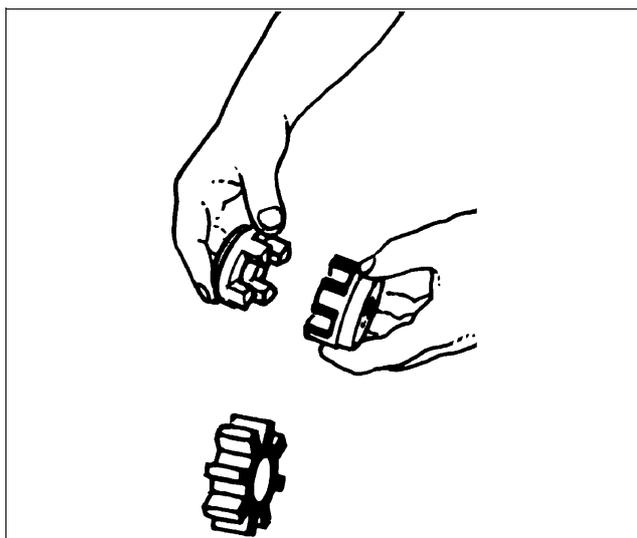

Lipseal rings (4)

Renew the lipseal rings at MS-service.


Note: Turn the rings the right way round, see pos. A in the illustration.

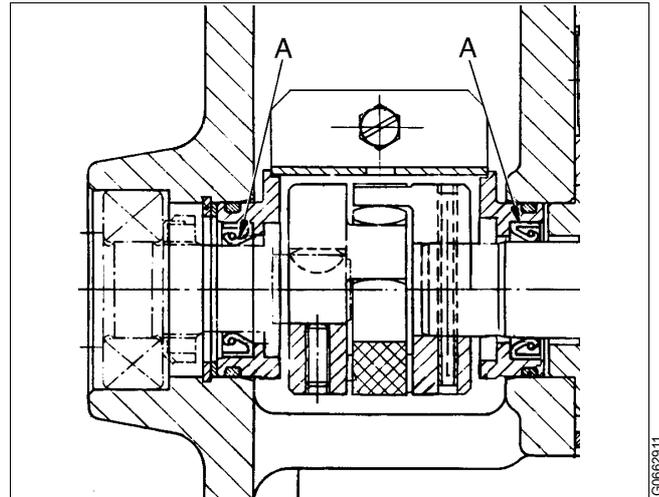

G0662511


6.8.4 Assembly

1. Check that the lipseal rings are correctly mounted, see description in the "Cleaning and inspection"-section above.
2. Assemble the coupling.
The parts must not be pushed together too hard. The flexible element is provided with projections to ensure that the correct clearance is maintained in the coupling, and these must not be deformed.
3. Fit the coupling in position on the worm wheel shaft with the keyway facing the key.

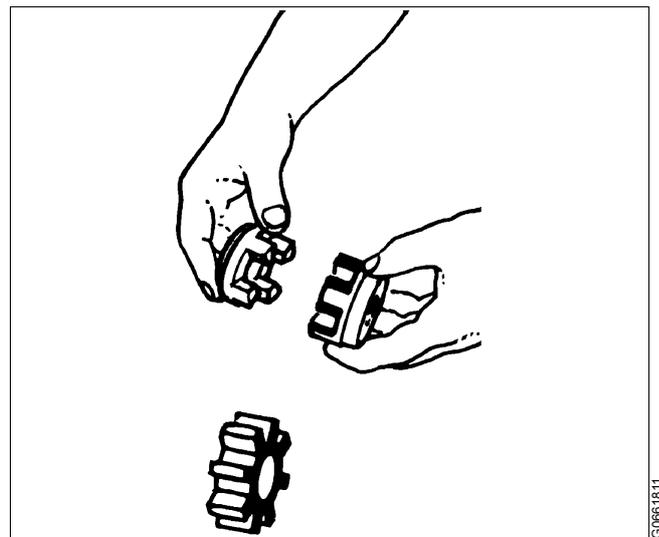


G0661811

4. Tighten the bearing shield screws.

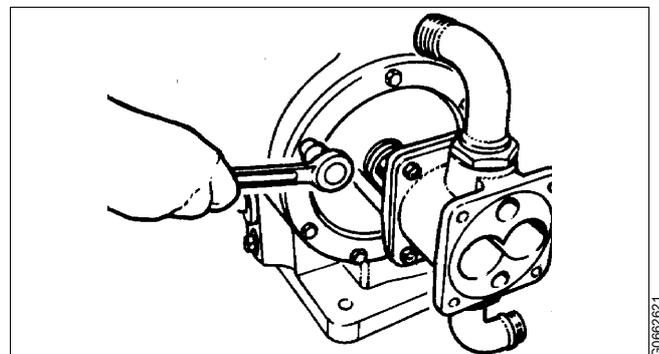


G0662521

5. Refit the impellers. Check that the hole for the tubular pin is exactly opposite the corresponding hole in the coupling.

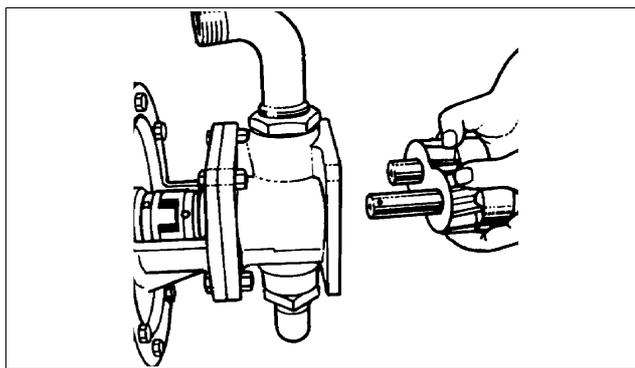


G0662011

6. Drive in the tubular spring pin.

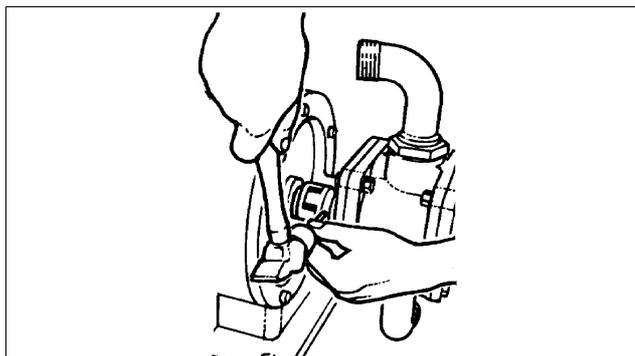

G0662221


7. Check the axial play with a liner (B).
 The total axial play (A) must be **0,1 - 0,3 mm**.
 If the play is too large even though the wear gaskets have been renewed, it can be compensated by adding a brass leaf liner.
 If the play is too small, grind off the bearing (1).

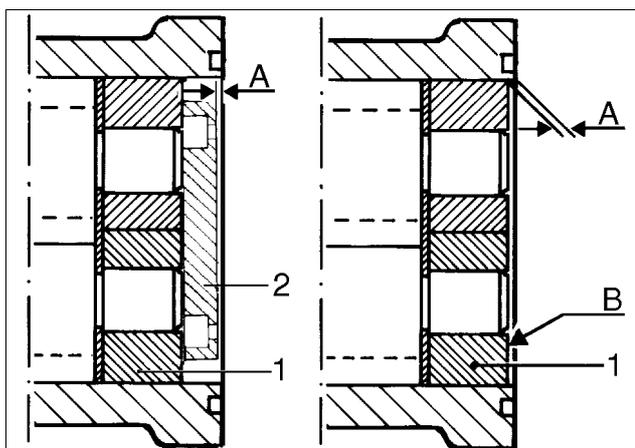

G0593841


- A. Axial play = 0,1 - 0,3 mm
- B. Where to insert the liner
- 1. Bearing
- 2. Spacer (not included in all pumps)

8. Fit the O-ring on the pump housing.

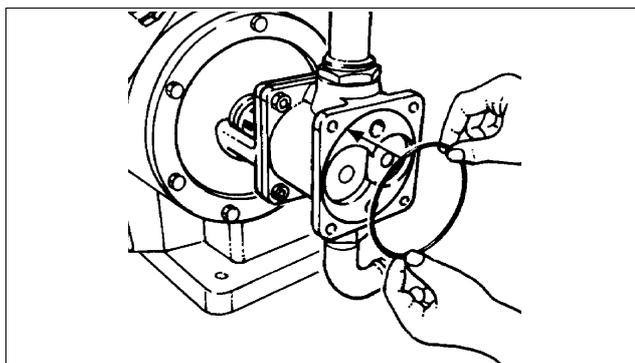


G0661911

9. Fit the pump shield. (Four screws, four washers and four nuts.)

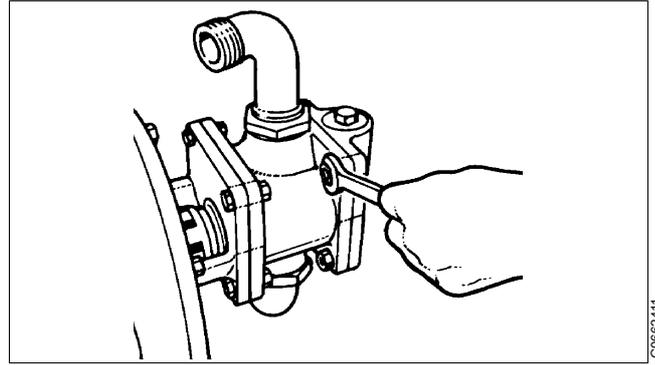


10. Check that the clearance on each side of the coupling flexible element is **2 mm**.

Tighten the stop screw in the coupling half nearest the separator frame with a hexagon wrench. Check that the holders for the lipseal rings are located so that the sleeve halves can easily be fitted.

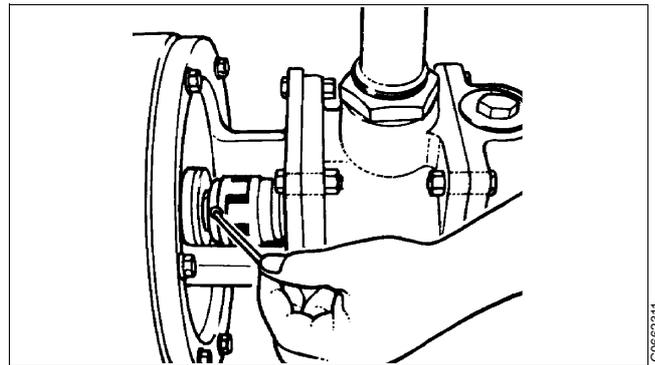


11. Mount the sleeve halves over the coupling.
12. Refit the pipe connections.

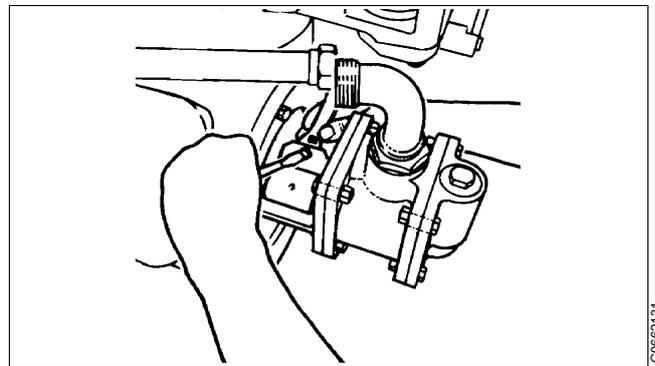

13. Pour oil into worm gear housing. The oil level should be exactly in the middle of the sight glass.

Oil volume: Approx. **12 litres**.

For recommended oil brands, see chapter ["8.9 Lubricants" on page 204](#).

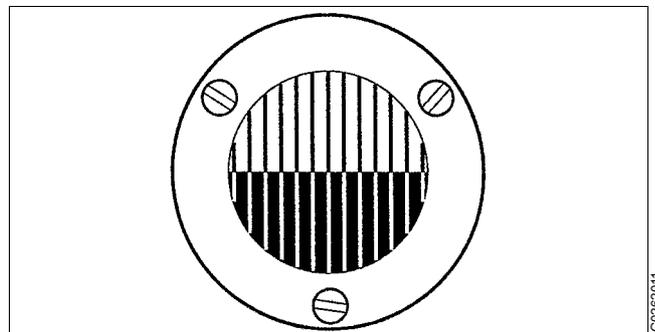

7 *Trouble-tracing*

Contents

7.1 Mechanical functions	176	7.5 Vibration switch (option)	186
7.1.1 Separator vibrates	176	7.5.1 Vibration switch does not reset	186
7.1.2 Smell	177	7.5.2 Impossible to adjust setpoint setting to obtain tripping	186
7.1.3 Noise	177	7.5.3 Vibration switch does not reset	186
7.1.4 Speed too low	177		
7.1.5 Starting power too high	178		
7.1.6 Starting power too low	178		
7.1.7 Starting time too long	178		
7.1.8 Retardation time too long	179		
7.1.9 Water in worm gear housing	179		
7.2 Separating functions, purification and clarification	180		
7.2.1 Liquid flows through the bowl casing drain and/or sludge outlet	180		
7.2.2 Bowl opens accidentally during operation	181		
7.2.3 Bowl fails to open for sludge discharge	181		
7.2.4 Unsatisfactory sludge discharge	182		
7.2.5 High pressure in oil outlet	182		
7.3 Separating functions, purification only	183		
7.3.1 Unsatisfactory separation result	183		
7.3.2 Outgoing water contains oil	183		
7.3.3 Oil discharges through water outlet (broken water seal)	184		
7.4 Separating functions, clarification only	185		
7.4.1 Unsatisfactory separation result	185		
7.4.2 Oil discharges through water outlet	185		

7.1 Mechanical functions

7.1.1 Separator vibrates

NOTE

Some vibration is normal during the starting and stopping sequences when the separator passes through its critical speed.



WARNING

Disintegration hazards

If excessive vibration occurs, **stop** separator and **keep bowl filled** with liquid during rundown.

The cause of the vibration must be identified and corrected before the separator is restarted. Excessive vibration may be due to incorrect assembly or poor cleaning of the bowl.

Cause	Corrective actions	Page
Bowl out of balance due to: - poor cleaning - incorrect assembly - incorrect disc stack compression - bowl assembled with parts from other separators	Dismantle the separator and check the assembly and cleaning. Check the number of bowl discs, compare with the number in <i>Spare Parts Catalogue</i> . If necessary, rebalance the bowl.	121
Uneven sludge deposits in the sludge space	Dismantle and clean the separator bowl	115
Height adjustment of the oil paring disc is incorrect	Stop the separator, measure and if necessary adjust the height	88
Bowl spindle bent (max 0,04 mm)	Renew the bowl spindle	77
Bearing is damaged or worn	Renew all bearings	140, 152
Vibration damping rubber cushions are worn out	Renew all rubber cushion	57
Spindle top bearing spring broken	Renew all springs	140

7.1.2 Smell

Cause	Corrective actions	Page
Normal occurrence during start while the friction blocks are slipping	None	–
Brake is applied	Release the brake	–
Oil level in gear housing too low	Check oil level and add oil if necessary	40

7.1.3 Noise

Cause	Corrective actions	Page
Oil level in gear housing too low	Check oil level and add oil if necessary	40
Height adjustment of the oil paring disc is incorrect	Stop the separator, measure and adjust the height	88
Worm wheel and worm are worn	Renew worm wheel and worm	97
Bearing is damaged or worn	Renew all bearings	140, 152
Incorrect play between coupling pulley and elastic plate	Adjust the play	84

7.1.4 Speed too low

Cause	Corrective actions	Page
Brake is applied	Release the brake	–
Coupling friction pads are oily or worn	Clean or renew friction pads	81
Bowl is leaking or not closed	Dismantle the bowl and check	114
Motor failure	Repair the motor	–
Bearing is damaged	Renew all bearings	140, 152
Incorrect gear transmission (60 Hz gear for 50 Hz power supply)	Stop and change the gear transmission to suit the power supply frequency	97, 140, 152
Incorrect coupling friction blocks (60 Hz blocks for 50 Hz power supply)	Change the friction blocks to suit the power supply frequency	81

7.1.5 Starting power too high

Cause	Corrective actions	Page
Incorrect friction blocks (50 Hz blocks for 60 Hz power supply)	 WARNING Stop immediately and change the friction blocks to suit the power supply frequency	81
Wrong direction of rotation	Change electrical phase connections to the motor	–
Brake is applied	Release the brake	–

7.1.6 Starting power too low

Cause	Corrective actions	Page
Incorrect friction blocks (60 Hz blocks for 50 Hz power supply)	Stop immediately and change the friction blocks to suit the power supply frequency	81
Coupling friction pads are oily or worn	Clean or renew friction pads	81
Motor failure	Repair the motor	–

7.1.7 Starting time too long

Cause	Corrective actions	Page
Brake is applied	Release the brake	–
Coupling friction pads are oily or worn	Renew or clean friction pads	81
Height position of oil paring disc or operating device is incorrect	Stop, check and adjust the height	81, 89
Motor failure	Repair the motor	–
Bearing is damaged or worn	Renew all bearings	140, 152

7.1.8 Retardation time too long

Cause	Corrective actions	Page
Brake friction pad is worn or oily	Renew or clean friction pad	78

7.1.9 Water in worm gear housing

Cause	Corrective actions	Page
Bowl casing drain obstructed	Clean the casing and the drains properly. The drains have connection Nos. 462 and 463 on the <i>Basic size drawing</i> . Solve the reason for obstruction. Clean worm gear housing and change oil.	97 191, 195
Leakage at top bearing	Renew seal ring and change oil	140, 100
Condensation	Clean worm gear housing and change oil	100

7.2 Separating functions, purification and clarification

7.2.1 Liquid flows through the bowl casing drain and/or sludge outlet

Cause	Corrective actions	Page
Sludge discharge or water draining in progress	None (normal)	–
The water line is obstructed or the water pressure/flow is too low	Check water pressure/flow: Closing water pressure, 20-30 kPa Closing water flow, min. 18 litres/minute	–
Channels in operating water device are clogged	Clean the operating water device	136
Gasket at the gravity/clarifier disc defective	Renew the gasket	114
Paring chamber cover (small lock ring) defective	Renew the paring chamber cover	114
Seal ring in the bowl hood defective	Renew the seal ring	114
Sealing edge of the sliding bowl bottom defective	Smoothen sealing edge of the sliding bowl bottom or renew it	73
Valve plugs are defective	Renew all valve plugs	72
Bowl speed too low	See section “7.1.4 Speed too low” on page 177 in this chapter	–

7.2.2 Bowl opens accidentally during operation

Cause	Corrective actions	Page
Strainer in the operating water supply is clogged	Clean the strainer	–
No water in the operating water system	Check the operating water system and make sure the valve(s) are open	–
Water connections to the separator are incorrectly fitted	Correct	–
Nozzle in the operating slide is clogged	Clean the nozzle. Carry out an Intermediate Service (IS)	128
Square-sectioned ring in sliding bowl bottom is defective	Renew the square-sectioned ring. Carry out an Intermediate Service (IS)	73
Valve plugs are defective	Renew all plugs. Carry out an Intermediate Service (IS)	72
Supply valve for opening water is leaking	Rectify the leak	–

7.2.3 Bowl fails to open for sludge discharge

Cause	Corrective actions	Page
Strainer in the operating water supply is clogged	Clean the strainer	–
Supply valve for opening water is closed	Open	
Seal rings in operating water device defective	Renew the seal rings	136
Water flow too low	Check the opening water flow; min. 18 litres/minute	–
Seal ring in the operating slide is defective	Renew the seal ring. Carry out an Intermediate Service (IS)	127

7.2.4 Unsatisfactory sludge discharge

Cause	Corrective actions	Page
Valve plugs in the operating slide too high	Renew with correct valve plugs	72
Sludge deposits in the operating system	Check and clean the operating system	127, 136

7.2.5 High pressure in oil outlet

Cause	Corrective actions	Page
Throughput too high	Adjust	–
Valve(s) in oil outlet line closed	Open the valve(s) and adjust the oil outlet pressure to 1,5 bar	–

7.3 Separating functions, purification only

7.3.1 Unsatisfactory separation result

Cause	Corrective actions	Page
Gravity disc hole too small	Use a disc with larger hole	37
Incorrect separation temperature	Adjust	–
Throughput too high	Adjust	–
Disc stack is clogged	Clean disc stack	95
Sludge space in bowl is filled	Clean and reduce the time between sludge discharges	95
Bowl speed too low	See “7.1.4 Speed too low” on page 177	–

7.3.2 Outgoing water contains oil

Cause	Corrective actions	Page
Gravity disc hole too large	Use a disc with smaller hole	37
The water line is obstructed or the water pressure/flow is too low	Check water pressure/flow: Closing water pressure, 20-30 kPa Closing water flow, min. 18 litres/minute	–
No or insufficient sealing/displacement water supply (206)	Rectify the water supply	–
O-rings on the upper (water) paring disc are defective	Renew the O-rings	114
Gasket/O-ring at the gravity disc or paring chamber cover is defective	Renew the gasket/O-ring	114

7.3.3 Oil discharges through water outlet (broken water seal)

Cause	Corrective actions	Page
Gravity disc hole too large	Use a disc with smaller hole	37
Incorrect separation temperature	Adjust	–
Throughput too high	Adjust	–
The water line is obstructed or the water pressure/flow is too low	Check water pressure/flow: Closing water pressure, 20-30 kPa Closing water flow, min. 18 litres/minute	–
No or insufficient sealing/displacement water supply (206)	Rectify the water supply	–
Valve(s) in oil outlet line is closed	Open the valve(s)	–
Sealing water volume is too small	Check the water supply flow (min. 23 litres/minute)	–
Gasket/O-ring at the gravity disc or paring chamber cover is defective	Renew the gasket/O-ring	114
Disc stack is clogged	Clean the disc stack	114
Bowl hood seal ring defective or the sealing surface of sliding bowl bottom is damaged	Renew the seal ring. Polish the surface on sliding bowl bottom or renew it	114
Rectangular seal ring in sliding bowl bottom is defective	Renew the seal ring	127
Bowl speed to low	Check that the brake is released. Examine the motor and power transmission including the gear ratio	97, 152
Bowl is incorrectly assembled	Check the assembly	114

7.4 Separating functions, clarification only

7.4.1 Unsatisfactory separation result

Cause	Corrective actions	Page
Incorrect separation temperature	Adjust	–
Throughput too high	Adjust	–
Feed oil contains water	<ol style="list-style-type: none"> 1. Check preceding purifier when operating in series 2. Reduce the time between discharges 3. Operate the separator as purifier 	– – 37
Bowl disc stack is clogged	Clean the disc stack	110
Sludge space in bowl is filled	Clean and reduce the time between discharges	114
Bowl speed too low	Check that the brake is released. Examine the motor and power transmission including the gear ratio	114

7.4.2 Oil discharges through water outlet

Cause	Corrective actions	Page
Valve(s) in oil outlet line is closed	Open the valve(s)	–
Bowl disc stack is clogged	Clean the disc stack	114
O-rings on the upper (water) paring disc are defective	Renew the O-rings	114
Bowl is incorrectly assembled	Check the assembly	114

7.5 Vibration switch (option)

7.5.1 Vibration switch does not reset

Cause	Corrective actions	Page
Dirt or iron chips on magnets	Clean magnets	–
Leaf spring broken	Return to Alfa Laval for repair	–
Reset coil open	Check for continuity and proper coil resistance	–

7.5.2 Impossible to adjust setpoint setting to obtain tripping

Cause	Corrective actions	Page
Incorrect air gap between hold-down magnet (lower) and armature in switch	Readjust the air gap with the stop pin screw	–

7.5.3 Vibration switch does not reset

Cause	Corrective actions	Page
Defective switch	Replace and verify by manually moving the armature to the latched (tripped) position and listen for an audible click. Verify contact by performing a continuity check	–
Incorrect position	Check that the switch plunger is just free of the armature when in the set (un-tripped) position	–

8 *Technical Reference*

Contents

8.1 Product description	188	8.10 Other drawings	215
8.2 Technical data	189	8.10.1 Foundation drawing	215
8.3 Basic size drawing, without pump	191	8.10.2 Electric motor (land application)	216
8.3.1 Separator excl. connections	191	8.10.3 Electric motor (marine application)	217
8.3.2 Dimensions of connections	192	8.10.4 Electric motor (Brazil)	219
8.4 Connection list, without pump	193	8.10.5 Machine plates and safety labels	220
8.5 Basic size drawing, with pump	195	8.10.6 Vibration sensor (option)	222
8.5.1 Separator excl. connections	195	8.10.7 Cover interlocking switch (option)	222
8.5.2 Dimensions of connections	196	8.11 Storage and installation	223
8.6 Connection list, with pump	197	8.11.1 Introduction	223
8.7 Interface description	199	8.11.2 Storage and transport of goods	223
8.7.1 General	199	8.11.3 Planning of installation	225
8.7.2 Definitions	199	8.11.4 Foundations	227
8.7.3 Component description and signal processing	200		
8.7.4 Function graph and running limitations	202		
8.8 Water quality	203		
8.9 Lubricants	204		
8.9.1 Lubrication chart, general	204		
8.9.2 Recommended lubricating oils	205		
8.9.3 Recommended oil brands	206		
8.9.4 Recommended lubricants	211		

8.1 Product description

Alfa Laval ref. 561122, rev. 2

NOTE

The separator is a component operating in an integrated system including a monitoring system. If the technical data in the system description do not agree with the technical data in this instruction manual, the data in the system description shall apply.

Product number:	881077-03-03
Separator type:	MOPX 310TGT-24
Application:	Cleaning of lube oil.
Technical design:	Intended for both land and marine applications. Intended for Japanese and Korean market. JIS Colour of finish painted parts according to order. Quality of painting according to specifications on drawings. Machine top part with deep sludge cover. Total discharge. Sealings available in Nitrile.
Restrictions:	Feed temperature: 0°C to +100°C Ambient temperature: +5°C to +55°C Discharge intervals: min. 1 minute max. 4 hours. Maximum allowed density of operating liquid: 1000 kg/m ³ . Viscosity max. 600 cSt at 50°C. The separator should be installed in such a way that the centre line of the electric motor is parallel with the centre line of the ship. Not to be used for liquids with flashpoint below 60°C. Risk for corrosion and erosion have to be investigated in each case by the application centre.

Designed in accordance with directives and standards:

Alfa Laval ref. 591985, rev. 1

2006/42/EC	Machinery Directive
2004/108/EC	Electromagnetic Compatibility Directive
2006/95/EC	Low Voltage Directive
EN 60204-1	Electrical equipment of machines, part 1
EN ISO 14121-1	Safety of machinery - Principles of risk assessment
EN ISO 12100-1,-2	Safety of machinery - Basic concepts, general principles for design
ISO 3744	Acoustic determination

8.2 Technical data

Alfa Laval ref. 557309, rev. 2

Density of operating water, max.	1 000	kg/m ³
Pressure of operating water, max.	200	kPa
Density of sediment/feed, max.	1 498/1 100	kg/m ³
Hydraulic capacity, max.	14 000	litres/hour
Feed temperature, min./max.	0/100	°C
Ambient temperature, min./max.	5-15/55	°C The min. temperature is dependent of the used oil type. See “8.9.2 Recommended lubricating oils” on page 205.
Bowl speed, max.	5175/5142	r/min., 50/60 Hz
Motor shaft speed, max.	1500/1800	r/min., 50/60 Hz
Revolution counter	118-125 / 142-150	r/min., 50/60 Hz
No. of teeth;		
- on worm, 50 Hz	20	
- on worm, 60 Hz	21	
- on worm wheel, 50 Hz	69	
- on worm wheel, 60 Hz	60	
Lubricating volume	approx. 12	litres
Motor power rating	11	kW
Power consumption, max.	16	kW (at starting up)
Discharge interval, min./max.	1/240	minutes
Bowl volume	13	litres
Starting time	3-4	minutes
Stopping time with brake	4-7	minutes
Max. running time without flow;		
- empty bowl	180	minutes
- filled bowl	180	minutes
Sound power level	–	Bel(A) ISO 3744, 4,5 m ³ /h
Sound pressure level	83	dB(A) ISO 3744, 4,5 m ³ /h
Vibration level, separator in use, max.	11,2	mm/s (RMS)
Weight of separator (without motor)	1 060	kg
Weight of bowl	220	kg


The materials in contact with process fluid (excluding seals and O-rings) are brass, bronze and stainless steel. Cast iron frame.

Oil inlet pump, built-on (option)

<i>Capacity</i>	<i>50 Hz</i>	<i>60 Hz</i>
<i>Pump No.</i>	<i>(lit/h)</i>	<i>(lit/h)</i>
538721-87	2 420	2 900
538721-84	3 630	4 350
538721-85	4 350	5 220
538721-83	5 760	6 920
538721-81	8 540	10 250
538721-80	12 500	15 000
Suction lift:	Max. 40 kPa	
Delivery head:	Max. 150 kPa	

Bowl volume 13 litres

Oil outlet paring disc pump Delivery head: 400-475 kPa, depending of flow and viscosity

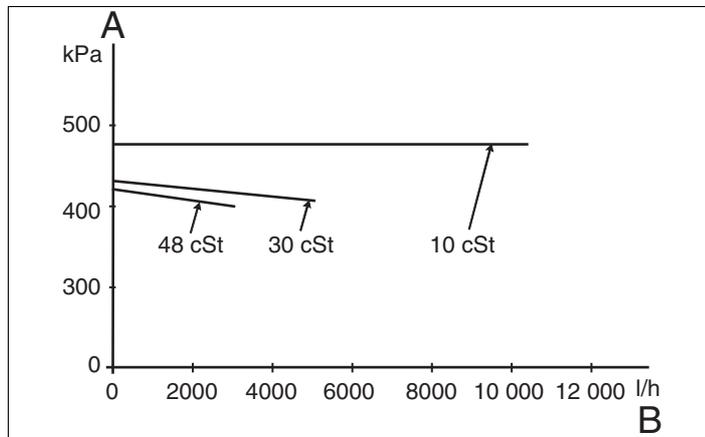


A. Back pressure in kPa
 B. Flow in m³/h

8.3 Basic size drawing, without pump

8.3.1 Separator excl. connections

Alfa Laval ref. 558575, rev. 0

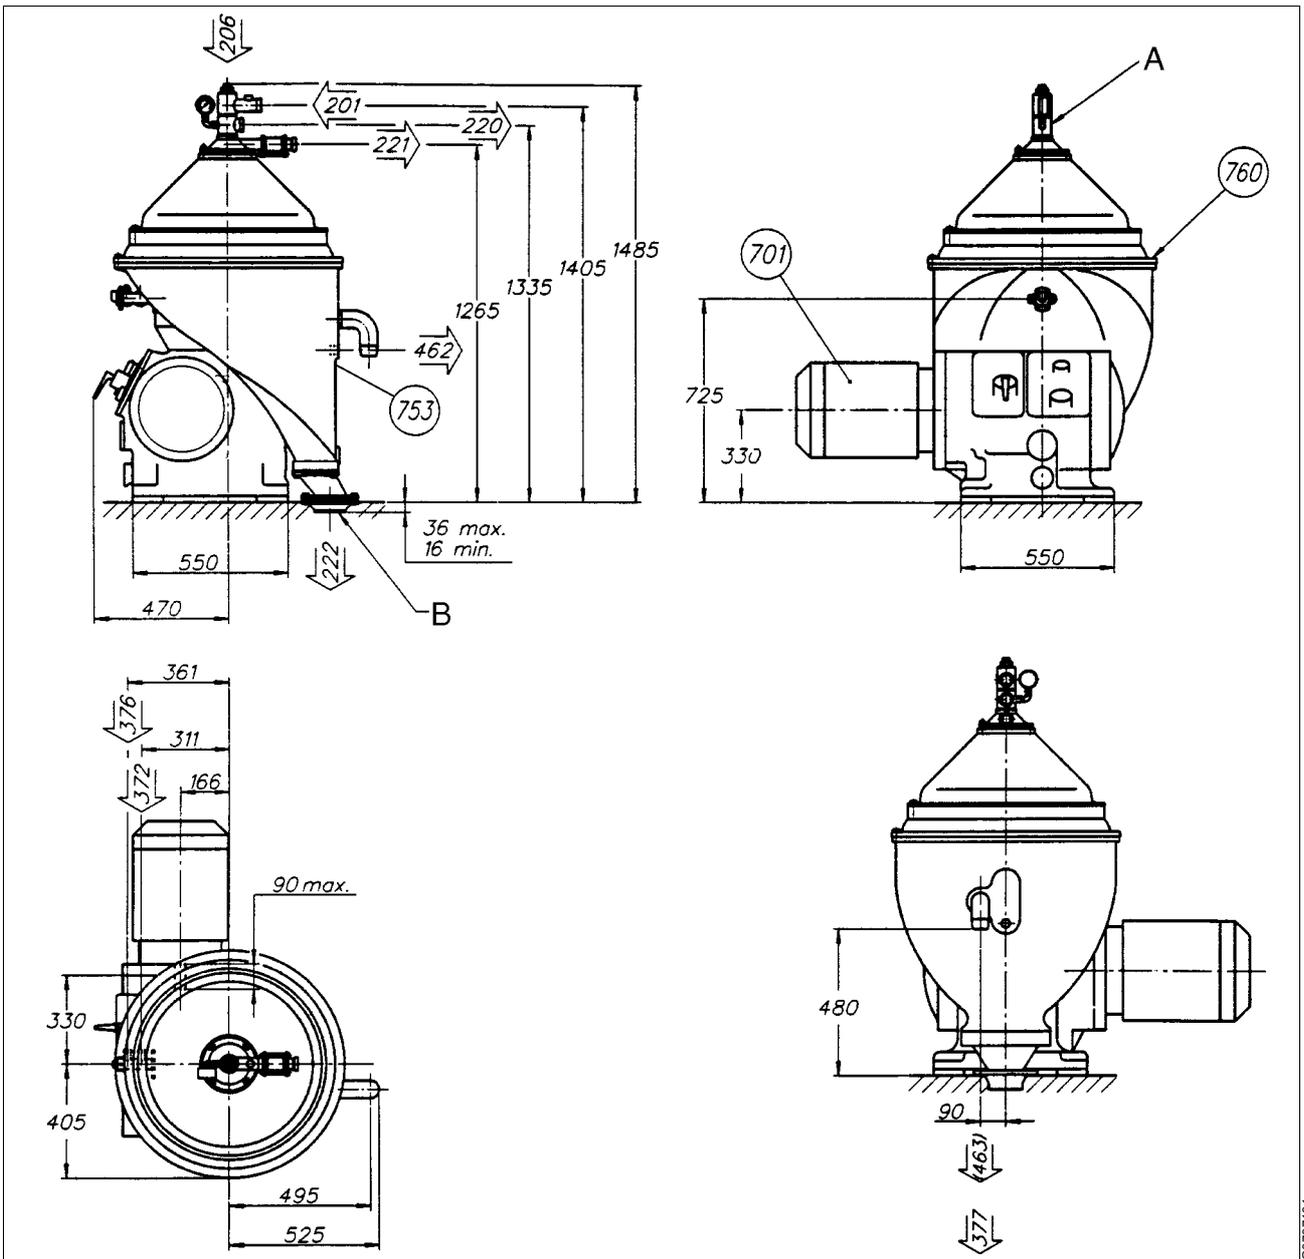

A. Maximum horizontal displacement at the in/outlet connections during operation ± 15 mm.

B. Maximum vertical displacement at the sludge connection during operation ± 10 mm.


For description of the connection numbers, see “8.4 Connection list, without pump” on page 193 and “8.7 Interface description” on page 199.

8.3.2 Dimensions of connections

Alfa Laval ref. 558575, rev. 0

Data for connections, see chapter “8.4 Connection list, without pump” on page 193.

All connections to be installed non-loaded and flexible.

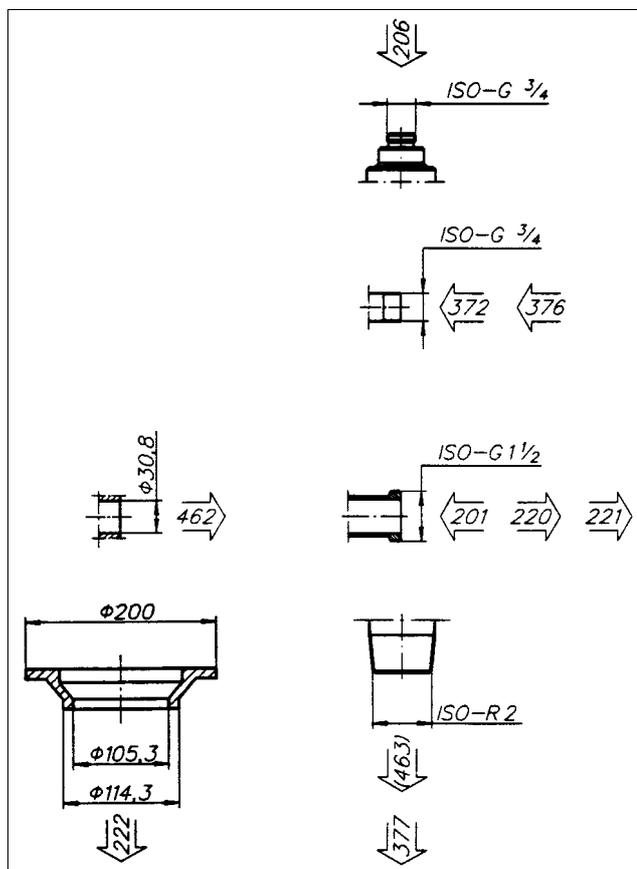

8.4 Connection list, without pump

Alfa Laval ref. 557297 rev. 3


Connection No.	Description	Requirements/limits
201	Inlet for product – Allowed temperature	Min. 0 °C, max. 100 °C
206	Inlet to liquid seal and displacement liquid, water – Momentary flow – Pressure (Min./Max.)	Fresh water 23 litres/minute 200/600 kPa
220	Outlet for light phase (oil) – Counter pressure	Max. 400 kPa
221	Outlet for heavy phase (water)	
222	Outlet for solid phase	The outlet after the separator should be installed in such a way that you can not fill the frame top part with sludge. (Guidance of sludge pump or open outlet)
372	Inlet of discharge liquid – Instantaneous flow – Time – Pressure (Min./Max.)	See demand in chapter “8.8 Water quality” on page 203 23 litres/minute 3 seconds/discharge 200/600 kPa
376	Inlet for make-up liquid – Pressure	See demand in chapter “8.8 Water quality” on page 203 Min/Max 22/32 kPa
372 + 376	Discharge and make-up liquid – Consumption	2,4 litres/discharge

Connection No.	Description	Requirements/limits
377 (463)	Outlet for operating liquid (discharge and make-up liquid) Drain of frame top part, upper	
462	Drain of frame top part, lower	
701	Motor for separator – Allowed frequency variation	± 5% (momentarily 10% during a period of maximum 5 seconds)
753	Vibration sensor (delivered as option) – Type – Vibration measurement range – Switch rating, resistive load max. – Reset coil power supply max. 14 W	See “8.7 Interface description” on page 199 and “8.10.6 Vibration sensor (option)” on page 222 Mechanical switch 0 to 4,5 g from 0 to 300 Hz 5 A 12 V DC 2 A 24 V DC 1 A 48 V DC 0,5 A 120 V DC 7 A 460 V AC 50/60 Hz 48 V DC
760	Cover interlocking switch (delivered as option) – Type – Switch rating, resistive load max.	See “8.7 Interface description” on page 199 and “8.10.7 Cover interlocking switch (option)” on page 222 Mechanical switch 3 A 500 V

8.5 Basic size drawing, with pump

8.5.1 Separator excl. connections

Alfa Laval ref. 559747 rev. 0

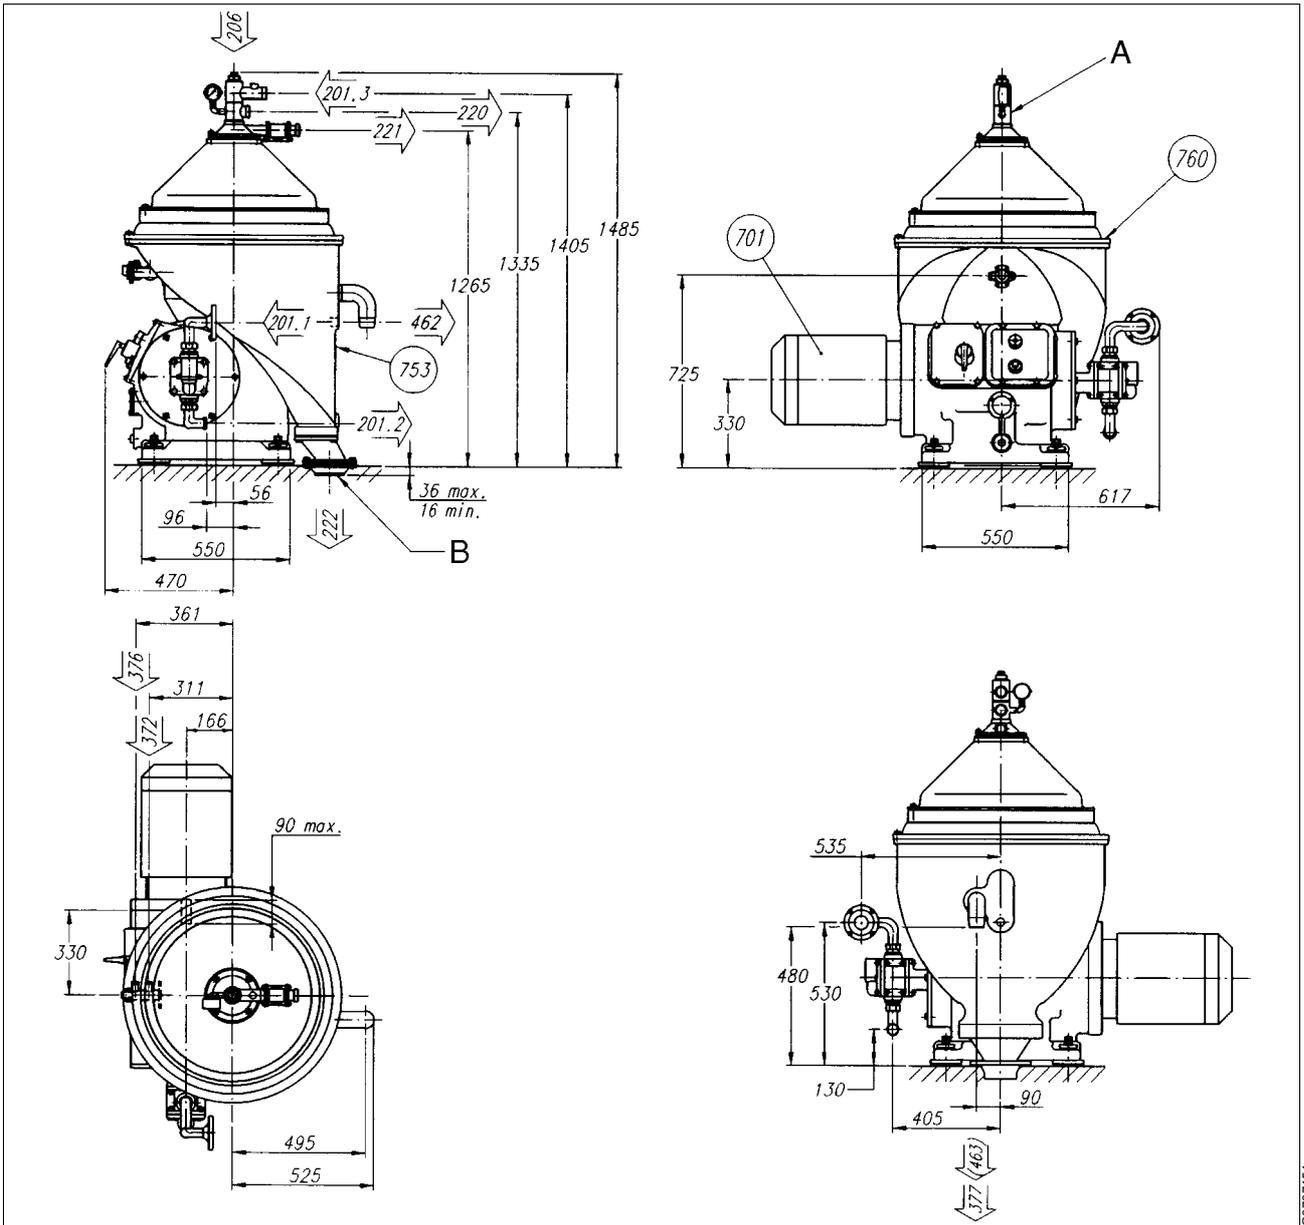

A. Maximum horizontal displacement at the in/outlet connections during operation ± 15 mm.

B. Maximum vertical displacement at the sludge connection during operation ± 10 mm.


For description of the connection numbers, see “8.6 Connection list, with pump” on page 197 and “8.7 Interface description” on page 199.

8.5.2 Dimensions of connections

Alfa Laval ref. 558578, rev. 0

Data for connections, see chapter “8.6 Connection list, with pump” on page 197.

All connections to be installed non-loaded and flexible.

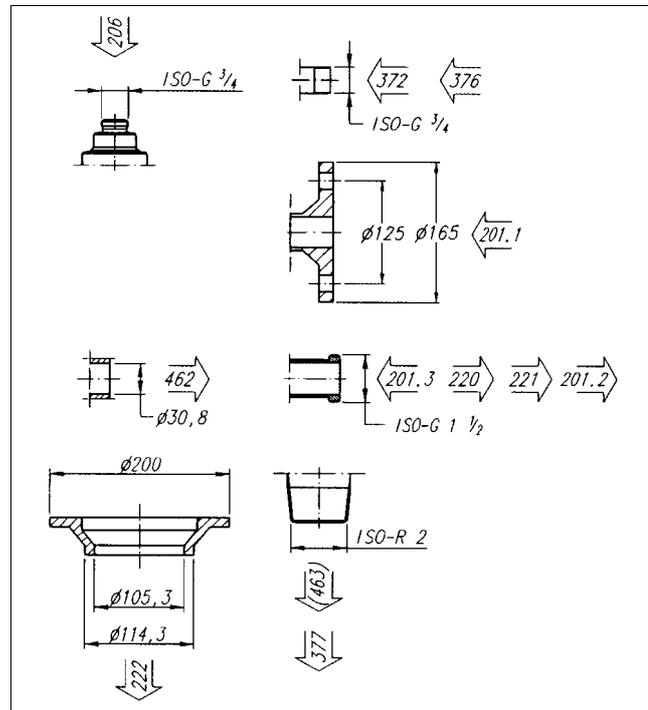

G0737161

8.6 Connection list, with pump

Alfa Laval ref. 557312, rev. 2

Connection No.	Description	Requirements/limits
201.1	Inlet for product – Allowed temperature	Min. 0 °C, max. 100 °C
201.2	Outlet for product from pump	
201.3	Inlet for product to separator	
206	Inlet to liquid seal and displacement liquid, water – Momentary flow – Pressure (Min./Max.)	Fresh water 18 litres/minute 200/600 kPa
220	Outlet for light phase (oil) – Counter pressure	Max. 400 kPa
221	Outlet for heavy phase (water)	
222	Outlet for solid phase	The outlet after the separator should be installed in such a way that you can not fill the frame top part with sludge. (Guidance of sludge pump or open outlet)
372	Inlet of discharge liquid – Instantaneous flow – Time – Pressure (Min./Max.)	See demand in chapter “8.8 Water quality” on page 203 23 litres/minute 3 seconds/discharge 200/600 kPa
376	Inlet for make-up liquid – Pressure	See demand in chapter “8.8 Water quality” on page 203 Min/Max 22/32 kPa

Connection No.	Description	Requirements/limits
372 + 376	Discharge and make-up liquid – Consumption	2,4 litres/discharge
377 (463)	Outlet for operating liquid (discharge and make-up liquid) Drain of frame top part, upper	
462	Drain of frame top part, lower	
701	Motor for separator – Allowed frequency variation	± 5% (momentarily 10% during a period of maximum 5 seconds)
753	Vibration sensor (delivered as option) – Type – Vibration measurement range – Switch rating, resistive load max. – Reset coil power supply max. 14 W	See “8.7 Interface description” on page 199 and “8.10.6 Vibration sensor (option)” on page 222 Mechanical switch 0 to 4,5 g from 0 to 300 Hz 5 A 12 V DC 2 A 24 V DC 1 A 48 V DC 0,5 A 120 V DC 7 A 460 V AC 50/60 Hz 48 V DC
760	Cover interlocking switch (delivered as option) – Type – Switch rating, resistive load max.	See “8.7 Interface description” and “8.10.7 Cover interlocking switch (option)” on page 222 Mechanical switch 3 A 500 V

8.7 Interface description

Alfa Laval ref. 557138, rev. 3

8.7.1 General

In addition to the Connection List this document describes limitations and conditions for safe control, monitoring and reliable operation.

At the end of the document a function graph and running limitations are found.

8.7.2 Definitions

Stand still (Ready for start) means:

- The machine is assembled correctly.
- All connections are installed according to Connection List, Interconnection Diagram and Interface Description.

Start means:

- The power to the separator is on.
- The acceleration is supervised to ensure that a certain speed has been reached within a certain time. See technical data.

The start procedure continues until full speed has been reached and a stabilization period has passed (about 1 minute).

Normal stop means:

- Stopping of the machine at any time with brake applied.
- The bowl must be kept filled.

Safety stop means:

The machine must be stopped in the quickest and safest way due to vibrations or process reasons.

Comply to following conditions:

- The bowl must be kept filled.
- Sludge ejection must not be made.
- The machine must not be restarted before the reason for the safety stop has been investigated and action has been taken.

In case of emergency condition in the plant, the machine must be stopped in a way that is described in EN 418.

8.7.3 Component description and signal processing

Separator motor 701

The separator is equipped with a 3-phase DOL- (direct on line) started motor. The separator can also be started by a Y/D starter, but then the time in Y-position must be maximized to 5 seconds.

Vibration sensor 753 (option)

The vibration sensor is an acceleration sensitive instrument with a mechanical switch. It gives an open contact when the unbalance exceeds the preset value.

Signal Processing

If too high vibration occurs the separator must be stopped with automatic Safety Stop.

Cover interlocking switch 760 (option)

The cover of the separator can be equipped with an interlocking switch.

When the cover is closed the interlocking circuit in the control system is closed and the separator could be started.

Signal Processing

The circuit is closed when the frame hood of the separator is closed.

The interlocking switch should be connected so that starting of the motor is prevented when the separator hood is not closed.


Discharge

Signal processing

The control system shall contain a memory function for registration of the number of initiated discharges.

At indication of the absence of a discharge, the operator or the control system must initiate a new discharge. At indication of the absence of two consecutive sludge discharges, an alarm must be given and action must be taken.

8.7.4 Function graph and running limitations

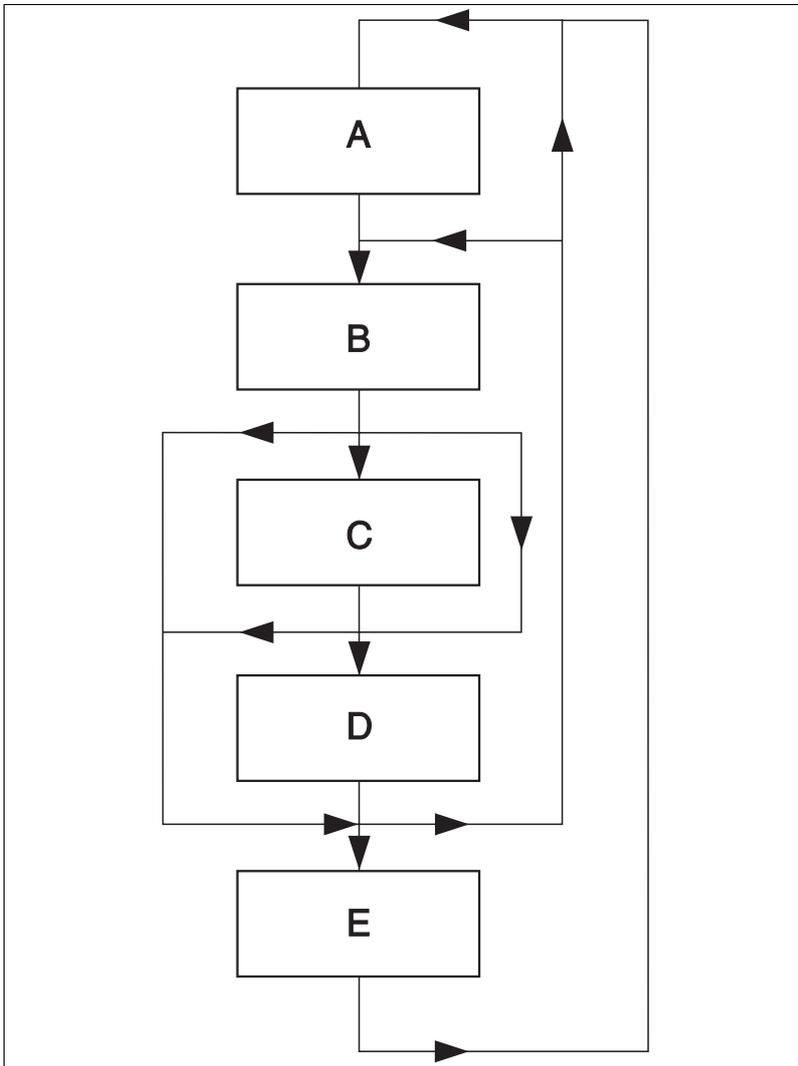

- A. *Stand still*
- B. *Starting mode*
- C. *Running mode*
- D. *Stop mode*
- E. *Safety stop mode*

8.8 Water quality

Alfa Laval ref. 553406, rev.9

Operating water is used in the separator for several different functions: e.g. to operate the discharge mechanism, to lubricate and cool mechanical seals.

Poor quality of the operating water may with time cause erosion, corrosion and/or operating problem in the separator and must therefore be treated to meet certain demands.

The following requirements are of fundamental importance

- 1.1 Turbidity-free water, solids content <0,001% by volume.

Deposits must not be allowed to form in certain areas in the separator.

- 1.2 Max particle size 50 µm.

2. Total hardness less than 180 mg CaCO₃ per litre, which corresponds to 10 °dH or 12,5 °E.

Hard water may with time form deposits in the operating mechanism. The precipitation rate is accelerated with increased operating temperature and low discharge frequency. These effects become more severe the harder the water is.

3. Chloride content max 100 ppm NaCl (equivalent to 60 mg Cl/l).

Chloride ions contribute to corrosion on the separator surfaces in contact with the operating water, including the spindle. Corrosion is a process that is accelerated by increased separating temperature, low pH, and high chloride ion concentration.

A chloride concentration above 60 mg/l is not recommended.

4. pH>6

Increased acidity (lower pH) increases the risk for corrosion; this is accelerated by increased temperature and high chloride ion content.

NOTE

Alfa Laval accepts no liability for consequences arising from unsatisfactorily purified operating water supplied by the customer.

8.9 Lubricants

8.9.1 Lubrication chart, general

Alfa Laval ref. 553216-02, rev. 2

Lubricating points	Type of Lubricant	Interval
<p>The oil bath.</p> <p>Bowl spindle bearings are lubricated by oil mist from the oil bath.</p>	Lubricating oil as specified in "8.9.2 Recommended lubricating oils" on page 205.	<ol style="list-style-type: none"> 1. Continuous operation: 2000h 2. Seasonal operation: Before every operating period 3. Short period's operation: 12 months even if total number of operating hours is less than stated above.
<p>Bowl spindle taper.</p>	Lubricating oil (only a few drops for rust protection).	At assembly.
<p>Bowl:</p> <p>Sliding contact surfaces, thread of lock nut and cap nut.</p>	<p>Pastes as specified in "8.9.4 Recommended lubricants" on page 211.</p> <p>If not specified otherwise, follow the supplier's recommendation about method of application.</p>	At assembly.
<p>Rubber seal rings.</p>	Grease as specified in "8.9.4 Recommended lubricants" on page 211.	At assembly.
<p>Friction clutch bearings</p>	Fill the space between the bearings to one third with ball bearing grease.	At assembly.
<p>Electric motor</p>	Follow manufacturer's instructions.	Follow manufacturer's instructions.
<p>Threads</p>	Lubricating oil, if not otherwise stated.	At assembly.

CAUTION

Check the oil level before start.

Top up when necessary.

Do not overfill.

8.9.2 Recommended lubricating oils

Alfa Laval ref. 553219-15, rev. 0

Two different groups of lubricating oils are approved for this separator.

They are designated as Alfa Laval lubricating oil groups A and D.

The numerical value after the letter states the viscosity grade.

The corresponding commercial oil brands are found in chapter [“8.9.3 Recommended oil brands”](#) on page 206.

Ambient temperature °C	Alfa Laval lubricating oil group	Time in operation Oil change interval
between +15 and +60	A/320	1 000 - 1 500 h
between -10 and +60	D/220	2 000 h
between ±0 and +60	D/320	2 000 h

Note:

- In a new installation or after change of gear transmission, change oil after 200 operating hours and clean the gear housing.
- When the separator is operated for short periods, lubricating oil must be changed every 12 months even if the total number of operating hours is less than stated in the recommendations above.
- Check and prelubricate spindle bearings on separators which have been out of service for 6 months or longer.
- In seasonal operation: change oil before every operating period.

8.9.3 Recommended oil brands

Alfa Laval ref. 553218-11, rev. 3

Paraffinic mineral lubricating oil for general use

NOTE

The following is a list of recommended oil brands. Trade names and designations might vary from country to country. Please contact your local oil supplier for more information.

Brands with Alfa Laval article number are approved and recommended for use.

Alfa Laval lubrication oil group A	
Viscosity grade VG (ISO 3448/3104)	VG 320
Viscosity index VI (ISO 2909)	VI >95
Manufacturer	Designation
Alfa Laval	546099-80 (5X4 litres) 546099-81 (4 litres)
BP	Bartran 320 Bartran HV 320
Castrol	Alpha ZN 320 Ultra 320
ChevronTexaco	Chevron Machine Oil AW 320 Paper Machine Oil Premium 320
ExxonMobil	Mobil DTE oil AA
Shell	Morlina 320
Statoil	LubeWay XA 320
Total	Cirkan ZS 320

The list of recommended oil brands are not complete. Other oil brands may be used as long as they have equivalently quality as the brands recommended. The oil shall follow the requirements in one of the standards below. The oil must be endorsed for worm gear with brass worm wheel. The use of other lubricants than the recommended is done on the exclusive responsibility of the user or oil supplier.

Standard	Designation
ISO 12925-1, (ISO 6743/6)	ISO-L-CKC or CKE 320
ISO 11158, (ISO 6743/4)	ISO-L-HM or HV 320
DIN 51517 part 3	DIN 51517 - CLP 320
DIN 51524 part 2 or 3 (German standard)	DIN 51524 - HLP or HVLP 320

Alfa Laval ref. 553218-08, rev. 5

Synthetic lubricating oil, category PAO (ISO-L-) CKE 220

Viscosity grade (ISO 3448/3104) VG 220.

The following are lists of recommended oil brands. Trade names and designations might vary from country to country, contact your local oil supplier for more information.

Brands with Alfa Laval article number are approved and recommended for use.

Alfa Laval lubrication oil group D	
Manufacturer	Designation
Alfa Laval	542690-84 20 litres replacement for 542690-80 542690-85 4 litres replacement for 542690-81
BP	Energyn HTX 220 Energyn EP-XF 220
Castrol	Alphasyn EP 220 Alphasyn HG 220 Optigear Synthetic A 220
Chevron	Tegra Synthetic Gear Lubricant 220 (H2) Texaco/Caltex Pinnacle EP 220 FAMM Pinnacle Marine Gear 220
ExxonMobil	Mobil SHC 630
Q8/Kuwait Petroleum	Schumann 220
Shell	Omala RL 220
Statoil	Mereta 220
Total	Carter SH 220 Elf Epona SA 220

The lists of recommended oil brands are not complete. Other oil brands may be used as long as they have equivalently quality as the brands recommended. The oil must have the same viscosity class and ought to follow the ISO standard 12925-1, category ISO-L-CKC, CKD, CKE or CKT (ISO 6743-6) or DIN 51517, part 3 CLP, but shall have a synthetic base oil of polyalphaolefin type (PAO) instead of mineral base oil. The oil must be endorsed for worm gear with brass worm wheel. The use of other lubricants than recommended is done on the exclusive responsibility of the user or oil supplier.

Synthetic lubricating oil, category PAO (ISO-L-) CKE 220 for hygienic applications

Conform to U.S. Food and Drug Administration (FDA) requirements of lubricants with incidental food contact, Title CRF 21 178.3570, 178.3620 and/or those generally regarded as safe (US 21 CRF 182).

Lubrication oils for food and hygienic applications	
Manufacturer	Designation
Shell	Cassida fluid GL 220

The hygienic oil on the list is in the online “NSF White Book™ Listing” at the time of the revision of this document. For more information about the NSF registration and up to date H1 registration, see www.nsf.org (http://www.nsf.org/business/nonfood_compounds/)

Alfa Laval ref. 553218-06, rev. 7

Synthetic lubricating oil, category PAO (ISO-L-) CKE 320

Viscosity grade (ISO 3448/3104) VG 320.

The following are lists of recommended oil brands. Trade names and designations might vary from country to country, contact your local oil supplier for more information.

Brands with Alfa Laval article number are approved and recommended for use.

Alfa Laval lubrication oil group D	
Manufacturer	Designation
Alfa Laval	542690-84 20 litres 542690-85 4 litres
BP	Enersyn HTX 320 Enersyn EP-XF 320
Castrol	Alphasyn EP 320 Alphasyn HG 320 Optigear Synthetic A 320
Chevron	Tegra Synthetic Gear Lubricant 320 (H2)
ExxonMobil	Mobil SHC 632
Q8/Kuwait Petroleum	Schumann 320
Shell	Omala RL 320
Statoil	Mereta 320
Total	Carter SH 320 Elf Epona SA 320

The lists of recommended oil brands are not complete. Other oil brands may be used as long as they have equivalently quality as the brands recommended. The oil must have the same viscosity class and ought to follow the ISO standard 12925-1, category ISO-L-CKC, CKD, CKE or CKT (ISO 6743-6) or DIN 51517, part 3 CLP, but shall have a synthetic base oil of polyalphaolefin type (PAO) instead of mineral base oil. The oil must be endorsed for worm gear with brass worm wheel. The use of other lubricants than recommended is done on the exclusive responsibility of the user or oil supplier.

**Synthetic lubricating oil, category PAO
(ISO-L-) CKE 320 for hygienic applications**

Conform to U.S. Food and Drug Administration (FDA) requirements of lubricants with incidental food contact, Title CRF 21 178.3570, 178.3620 and/or those generally regarded as safe (US 21 CRF 182).

Lubrication oils for food and hygienic applications	
Manufacturer	Designation
Shell	Cassida fluid GL 320

The hygienic oil on the list is in the online “NSF White Book™ Listing” at the time of the revision of this document. For more information about the NSF registration and up to date H1 registration, see www.nsf.org (http://www.nsf.org/business/nonfood_compounds/)

8.9.4 Recommended lubricants

Pastes and bonded coatings for non-food applications

Alfa Laval ref. 553217-01, rev. 11

NOTE

The data in the below tables is based on supplier information in regards to lubrication properties. Trade names and designations might vary from country to country. Please contact your local supplier for more information.

Brands with Alfa Laval article number are approved and recommended for use.

Pastes for non-food applications:

Manufacturer	Designation	Alfa Laval No	
Fuchs Lubritech	Gleitmo 805K Gleitmo 705		
Dow Corning	Molykote 1000 (Paste) Molykote 1000 (Paste) Molykote G-rapid plus (Paste)	537086-02 (1000 g) 537086-03 (100 g) 537086-04 (50 g)	
Rocol	Dry Moly Paste MT-LM		
Klüber	Wolfracoat C (Paste)		

Bonded coatings:

Manufacturer	Designation	Alfa Laval No	
Fuchs Lubritech	Gleitmo 900 (Varnish or spray)		
Dow Corning	Molykote D321R (Spray)	535586-01 (375 g)	

Pastes for hygienic applications (NSF registered H1 is preferred):

Manufacturer	Designation	Hygienic Comment	Alfa Laval No	
Bremer & Leguil, Fuchs Lubritech	Geralyn F.L.A.	NSF Registered H1 (2 April 2003) German § 5 Absatz 1 LMBG approved		
	Geralyn 2	NSF Registered H1 (3 sep 2004)	561764-01 (50 g)	
	Gleitmo 805	DVGW (KTW) approval for drinking water (TZW prüfzeugnis)		
Gleitmo 1809		554336-01		
Dow Corning	Molykote TP 42 Molykote D			
	Molykote P1900	NSF Registered H1 (7 Jan 2004)		
Klüber	Klüberpaste 46 MR 401	White; contains no lead, cadmium, nickel, sulphur nor halogens.		
	Klüberpaste UH1 84-201	NSF Registered H1 (26 Aug 2005)		
	Klüberpaste UH1 96-402	NSF Registered H1 (25 Feb 2004)		
Rocol	Foodlube Multi Paste	NSF Registered H1 (13 Apr 2001)		

Silicone grease for rubber rings:

Manufacturer	Designation	Follows according. to Manufacturer	Alfa Laval No
Dow Corning	Molykote 111 (Compound)	Conform to the FDA regulations (21 CFR 178.3570) for occasional food contact. Certified: National Water Council UK and WRC, UK. Certified: food industry as per Chemical Testing Laboratory Dr. Böhm, Munich.	539474-02 (100 g) 539474-03 (25 g)
	Molykote G-5032	NSF Registered H1 (June 3 2005)	569415-01 (50 g)
Bremer & Leguil, Fuchs Lubritech	Chemplex 750	DVGW approved according to the German KTW-recomendations for drinking water.	
	Geralyn SG MD 2	NSF Registered H1 (30 March 2007)	
Klüber	Unisilikon L 250 L	Complies with German Environmental Agency on hygiene requirements for tap water. Certified by DVGW-KTW, WRC, AS4020, ACS.	
	Paraliq GTE 703	NSF Registered H1 (25 Feb 2004) Complies with LMBG and the European standard EN 1672, part2.	
Bel-Ray	No-Tox Silicone valve seal	NSF Registered H1 (19 June 2002)	
MMCC	ALCO 220	NSF Registered H1 (25 March 2002)	
Rocol	Foodlube Hi-Temp	NSF Registered H1 (18 April 2001)	



Greases for ball and roller bearings:**NOTE**


Always follow the specific recommendation for lubrication as advised by the manufacturer.

Manufacturer	Designation	Alfa Laval No
BP	Energrease MP-MG2 Energrease LS2 Energrease LS-EP2	
Castrol	APS 2 Spheerol EPL 2	
Chevron Texaco	Chevron Dura-Lith Grease EP2 Texaco Multifak AFB 2	
Dow Corning	Molykote G-0101 Molykote Multilub	
ExxonMobil	Beacon EP2 Unirex N2 Mobilith SHC 460 Mobilux EP2	
Fuchs Lubritech	Lagermeister EP2	
Q8/Kuwait Petroleum	Rembrandt EP2	
Shell	Alvania EP 2 Albida EP2	
SKF	LGEP 2 LGMT 2	
Total	Multis EP2	

8.10 Other drawings

8.10.1 Foundation drawing

Alfa Laval ref. 557258, rev. 0

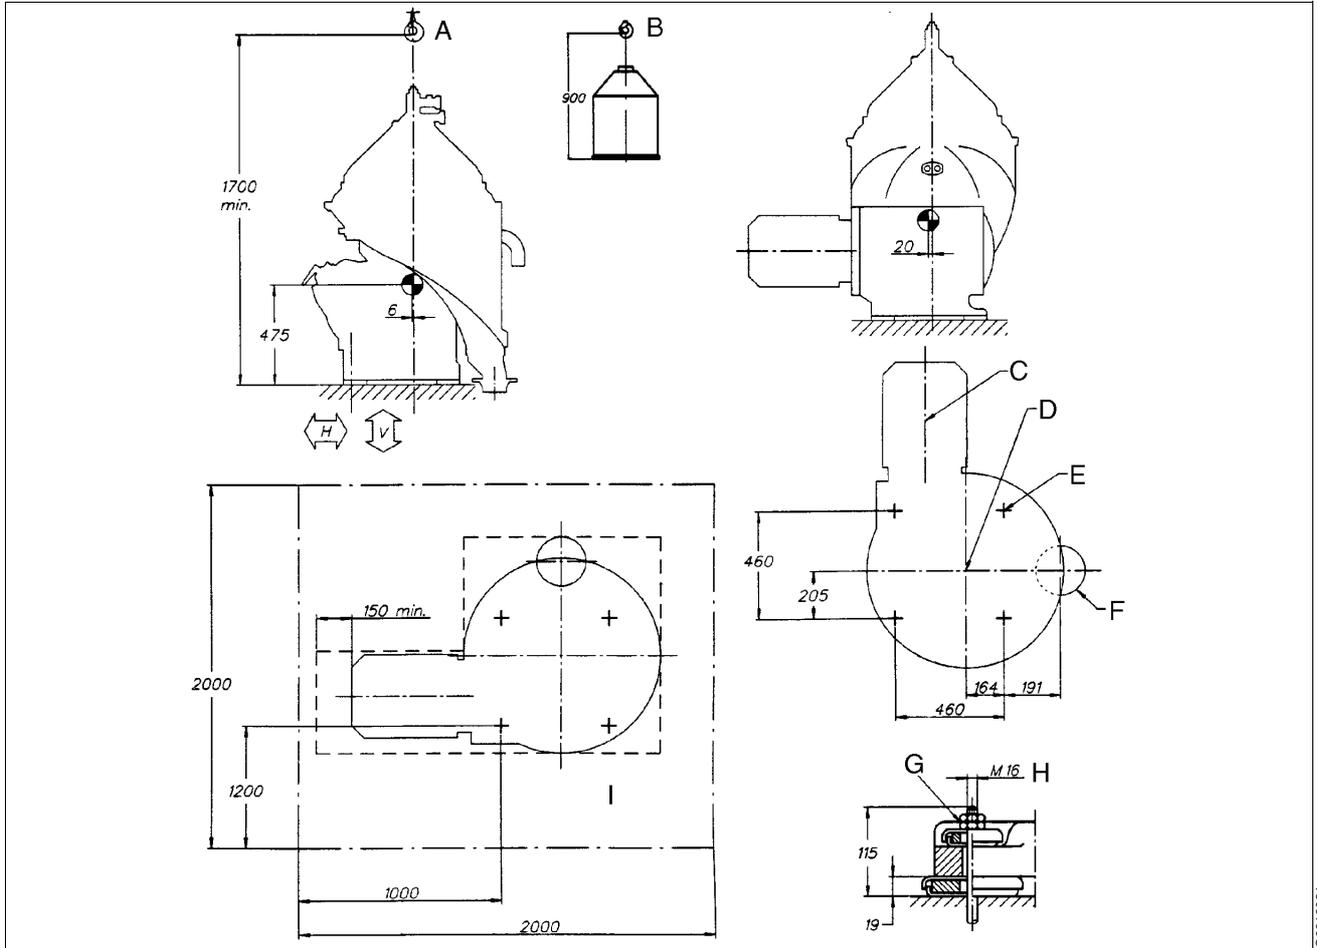


- | | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A. Min. lifting capacity 1000 kg
Recommended speed for lifting:
Low speed 0,5-1,5 m/min.
High speed 2-6 m/min.</p> <p>B. Max. height of largest component incl. lifting tool</p> <p>C. Centre of motor</p> <p>D. Centre of separator bowl</p> <p>E. 4 holes \varnothing 17 for anchorage</p> <p>F. Hole \varnothing 110 for sediment outlet</p> <p>G. Tightening torque 20 Nm.
Locked with lock nut</p> <p>H. Minimum property class 8.8</p> <p>I. Service side</p> | <p>----- Recommended free floor space for unloading when doing service</p> <p>- · - · - Min. access area for overhead hoist. No fixed installations within this area.</p> <p>⊕ Centre of gravity (without motor)</p> <p>⌞ Vertical force not exceeding 20 kN/foot</p> <p>⌞ Horizontal force not exceeding 20 kN/foot</p> <p>Total static load max. 15 kN</p> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

G0818021

8.10.2 Electric motor (land application)

Alfa Laval ref. 539827, rev. 12

Note! This motor is for land application only.

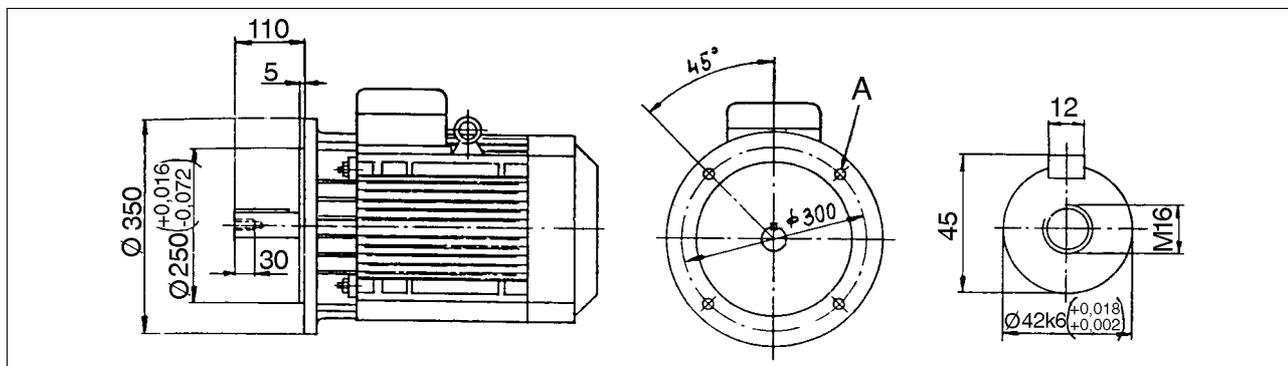

A = Four holes diameter 18 mm

Manufacturer Not fixed
Standards IEC 72-2, 34-1, CENEL/2B
Size 160M
Poles 4
Degree of protection IP44
Method of cooling IC 41 (IEC 34-6)
Specification Totally enclosed fan-cooled three-phase induction motor

Article No.	Output kW	Freq Hz	Voltage V
539827-10	11	60	220D
539827-11	11	60	380D
539827-12	11	60	440D
539827-13 ¹⁾	11	60	575D
539827-15	11	50	400D
539827-17	11	60	460D
539827-18	11	60	220D parallel 440D series

Article No.	Output kW	Freq Hz	Voltage V
539827-20 ¹⁾	11	60	460D
539827-21	11	50	200D
539827-22	11	50	220D
539827-23	11	50	380D
539827-24	11	50	415D
539827-25	11	50	500D
539827-26	11	50	660D
539827-27	11	60	200D


¹⁾ In accordance with the rules of CSA.

NOTE

For complete information about motor variants, please contact your Alfa Laval representative.

8.10.3 Electric motor (marine application)

Alfa Laval ref. 552813 rev. 5

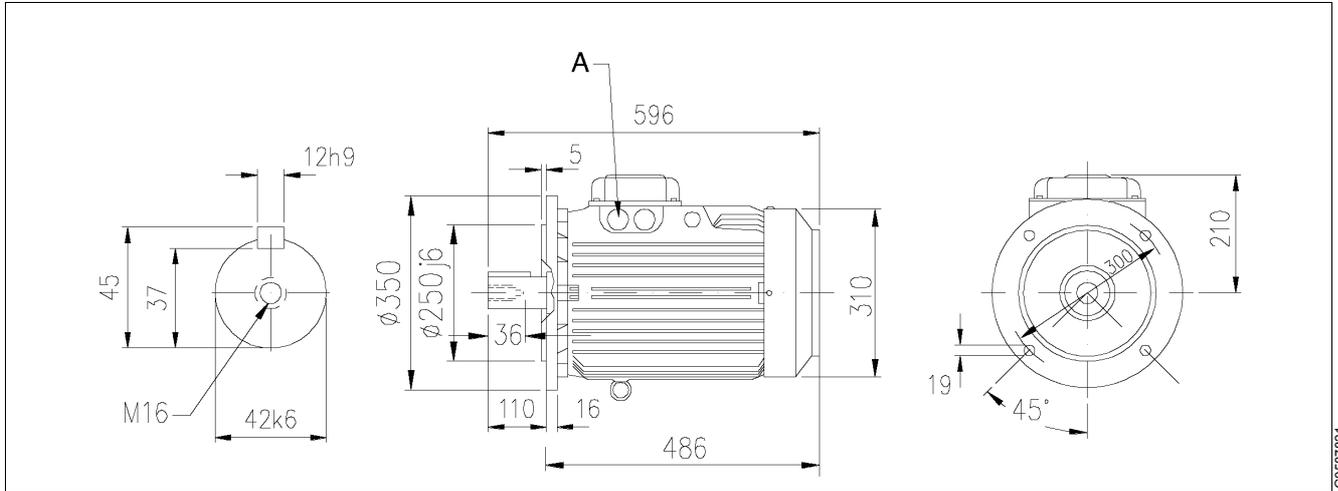

A. 4 x Pg29. Max. cable diameter 29 mm

- Manufacturer** ABB Motors
- Manuf. drawing** 3GZV 1000 007-4
- Standards** IEC 34-series, 72,79 and 85
- Size** 160M
- Type** M2AA 160M-4
- Weight** 62 kg
- Poles** 4
- Insulation class** F
- Bearings** DE 6209-2Z/C3 –
NDE 6209-2Z/C3
- Method of cooling** IC 41 (IEC 34-6)
- Spec.** Totally enclosed three-phase motor for marine service ³⁾

Type of mounting		Degree of protection
	IM 1001	
	IM 3001	IP 55
	IM 3011	IP 55
	IM 3031	IP 55

Article No	Output kW	Speed RPM	Freq Hz	Voltage V	Current A	Pow.fac cos φ	I_{st} / I ¹⁾	Therm ²⁾ °C	Note
552813-01	11,5	1445	50	200 D	44,5	0,85	5,6		
552813-02	11,5	1445	50	220 D	40,5	0,85	5,6		
552813-03	11,5	1445	50	380 D	23,5	0,85	5,6		
552813-04	11,5	1445	50	415 D	21,5	0,85	5,6		
552813-05	11,5	1445	50	440 D	20,5	0,85	5,6		
552813-06	11,5	1445	50	500 D	18,9	0,85	5,6		
552813-07	13	1745	60	220 D 440 D	47 23,5	0,85	5,6		D-ser D-par
552813-08	13	1745	60	230 D 460 D	45 22,5	0,85	5,6		D-ser D-par
552813-09	13	1745	60	575 D	18	0,85	5,6		CSA-plated
552813-10	11,5 13	1445 1745	50 60	380 D 440 D	23,5 23,5	0,85	5,6		
552813-111	11,5	1440	50	690Y 400D	12,9 22,5	0,85	5,6		
552813-12	13	1740	60	460D	22,5	0,85	5,6		
552813-13	13	1740	60	460D	21,5	0,85	5,6		

1) I_{st} / I = starting current / rated current at direct on line starting.

2) Thermistors tripping temperature if applicable

3) The motors can be designed to fulfill requirements of following Classification Societies:

Lloyds Register of shipping (LRS) (Essential Service)
 Det Norske Veritas (DnV) (Essential Service)
 Germanischer Lloyd (GL) (Essential Service)
 Bureau Veritas (BV) (Essential Service)
 American Bureau of shipping (ABS) (Essential Service)
 Registro Italiano Navale (RINA) (Essential Service)
 USSR Register of Shipping (RSU) (Essential Service)
 Japanese Classification Society (NKK) (Essential Service)

Required classification society must always be specified when ordering. Factory test certificate to be enclosed at the delivery.

Rated output (kW) valid for temp-rise max. 90 °C.


NOTE

For complete information about motor variants, please contact your Alfa Laval representative.

8.10.4 Electric motor (Brazil)

Alfa Laval ref. 552943, rev. 0

Note! This motor is for local use in Brazil only

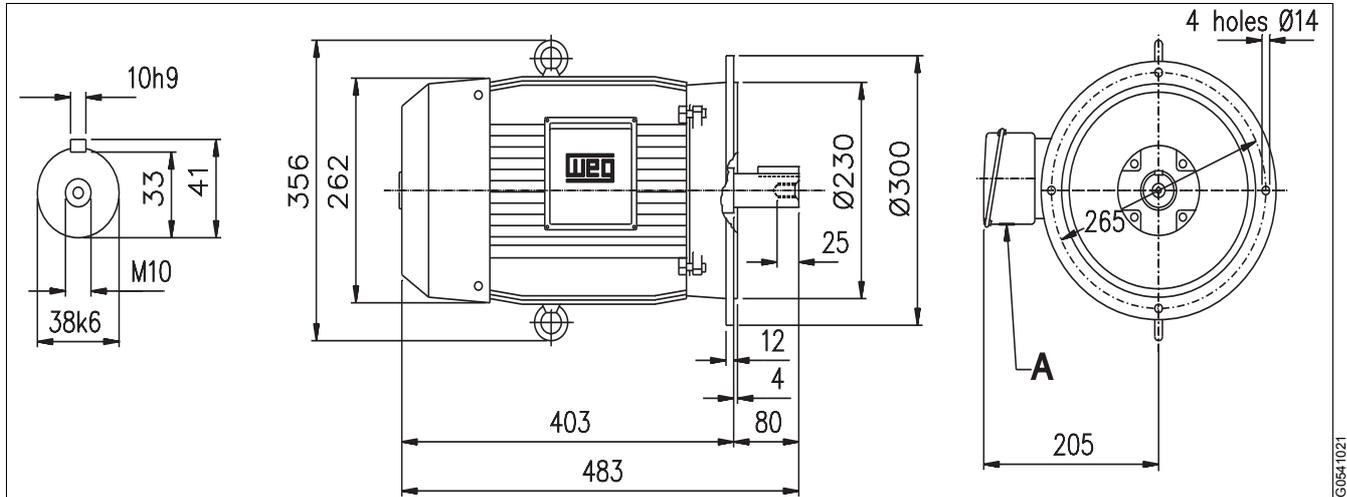

Manufacturer	WEG, Brazil	Poles	4
Manuf. drawing	003.10/03 1990	Insulation class	3
Standards	IEC 34-1, IEC 72	Bearings	DE 6308-Z – NDE 6207-Z
Size	IEC 132 M	Method of cooling	IC 41 (IEC 34-6)
Type	WEG132 M	Spec.	Totally enclosed fan cooled induction motor
Weight	68 kg		



Article No.	Output kW	Speed RPM	Freq Hz	Voltage V	Current A	Pow. fa c cos φ	I_{st} / I ¹⁾	Therm ²⁾ °C	Note
552943-01	11	1750	60	380 D	23	0,86	8,2		

1) I_{st} / I = starting current /rated current at direct on line starting.
 2) Thermistors tripping temp.

Type of mounting		Degree of protection
	IM 1001	IP 54
	IM 3001	
	IM 3011	
	IM 3031	

8.10.5 Machine plates and safety labels

Alfa Laval ref. 554651, rev. 0

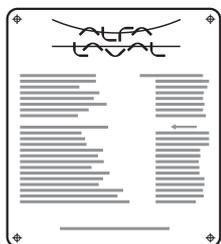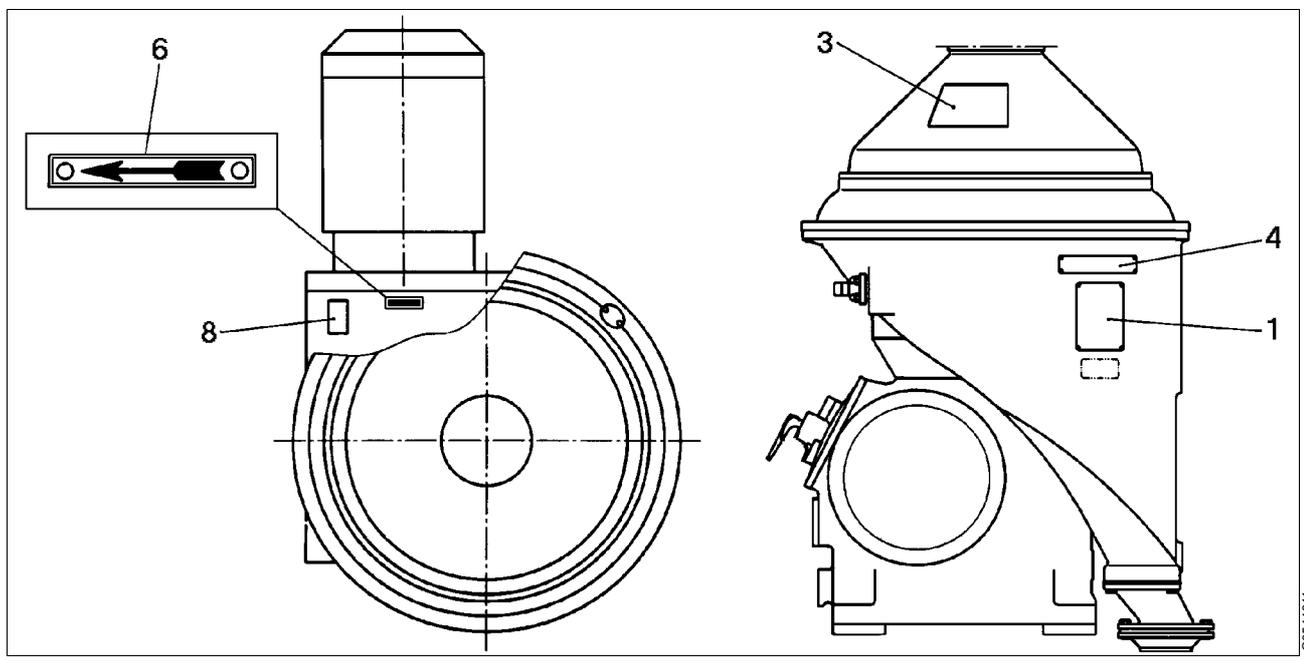

S0061411

1. Machine plate

- Separator
- Manufacturing serial No./ Year
- Product No.
- Machine top part
- Bowl
- Machine bottom part
- Max. speed (bowl)
- Direction of rotation (bowl)
- Speed motor shaft
- El. current frequency
- Recommended motor power
- Max. density of feed
- Max. density of sediment
- Max. density of operating liquid
- Process temperature min./max.

MOPX 310TGT-24
 XXXX
 881077-03-03

G0544311

3.Safety label

Text on label:

WARNING

Read the instruction manuals **before** installation, operation and maintenance. Consider inspection intervals.

Failure to strictly follow instructions can lead to fatal injury.

If excessive vibration occurs, **stop** separator and **keep bowl filled** with liquid during rundown.


Out of balance vibration will become worse if bowl is not full.

Separator must **stop rotating** before **any** dismantling work is started.



S00690NT


4. Name plate

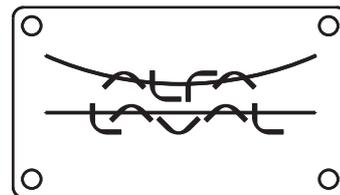

S0063211


6. Arrow

 Indicating direction of rotation of horizontal driving device.



S006882

8. Power supply frequency

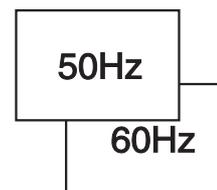


S0063111

8.10.6 Vibration sensor (option)

Alfa Laval ref. 557311 rev. 1

Type:	Mechanical velocity
Switch rating, voltage:	Max. 460 V AC
Reset coil:	24 V DC, 48 V DC, 117 V AC 60 Hz
Vibration measurement range:	0 to 4,5 g from 0 to 300 Hz
Switch rating, resistive load, max.:	5 A 12 V DC 2 A 24 V DC 1 A 48 V DC 0,5 A 120 V DC 7 A 460 V AC, 50/60 Hz

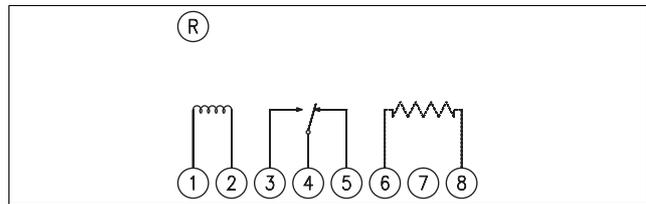

Interconnection diagram

- 1-2 Reset coil
- 3 No
- 4 Common
- 5 NC
- 6-8 Heater

R Reset button

For other technical information see chapter “8.7 Interface description” on page 199.

8.10.7 Cover interlocking switch (option)


Alfa Laval ref. 557311 rev. 1

Switch rating

	AC (VA)	DC (W)
12 V	75	7
24 V	200	7
48 V	280	9
127 V	500	13
230 V	550	–

For other technical information see chapter “8.7 Interface description” on page 199.

- BK Black
- BN Brown
- BU Blue
- GN-YW Green-Yellow

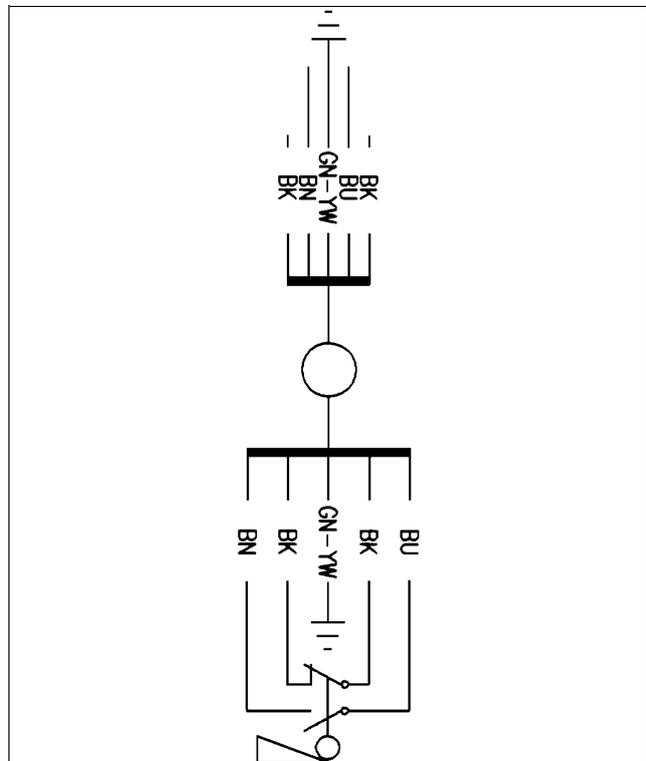

Interconnection diagram

8.11 Storage and installation

8.11.1 Introduction

Most of the installation instructions are *Specifications*, which are compulsory requirements. These specifications are sometimes completed with non-compulsory *Recommendations*, which could improve the installation quality.

Additional installation information, such as drawings, connection lists and interface description, can be found previous in this chapter.

8.11.2 Storage and transport of goods

Storage

Specification


Upon arrival to the store, **check all components and keep them:**

1. Well stored and protected from mechanical damage.
2. Dry and protected from rain and humidity.
3. Organized in the store in such a way that the goods will be easily accessible when installation is about to take place.

A separator can be delivered with different types of protection:

- Fixed on a pallet.


The separator must be stored in a storage room well protected from mechanical damage and theft and also dry and protected from rain and humidity.

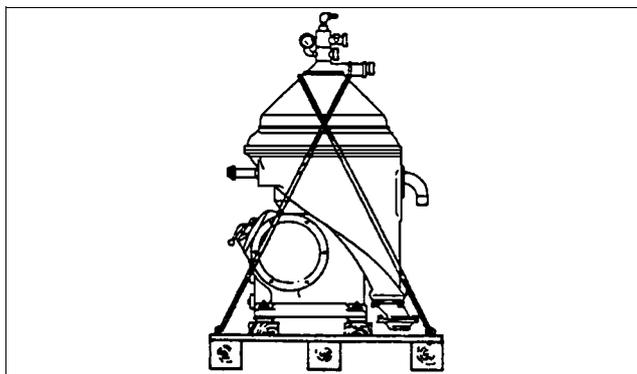

Fixed on a pallet

- In a wooden box which is not water tight.

The separator must be stored dry and protected from rain and humidity.

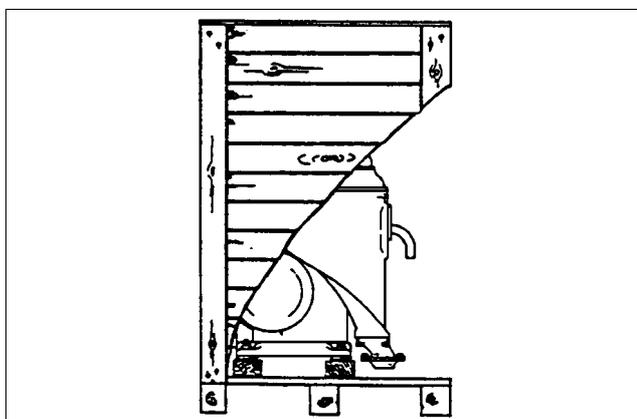


In a wooden box which is not water tight

- In a special water-resistant box for outdoor storage.

The separator and its parts have been treated with an anti-corrosion agent. Once the box has been opened, store dry and protected from rain and humidity.

The packaging for outdoor storage is only to special order.

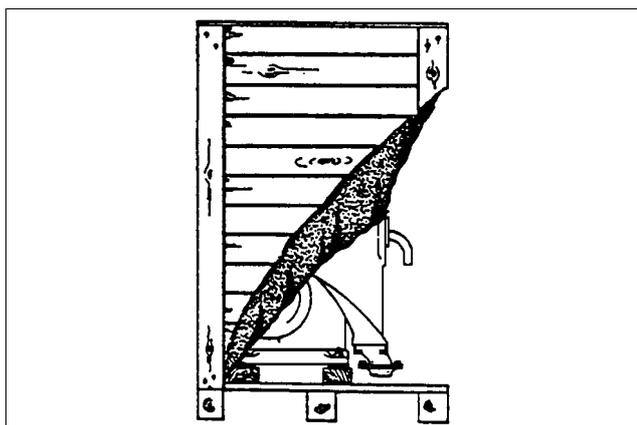


In a special water-resistant box for outdoor storage

Transport

Specification

- During transport of the separator, the frame hood and bowl **must always be removed from the machine.**
- When lifting a separator it must always be **hung securely.** See chapter “[5.5 Lifting instructions](#)” on page 92.

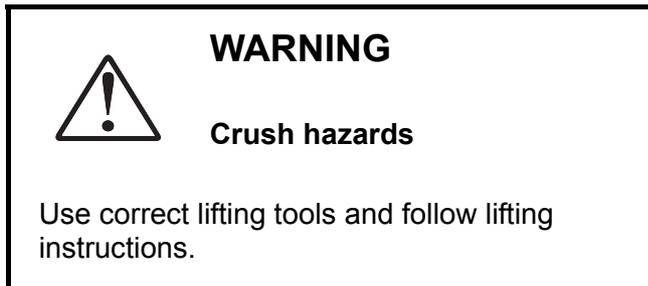

- During erection, all inlets and outlets to separators and accessories must be covered to be protected from dirt and dust.

8.11.3 Planning of installation

Introduction

The space required for one or more separators can be calculated by consulting the drawings in the chapters “[8.3 Basic size drawing, without pump](#)” on page 191, “[8.5 Basic size drawing, with pump](#)” on page 195, “[8.10.1 Foundation drawing](#)” on page 215 and instructions for ancillary equipment, electrical and electronic equipment and cables.




Check the drawings when planning the installation

Important measurements

Important measurements are the minimum lifting height for lifting tackle, shortest distance between driving motor and wall, free passage for dismantling and assembly, maintenance and operation.

Plan your installation with sufficient room for the controls and operation so that instruments are easily visible. Valves and controls must be within convenient reach. Pay attention to space requirements for maintenance work, work benches, dismantled machine parts or for a service trolley.

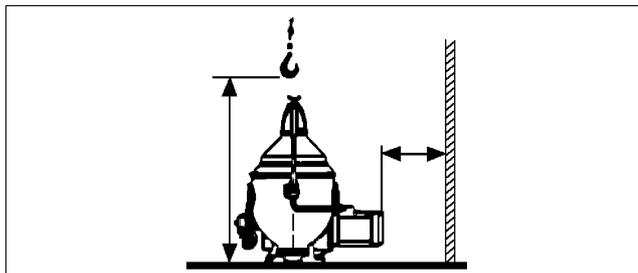

Suitable space must be obtained for the maintenance work

Space for separator

The separator shall be placed in such a way that suitable space for maintenance and repair is obtained.

Specification

- See chapter [“8.10.1 Foundation drawing”](#) on [page 215](#) for the service space required with the separator installed.

Recommendation

- The spanner for the large lock ring should have sufficient space to make a complete turn without touching any of the ancillary equipment surrounding the separator.

Lifting height for transport of bowl

Specification

- A minimum height is required to lift the bowl, bowl parts and the bowl spindle, see chapter [“8.10.1 Foundation drawing”](#) on [page 215](#).

Recommendation

- When two or more separators are installed, the lifting height may have to be increased to enable parts from one separator to be lifted and moved over an adjoining assembled separator.


Space for oil changing

Specification

The plug for gearbox oil draining must not be blocked by floor plate arrangement, etc.

Recommendation

- It should be possible to place a portable collecting tray under the gearbox drain plug for changing oil.

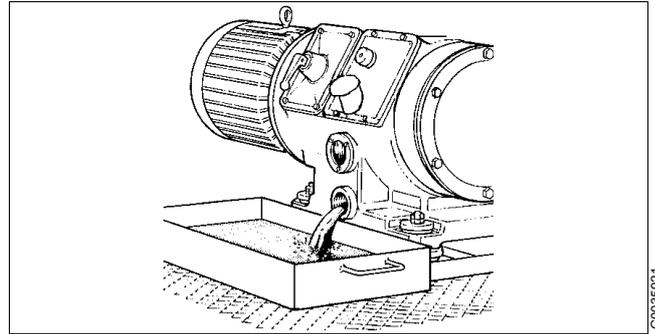

Place the separator in such a way that makes the oil change easy


8.11.4 Foundations

NOTE

When lifting a separator it must always be **hung securely**. See chapter [“5.5 Lifting instructions”](#) on page 92.


Specification

- The separator should be installed at floor level, see chapter [“8.10.1 Foundation drawing”](#) on page 215.
- When a separator is installed on a ship, the separator should be installed in such a way that the centre line of the electric motor is parallel with the centre line of the ship. The electric motor should preferably be pointing aft.
- The separator must be installed on a strong and rigid foundation to reduce the influence of vibrations from adjacent machinery.
- The foundation should be provided with a cofferdam.

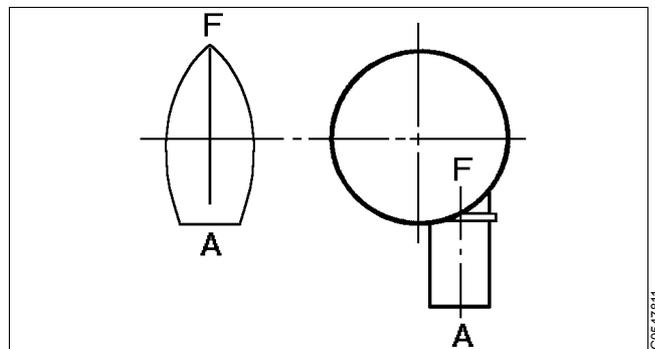

F = Forward
A = Aft

- Fit the separator frame on the foundation as follows:
 - Place the separator frame without cushions in position.
 - Check that the bolts do not press against the edges of the holes, otherwise the elasticity of the mounting of the separator frame will be impeded.
 - Fit height adjusting washers required.
 - Check that the separator frame is horizontal and that all feet rest on the foundation.
 - Lift the separator frame, fit the vibration dampers (1, 2), lower and check that the bolts do not press against the edges of the holes.
 - Tighten nut (3) with **20 Nm**. Hold firmly and secure with the lock nut (4). Repeat for the other frame feet.

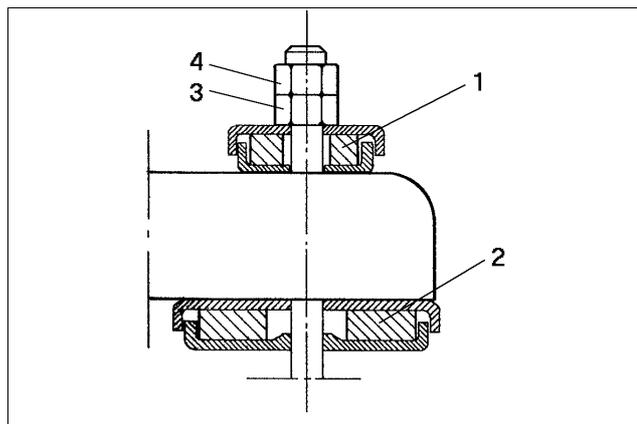

1. *Vibration damper, upper*
2. *Vibration damper, lower*
3. *Nut*
4. *Lock nut*

Reader's Comment Form

Dear reader,

It is our ambition to produce as useful and instructive manuals as possible. Should you have any comments (positive or negative) regarding this manual, please note them down and send them to us. You can do this by copying this page and sending it by fax, or you could mail it, or hand it over to your local Alfa Laval representative.

Alfa Laval Tumba AB, Separator Manuals, dept. PPDM, SE-147 80 Tumba, Sweden.
Fax: +46 8 530 310 40.

Your name:

Company:

Address:

City:

Country:

Product: MOPX 310TGT-24

Book No.: 1270900-02 Rev. 2

Date:

	Yes	No
Is it easy to find what you are looking for by using the table of contents?	<input type="checkbox"/>	<input type="checkbox"/>
Are the chapter and section headings clear and adequate?	<input type="checkbox"/>	<input type="checkbox"/>
Is the information presented in the correct order for your purposes?	<input type="checkbox"/>	<input type="checkbox"/>
Does the information in the manual cover your needs?	<input type="checkbox"/>	<input type="checkbox"/>
Is it easy to understand the instructions in the manual?	<input type="checkbox"/>	<input type="checkbox"/>
Is the terminology sufficiently explained?	<input type="checkbox"/>	<input type="checkbox"/>
Are the illustrations easy to understand?	<input type="checkbox"/>	<input type="checkbox"/>

Your comments:

Order Form

If you wish to order extra copies of this manual, please copy this page and give it to your local Alfa Laval representative, who will advise you of current prices.

Your local Alfa Laval representative will also be able to help you with information regarding any other manuals.

Your name:

Company:

Address:

City:

Country:

Product: MOPX 310TGT-24

Book No.: 1270900-02 Rev. 2

Quantity:

Date:

Comments:

Index

A

Assembly	
Bowl body and operating mechanism	131
Bowl hood and disc stack	121
Feed pump	166
General directions	108
Horizontal driving device	159
Inlet/outlet, frame hood	112
Operating water device	138
Tools (special)	109
Vertical driving device	147

B

Bearings	
Maintenance directions	103
Replacement on bowl spindle	140
Replacement on horizontal driving device	152
Bowl	
Assembly	121, 131
Dismantling	115, 128
Bowl discs	
Cleaning	95
Disc stack pressure	63
Bowl spindle	
Assembly	147
Dismantling	142
Brake	
Design and function	20
Renewing of friction pad	78
Broken water seal	184

C

Centrifugal separation	18
Check points	
Ball and roller bearings	103
Before shutdowns	106
Bowl hood seal ring	58
Bowl spindle - height position	76
Bowl spindle - radial wobble	77
Bowl spindle cone and bowl body nave	76
Brake	78
Buffer springs and ball bearing housing	79
Cleaning agents	93
Cleaning of bowl discs	95
Corrosion	59
Coupling friction pads	81
Cover interlocking switch	74

Cracks	62
Disc stack pressure	83
Erosion	65
External cleaning	93
Flexible plate in coupling	84
Guide surfaces	67, 85
Inlet pipe and oil paring disc	69
Level ring	69
Lifting instructions	92
Lock ring - priming	86
Lock ring - wear and damage	88
Oil change procedure	100
Oil paring disc - height position	88
Operating mechanism	72
Operating paring disc - height position	89
Operating slide	72
Repair of galling	68
Sliding bowl bottom	73
Springs for operating mechanism	74
Vibration analysis	101
Vibration switch - adjustment of set point	102
Vibration switch - function check	75
Worm - wear of groove	90
Worm wheel and worm - wear of teeth	97
Worm wheel shaft - radial wobble	91
Clarification	
Oil discharges through water outlet	185
Start procedure	42
Unsatisfactory separation result	185
Clarifier	
Definition	33
Description	27
Clarifier bowl	
Characteristic parts	29
Cleaning	
Bowl discs	95
CIP-system	96
Cleaning agents	93
Cleaning of bowl discs	95
External cleaning	93
Connection list	193, 197
Connections	
Description	199
Dimensions	192, 196
Corrosion	59
Coupling	
Function	21
Renewing of friction pads	81
Cover interlocking switch (option)	
Design and function	22

Drawing	222
Cracks	62

D

Daily checks	51
Density of feed	189
Disc	63
Disc stack pressure	63
Dismantling	
Bowl body and operating mechanism	128
Bowl hood and disc stack	115
Feed pump	166
General directions	108
Horizontal driving device	154
Inlet/outlet, frame hood	111
Operating water device	137
Tools	109
Vertical driving device	142
Drawings	
Basic size drawing	215
Cover interlocking switch (option)	222
Dimensions of connections	192, 196
Electric motor	216, 217, 219
Foundations	215
Machine plates and safety labels	220
Vibration sensor (option)	222

E

Electric motor	
Drawings	216, 217, 219
Emergency stop. See Safety stop	
Erosion	65
Exploded views	
Bowl body and operating mechanism	127
Bowl hood and disc stack	114
Feed pump	166
Horizontal driving device	152
Inlet/outlet, frame hood	110
Operating water device	136
Vertical driving device	140

F

Feed pump	166
Foundations	
Drawing	215
Installation	227
Frame feet	
Installation	227
Replacement	57
Friction coupling	
Function	21

G

Gear	
Number of teeth	189
Wear of teeth	97
Gravity disc	
Selection	37
Guide surfaces	
Intermediate Service	67
Major Service	85
Repair of galling	68

H

Horizontal driving device	
Assembly	159
Dismantling	154

I

Installation	
Check points	36
Planning of installation	225
Interface	
Definition	33
Description	31
Interface description	199
Intermediate service	47, 52

L

Lifting instructions	92
Liquid flows through bowl casing drain	180
Lock ring	
Priming	86
Wear and damage	70
Lubricants	
Before first start	36
Lubrication chart, general, oil groups	204
Oil change interval	205
Oil change procedure	100
Oil level	100
Recommended lubricating oils	205
Recommended oil brands	206
Recommended pastes and bonded coatings	211
Volume of lubricating oil	189, 190
Lubricating oil volume	189

M

Machine plates and safety labels	220
Main parts	20
Maintenance intervals	48
Maintenance logs	
3-year Service (3S)	57
Daily checks	51
Intermediate Service (IS)	52
Major Service (MS)	54

Oil change	51
Maintenance, general information	
Ball and roller bearings	103
Before shutdowns	106
Cleaning	93
Lifting instructions	92
Maintenance intervals	47
Maintenance procedure	49
Oil change procedure	100
Service kits	50
Vibration analysis	101
Major service	47, 54
Materials	189
Metal surfaces	
Cleaning and cleaning agents	93
Corrosion	59
Cracks	62
Erosion	65
Motor	
Cleaning	93
Coupling	84
Drawing	216, 217, 219
Power consumption	189

N

Noise	189
Nomogram	38

O

Oil. See Lubricants	
Operation	36
Outgoing water contains oil	183

P

Power consumption	189
Power transmission	21
Process capacity	189
Pump	
Assembly	171
Axial play	172
Checkpoints	166
Dismantling	166
Function	22
Purification	
Broken water seal	184
Definition	33
Outgoing water contains oil	183
Start procedure	42
Unsatisfactory separation result	183
Purifier bowl	
Gravity disc	27

R

Ready for start	40
Retardation time too long	179
Revolution counter	
Function	23
Number of revolutions	189
Running-up procedure	42

S

Safety Instructions	9
Safety stop	44
Separation	
Basic principles	18
Clarification	29
Process main parts	24
Purification	27
Separating function trouble tracing	180
Separation temperatures	19
Separator	
Basic size drawing	191, 195
Brake	21
Connection list	193, 197
Foundations	215
Installation planning	225
Interface description	199
Lifting instructions	92
Main parts	24
Mechanical power transmission	21
Normal stop	43
Overview	20
Ready for start	40
Running	42
Safety stop	44
Sensors and indicators	22
Separating function	27
Sludge discharge cycle	31
Start	41
Storage and transportation	223
Technical data	189
Service instructions. See Check points	
Service kits	50
Shutdown	106
Smell	177
Spare parts	50
Speed too low	177
Start	
Check points	41
Clarification start procedure	42
Purification start procedure	42

Starting power too high	178
Starting power too low	178
Starting time	189
Starting time too long	178
Stopping procedure	43
Stopping time	189
Storage	223

T

Technical data	189
Throughput	
Capacity	189
Definition	33
Transport	223
Trouble tracing - mechanical functions	
Noise	177
Retardation time too long	179
Separator vibrates	176
Smell	177
Speed too low	177
Starting power too high	178
Starting power too low	178
Starting time too long	178
Water in worm gear housing	179
Trouble tracing - purification faults	
Broken water seal	184
Outgoing water contains oil	183
Unsatisfactory separation result	183
Trouble tracing - separating functions	
Bowl fails to open	181
Bowl opens accidentally	181
Unsatisfactory separation result	183
Trouble tracing - vibration switch	
Impossible to adjust setpoint to obtain tripping	186
Vibration switch does not reset	186

V

Vertical driving device	
Assembly	147
Dismantling	142
Vibration	
During start	41
Safety stop	44
Trouble tracing	176
Vibration analysis	101
Vibration level	189
Vibration switch (option)	
Adjustment of setpoint	102
Description and signal processing	200
Drawing	222
Function check	75
Trouble tracing	186

W

Warning signs	14
Water	
Water quality specifications	203
Water in worm gear housing	179
Weight	189
Worm gear	
Function and description	21
Number of teeth	189
Wear of teeth	97